


Whirlpool CGDX463RT1 01 - TOP AND CONSOLE PARTS

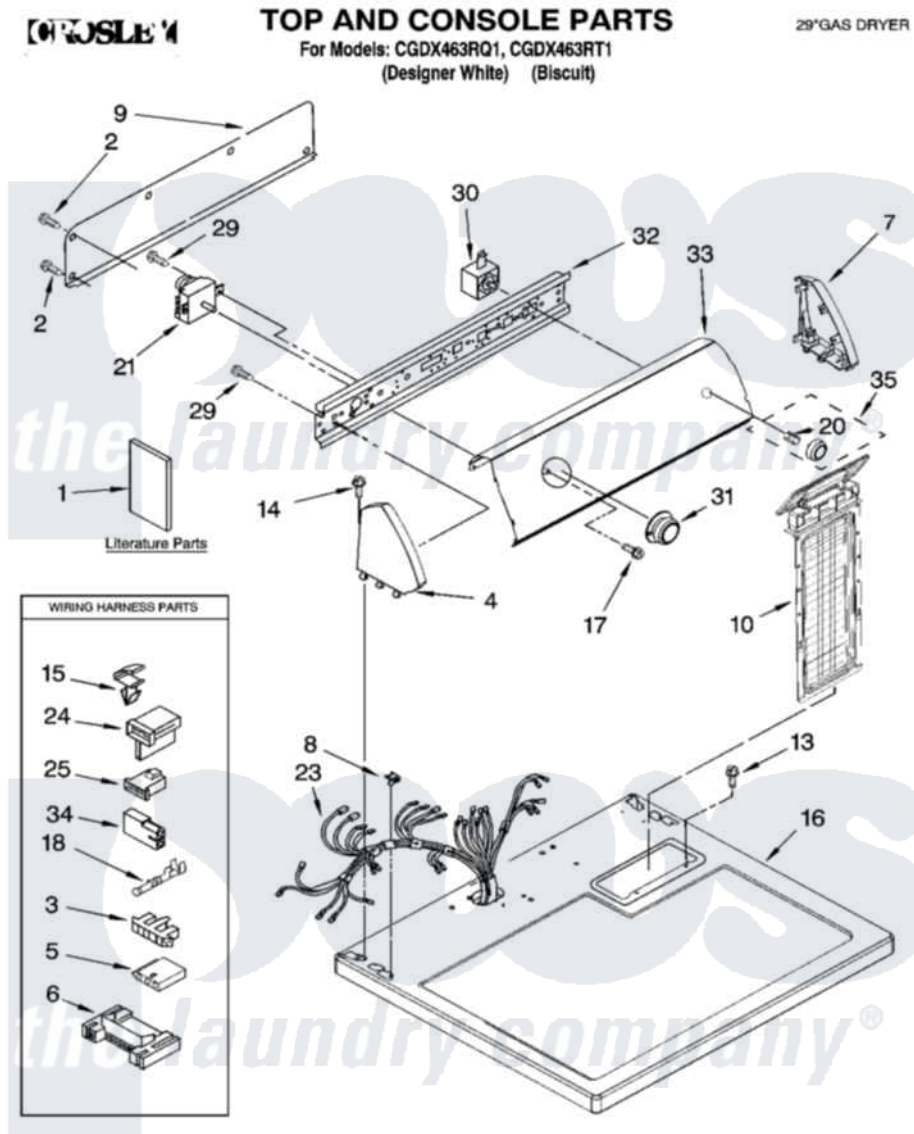

2-06 Litho in U.S.A. (LT)

1

Part No. 8180960 Rev.A.

Whirlpool [Residential Whirlpool CGDX463RT1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578543		Not Available	Guide, Use & Care
"	8577364		Not Available	Sheet, Cycle Feature
"	8562584		Not Available	Instructions, Installation
"	8528187			Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3397269			Connector, Timer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	3395683			Receptacle, Multi-Terminal
7	8271359	279962		Endcap
"	8271362	279965		Endcap

8	357213		Nut, Push-In
9	8274261		Do-It-Yourself Repair Manuals
10	8558467		Screen, Lint
"	8558468	Not Available	Screen, Lint (Biscuit)
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3394427		Clip-Harness
16	8557930	8563985	Top
"	8557931	8563986	Top
17	8533951	3400859	Screw, Grounding
18	94614		Terminal
20	8536939		Clip, Knob
21	8299764		Timer Assembly, 60 Hz
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	3977456		Switch, Push-To-Start
31	3957383		Timer Knob Assembly
"	8538954		Timer Knob Assembly
32	8271418		Bracket, Control
33	8577341		Panel, Control
"	8577344		Panel, Control
34	717252		Receptacle, Terminal
35	8557462		Knob, Push-To-Start
"	8538960		Knob, Push-To-Start

the laundry company[®]

the laundry company[®]