


# Whirlpool CGDX631VQ1 01 - TOP AND CONSOLE PARTS

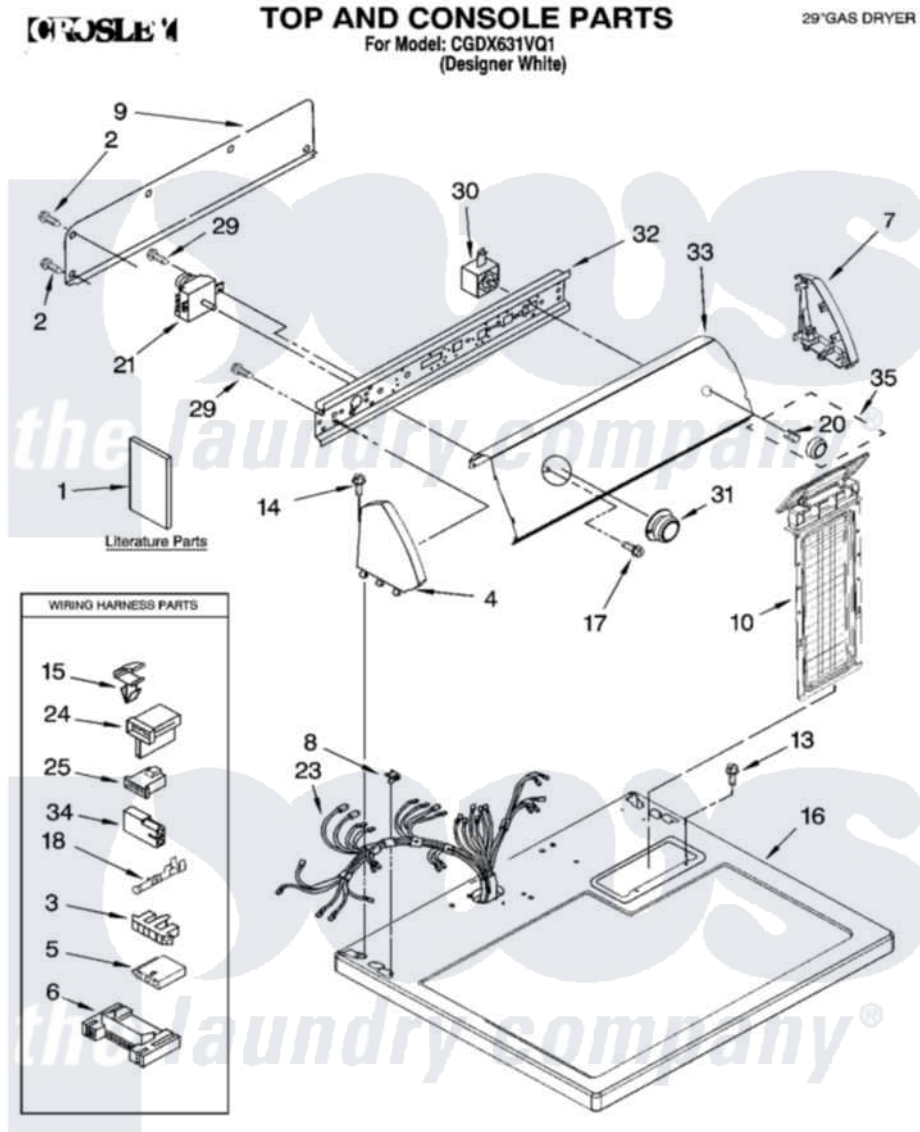

1-09 Litho in U.S.A. (MP)(bay)

1

Part No. W10250359 Rev. A

Whirlpool Residential Whirlpool CGDX631VQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10223591		Not Available	Guide, Use & Care
"	W10112315		Not Available	Sheet, Cycle Feature
"	8562584		Not Available	Instructions, Installation
"	<a href="#">W10185979</a>			Wiring Diagram Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
2	<a href="#">693995</a>			Screw, Hex Head
3	<a href="#">3397269</a>			Connector, Timer
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	<a href="#">3395683</a>			Receptacle, Multi-Terminal
7	8271359	<a href="#">279962</a>		Endcap
8	<a href="#">357213</a>			Nut, Push-In
9	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
10	<a href="#">8558467</a>			Screen, Lint
13	688082	<a href="#">487240</a>		Screw, For Mtg. Service

13	<a href="#">000903</a>	<a href="#">407440</a>	Capacitor
14	<a href="#">388326</a>		Screw, 8-18 X 1.25
15	<a href="#">3394427</a>		Clip-Harness
16	8557930	<a href="#">8563985</a>	Top
17	8533951	<a href="#">3400859</a>	Screw, Grounding
18	<a href="#">94614</a>		Terminal
20	<a href="#">8536939</a>		Clip, Knob
21	<a href="#">W10185971</a>		Timer Assembly, 60 Hz
23	<a href="#">W10186074</a>		Harness, Wiring
24	<a href="#">3403499</a>		Connector, 2-Postion
25	<a href="#">3403498</a>		Connector, 3-Position
29	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
30	<a href="#">3977456</a>		Switch, Push-To-Start
31	<a href="#">3957383</a>		Timer Knob Assembly
32	<a href="#">8271418</a>		Bracket, Control
33	<a href="#">W10218309</a>		Panel, Control
34	<a href="#">717252</a>		Receptacle, Terminal
35	<a href="#">8557462</a>		Knob, Push-To-Start

