


# Whirlpool CGDX631VQ1 02 - CABINET PARTS

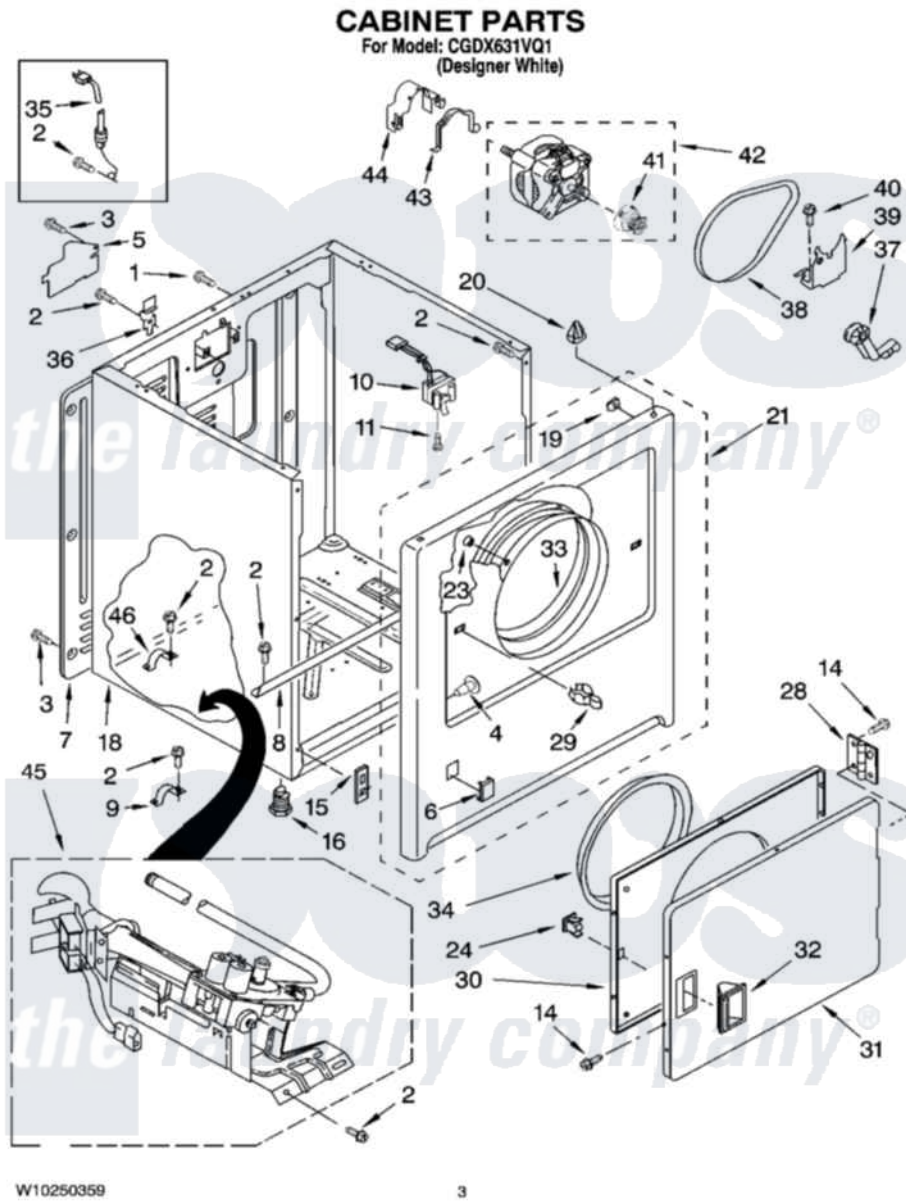

Whirlpool [Residential Whirlpool CGDX631VQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
2	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
3	<a href="#">693995</a>			Screw, Hex Head
4	<a href="#">3404413</a>			Plug, Hinge Hole
5	<a href="#">3396795</a>			Cover, Terminal Block
6	<a href="#">3394975</a>			Plug, Front Panel
7	3396807	<a href="#">280040</a>		Panel-Rear
8	<a href="#">8541400</a>			Bracket, Cabinet
9	<a href="#">3980175</a>			Clamp, Elbow
10	3406104	<a href="#">3406105</a>		Door Switch Assembly
11	697773	<a href="#">3395530</a>		Screw
14	342055	<a href="#">488627</a>		Screw
15	<a href="#">3394083</a>			Clip, Front Panel
16	3392100	<a href="#">49621</a>		Feet-Leveling
18	8530603	<a href="#">8533643</a>		Cabinet
19	<a href="#">98234</a>			Clip, U-Bend

20	690363	<a href="#">18776</a>	Lock, Front Top
21	3403574	<a href="#">279846</a>	Panel
23	685203	<a href="#">279220</a>	Clip
24	690081	<a href="#">279570</a>	Latch
28	3405514	<a href="#">W10362431</a>	Hinge And Pin Assembly
29	696144	<a href="#">279570</a>	Latch
30	<a href="#">3403371</a>		Door, Inner
31	<a href="#">3403361</a>		Door Front
32	<a href="#">3405184</a>		Handle, Door
33	8066124	<a href="#">279264</a>	Air Channel Box
34	<a href="#">3405245</a>		5/16-18 X 3/4
35	344020	<a href="#">3401402</a>	Cord, Power
36	<a href="#">8066217</a>		Hinge, Top
37	<a href="#">691366</a>		Idler And Pulley Assembly
38	8066065	<a href="#">341241</a>	Belt
39	<a href="#">348780</a>		Base, Motor
40	<a href="#">3400500</a>		Bolt, 3405245 5/16-18 X 3/4
41	<a href="#">8066184</a>		Pulley, Motor
42	W10194250	<a href="#">279827</a>	Motor-Drve
43	<a href="#">W10121316</a>		Plug, Multivent
44	<a href="#">3404162</a>		Clamp, Motor
45	8318272	<a href="#">W10465748</a>	Burner-Gas
46	<a href="#">341029</a>		Clamp, Pipe Door Spring

