


Whirlpool EED4400SQ0 02 - TOP AND CONSOLE PARTS

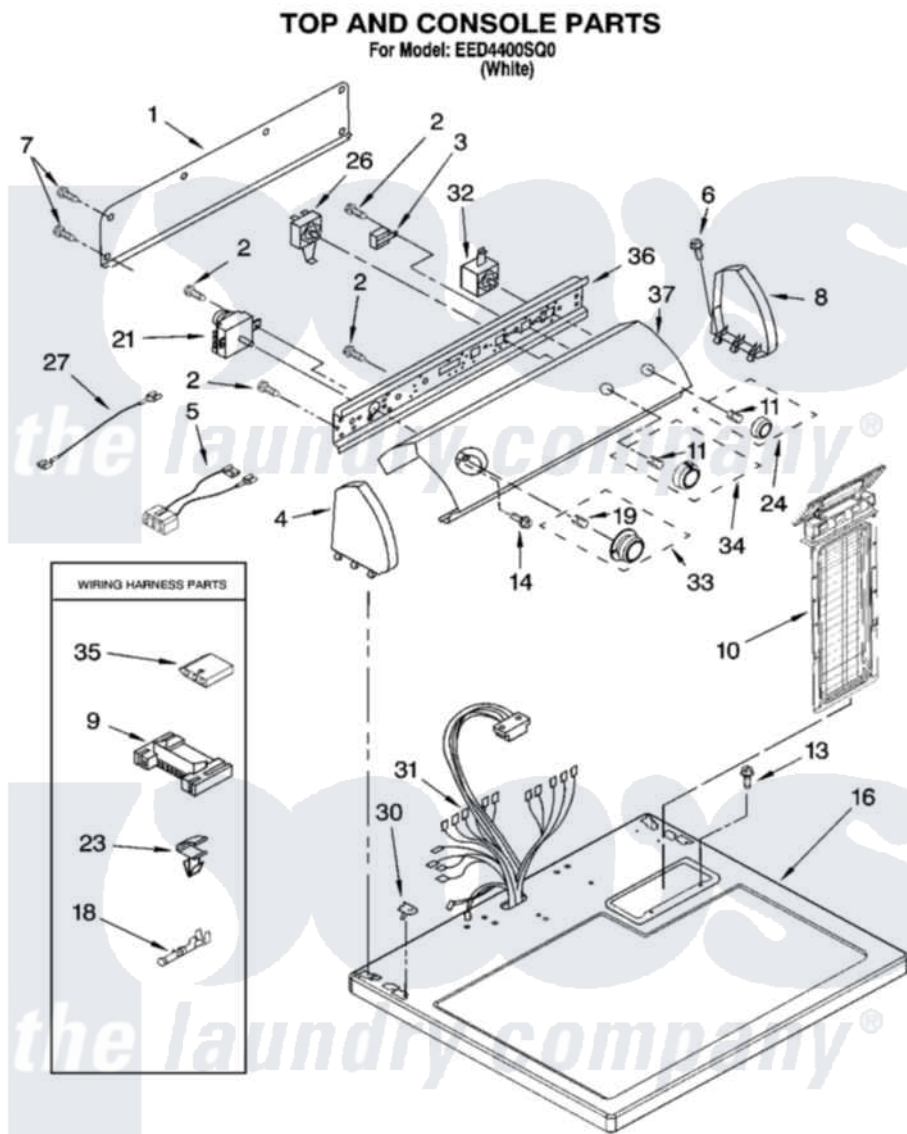

8181356

3

Whirlpool [Residential Whirlpool EED4400SQ0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	694419			Mini-Buzzer
4	8274437	279960		Endcap
5	8283292	8283276		Wire, Jumper
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8274434	279960		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8558463			HANdle And Lint Screen Assembly
11	8536939			Clip, Knob
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
16	8557930	8563985		Top

18	94614		Terminal
19	688805		Clip, Spring Knob
21	8299778		Timer, 60 Hz
23	3394427		Clip-Harness
24	8538959		Knob, Push-To-Start
26	3405152		Switch, Wrinkle Shield
27	3401674		Wire, Jumper
30	357213		Nut, Push-In
31	8299867	W10450292	Harness, Wiring
32	3977456		Switch, Push-To-Start
33	8538953		Timer Knob Assembly
34	8538957		Knob, Control
35	3936144		Do-It-Yourself Repair Manuals
36	8271418		Bracket, Control
37	8578964		Panel, Control

