


Whirlpool EED4400WQ0 01 - TOP AND CONSOLE PARTS

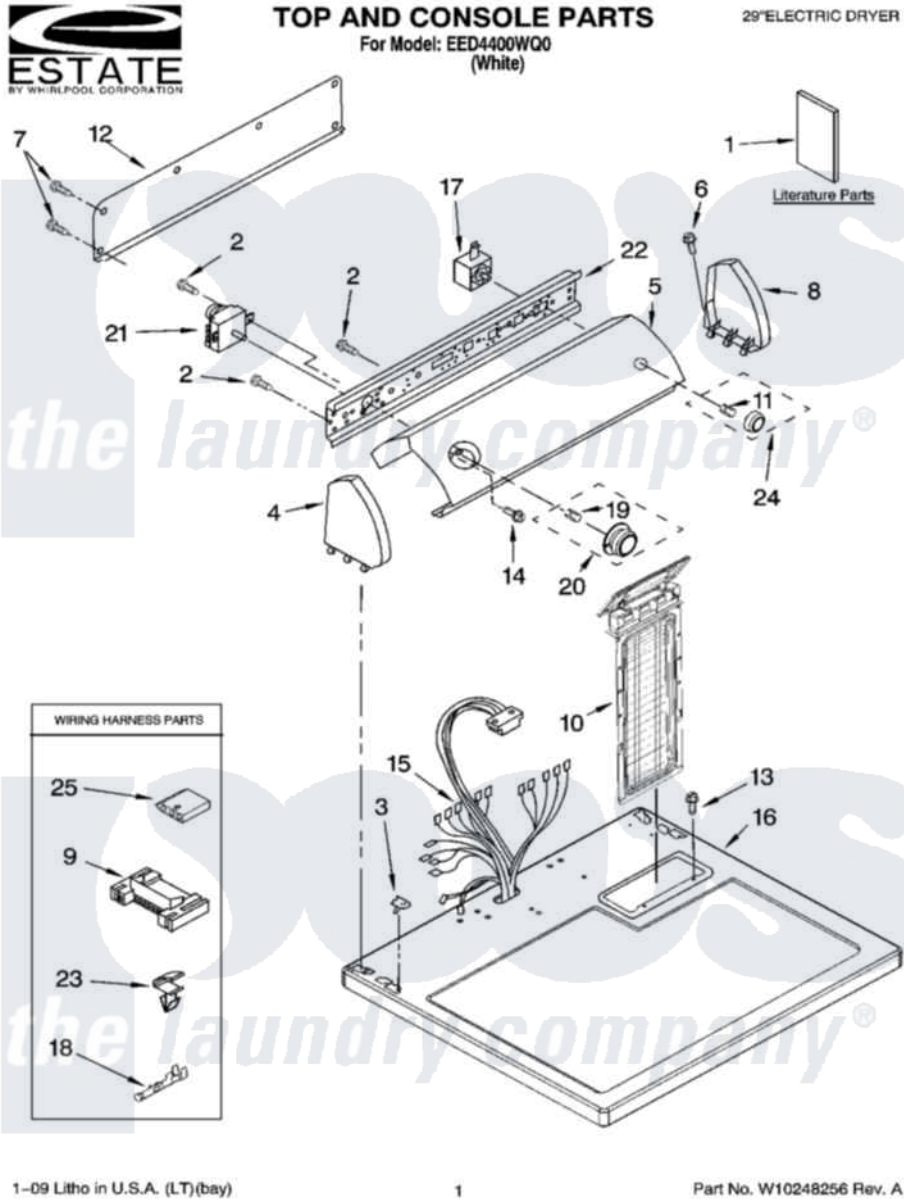

1-09 Litho in U.S.A. (LT)(bay)

1

Part No. W10248256 Rev. A

Whirlpool Residential Whirlpool EED4400WQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150612		Not Available	Instructions, Installation
"	W10118620		Not Available	Sheet, Cycle Features
"	W10118621		Not Available	Guide, Use & Care
"	W10185979			Wiring Diagram Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	357213			Nut, Push-In
4	8274437	279960		Endcap
5	W10238702			Panel, Control
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8274434	279960		Endcap
9	3395683			Receptacle, Multi-Terminal

10	8558463		HAnDle And Lint Screen Assembly
11	8536939		Clip, Knob
12	8274261		Do-It-Yourself Repair Manuals
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	W10186068	W10186166	Harness, Wiring
16	8557930	8563985	Top
17	3977456		Switch, Push-To-Start
18	94614		Terminal
19	688805		Clip, Spring Knob
20	8538953		Timer Knob Assembly
21	W10185970		Timer, 60 Hz
22	8271418		Bracket, Control
23	3394427		Clip-Harness
24	8538959		Knob, Push-To-Start
25	3936144		Do-It-Yourself Repair Manuals

