


Whirlpool EED4400WQ0 02 - CABINET PARTS

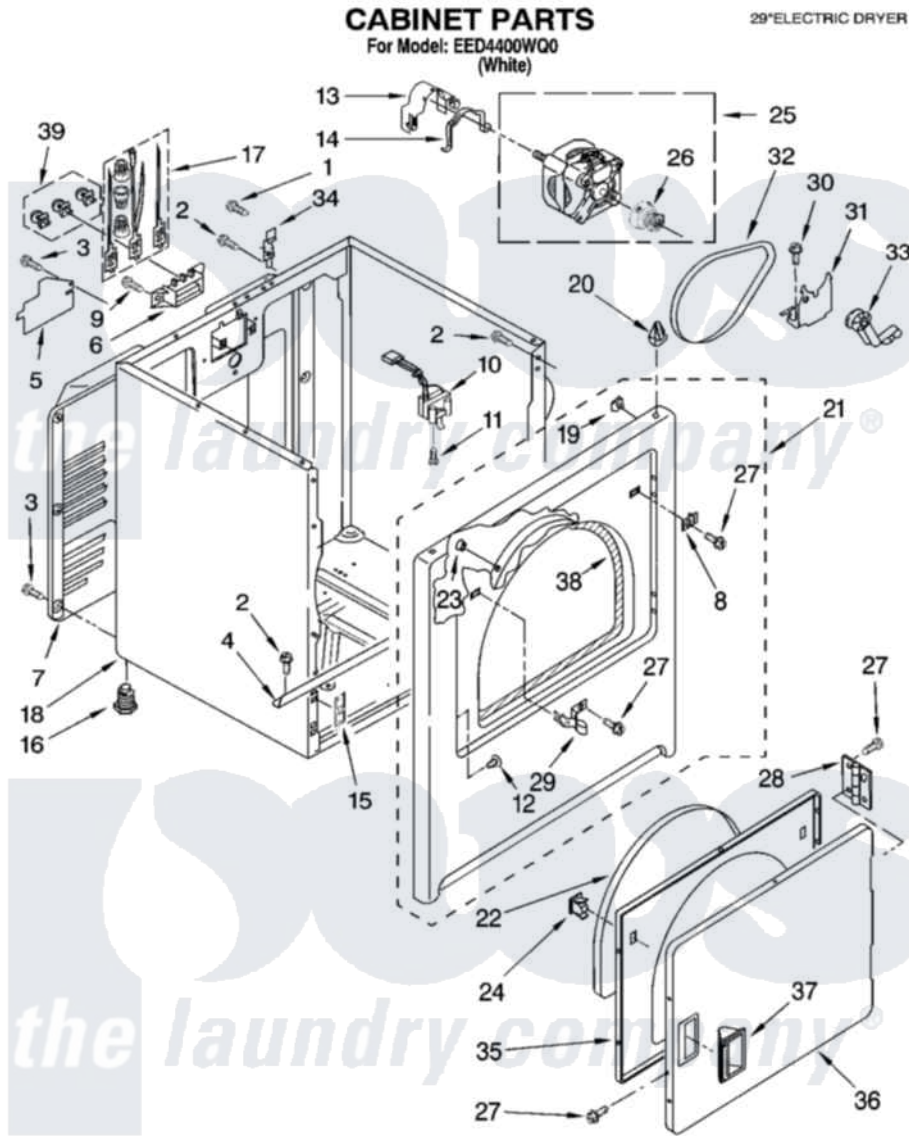

W10248256

3

Whirlpool [Residential Whirlpool EED4400WQ0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	693995			Screw, Hex Head
4	8541400			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	3397659			Block, Terminal
7	3396805	280043		Panel-Rear
8	3403630			Plug, Strike Hole
9	3393008	308685		Side Trim)
10	3406109	3406107		Door Switch Assembly
11	697773	3395530		Screw
12	3404413			Plug, Hinge Hole
13	3404162			Clamp, Motor
14	W10121316			Plug, Multivent
15	3394083			Clip, Front Panel
16	3392100	49621		Feet-Leveling

"	279810		Foot-Optional
17	279318		Terminal Tinned And Brass Panel
18	8530603	8533643	Cabinet
19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	W10224853		Front Panel Assembly
22	3405246		Seal, Door Push-To-Start
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	W10194250	279827	Motor-Drive
26	8066184		Pulley, Motor
27	342055	488627	Screw
28	3405514	W10362431	Hinge And Pin Assembly
29	3403431		Strike, Panel
30	3400500		Bolt, 3405245 5/16-18 X 3/4
31	348780		Base, Motor
32	W10131364	341241	Belt
33	691366		Idler And Pulley Assembly
34	8066217		Hinge, Top
35	3402341		Door, Inner
36	3402335		Door, Front
37	3405184		Handle, Door
38	3406129		Seal And Bearing Assembly
39	279393		Terminal Block Screw Kit

the laundry company®

the laundry company®