


Whirlpool ETW4300SQ 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Model: ETW4300SQ0
(Designer White)

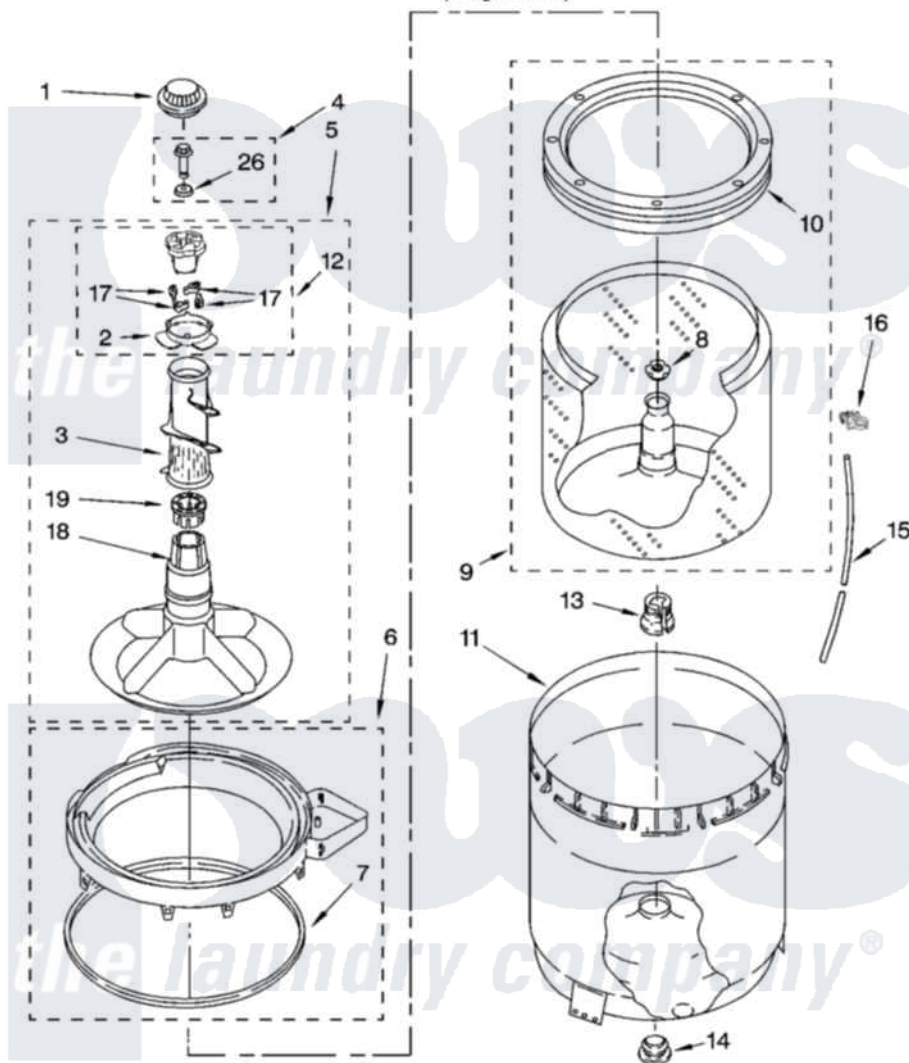

8181305

5

Whirlpool Residential Whirlpool ETW4300SQ0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	3363661			Bearing, Driven Cam
3	3348752			Mover, Clothes
4	358237			Screw And Washer
5	3348117	285565		Agitator
6	8528150	W10445870		Ring-Tub
7	3976308			Gasket, Tub Ring
8	21366			Nut, Spanner
9	8526017	W10389329		Clothes Container, Assembly
10	8519788	387240		Ring, Balance
11	63849			Strain Relief, Power Cord
12	3363663	285811		Cam-Agitator
13	389140			Tub Block, Basket Drive
14	383727			Gasket, Centerpodt
15	3347780	353244		Hose, Pressure Switch
16	2219077			Clip, Pressure Switch Hose

17	3366877	80040	Dog-Agitator
18	3347288		Agitator
19	3350389	285587	Washer
26	3949550		Washer

