


# Whirlpool ETW4400VQ2 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: ETW4400VQ2  
(White)

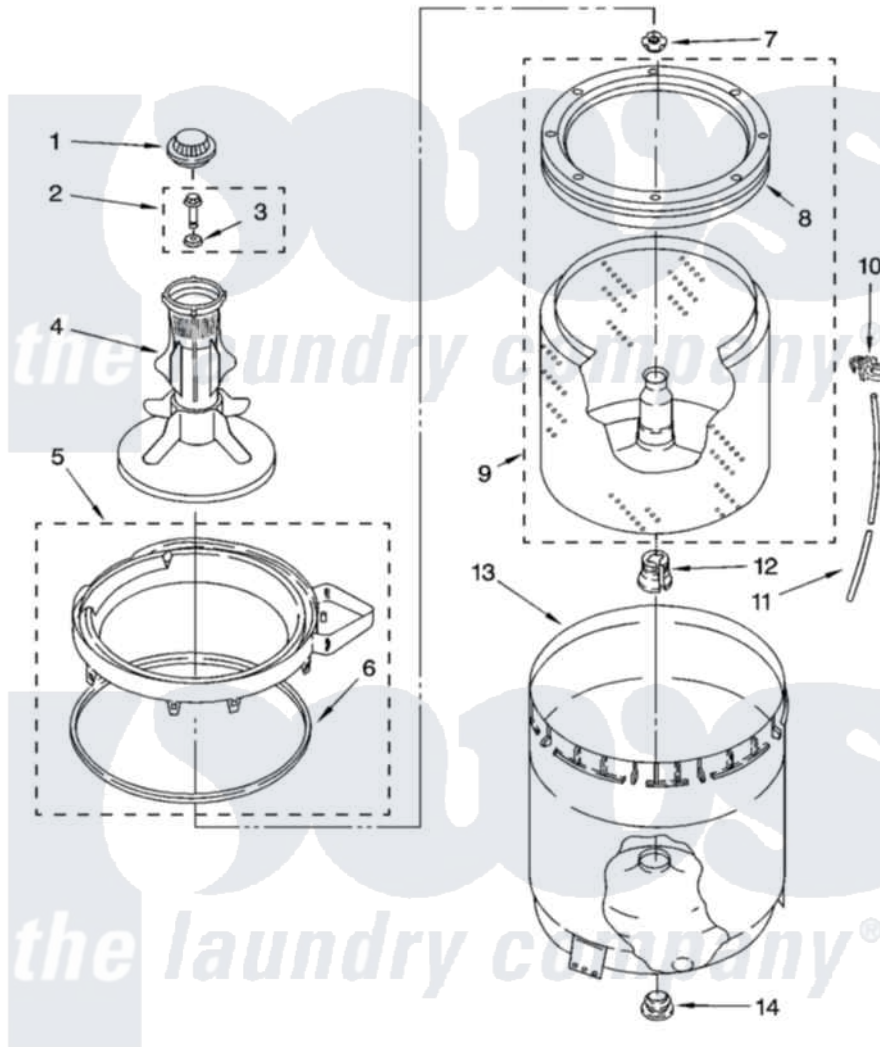

W10239494

5

Whirlpool Residential Whirlpool ETW4400VQ2 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3949550</a>			Washer
4	<a href="#">63235</a>			Agitator Assembly
5	8528150	<a href="#">W10445870</a>		Ring-Tub
6	<a href="#">3976308</a>			Gasket, Tub Ring
7	<a href="#">21366</a>			Nut, Spanner
8	<a href="#">387240</a>			Ring, Balance
9	8526017	<a href="#">W10389329</a>		Clothes Container, Assembly
10	<a href="#">2219077</a>			Clip, Pressure Switch Hose
11	3347780	<a href="#">353244</a>		Hose, Pressure Switch
12	<a href="#">389140</a>			Tub Block, Basket Drive
13	<a href="#">63849</a>			Strain Relief, Power Cord
14	<a href="#">383727</a>			Gasket, Centerpodt