


Whirlpool ETW4400VQ3 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Model: ETW4400VQ3
(White)

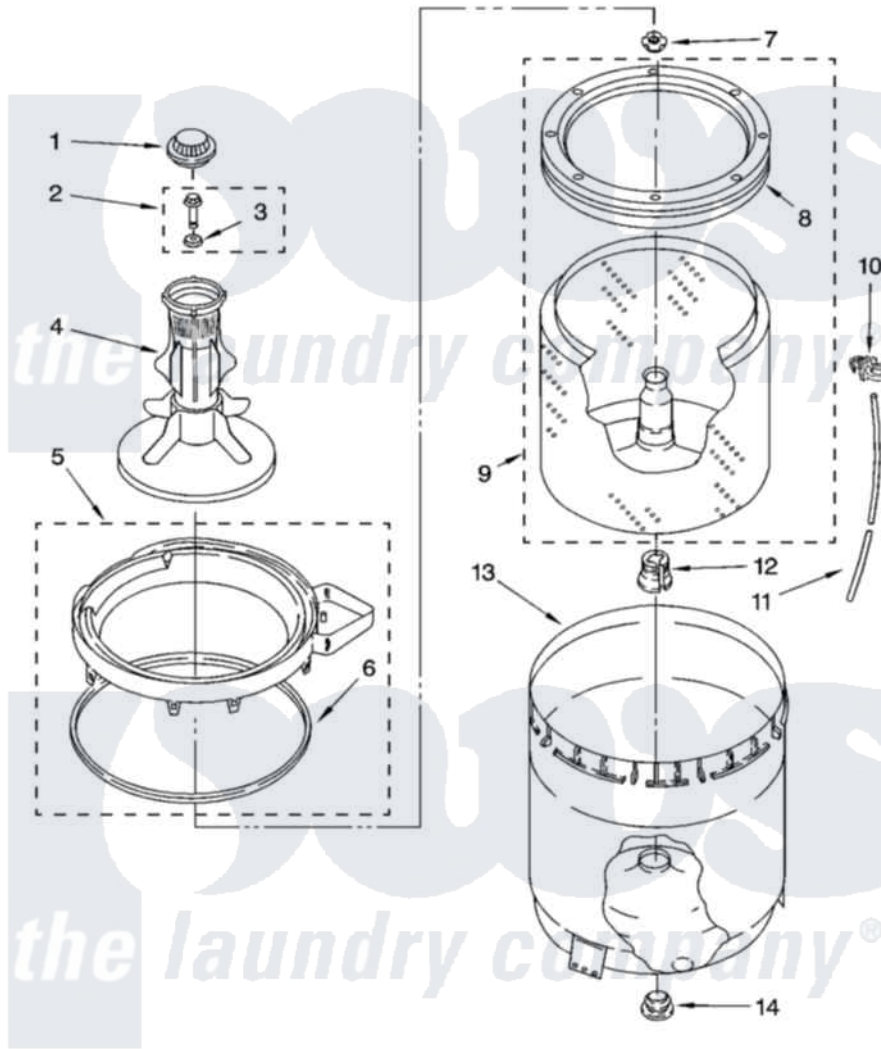

W10239513

5

Whirlpool Residential Whirlpool ETW4400VQ3 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	358237			Screw And Washer
3	3949550			Washer
4	63235			Agitator Assembly
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	21366			Nut, Spanner
8	387240			Ring, Balance
9	8526017	W10389329		Clothes Container, Assembly
10	2219077			Clip, Pressure Switch Hose
11	3347780	353244		Hose, Pressure Switch
12	389140			Tub Block, Basket Drive
13	63849			Strain Relief, Power Cord
14	383727			Gasket, Centerpod