


Whirlpool ETW4400WQ0 03 - AGITATOR, BASKET AND TUB PARTS

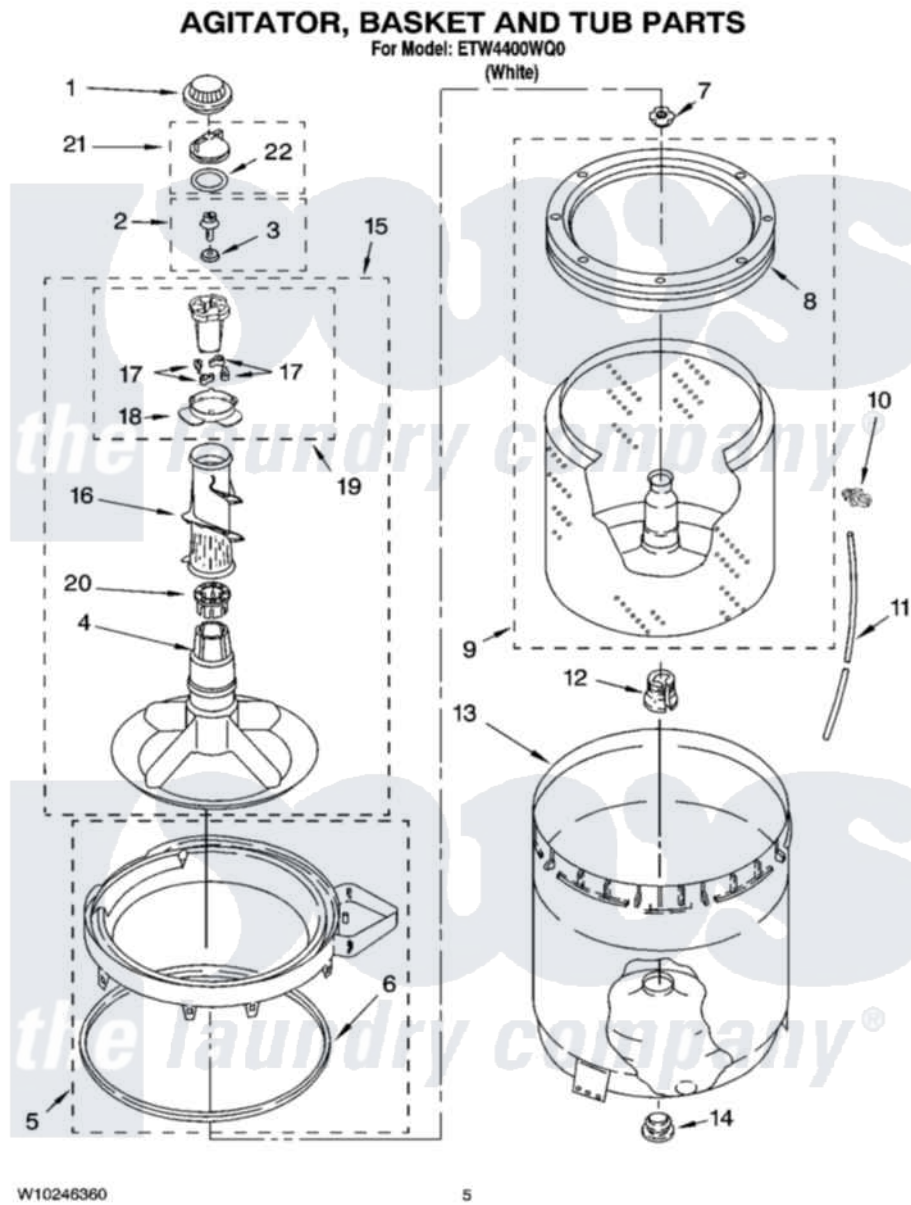

Whirlpool Residential Whirlpool ETW4400WQ0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	358237			Screw And Washer
3	3949550			Washer
4	3347288			Agitator
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	21366			Nut, Spanner
8	387240			Ring, Balance
9	8526017	W10389329		Clothes Container, Assembly
10	2219077			Clip, Pressure Switch Hose
11	3347780	353244		Hose, Pressure Switch
12	389140			Tub Block, Basket Drive
13	63849			Strain Relief, Power Cord
14	383727			Gasket, Centerpodt
15	3348117	285565		Agitator
16	3348752			Mover, Clothes

17	3366877	80040	Dog-Agitator
18	3363661		Bearing, Driven Cam
19	3363663	285811	Cam-Agitator
20	3350389	285587	Washer
21	3354733	W10074580	Cap, Barrier
22	W10072840		Fabric Softener

