


Whirlpool GEQ9800LW1 01 - TOP AND CONSOLE PARTS

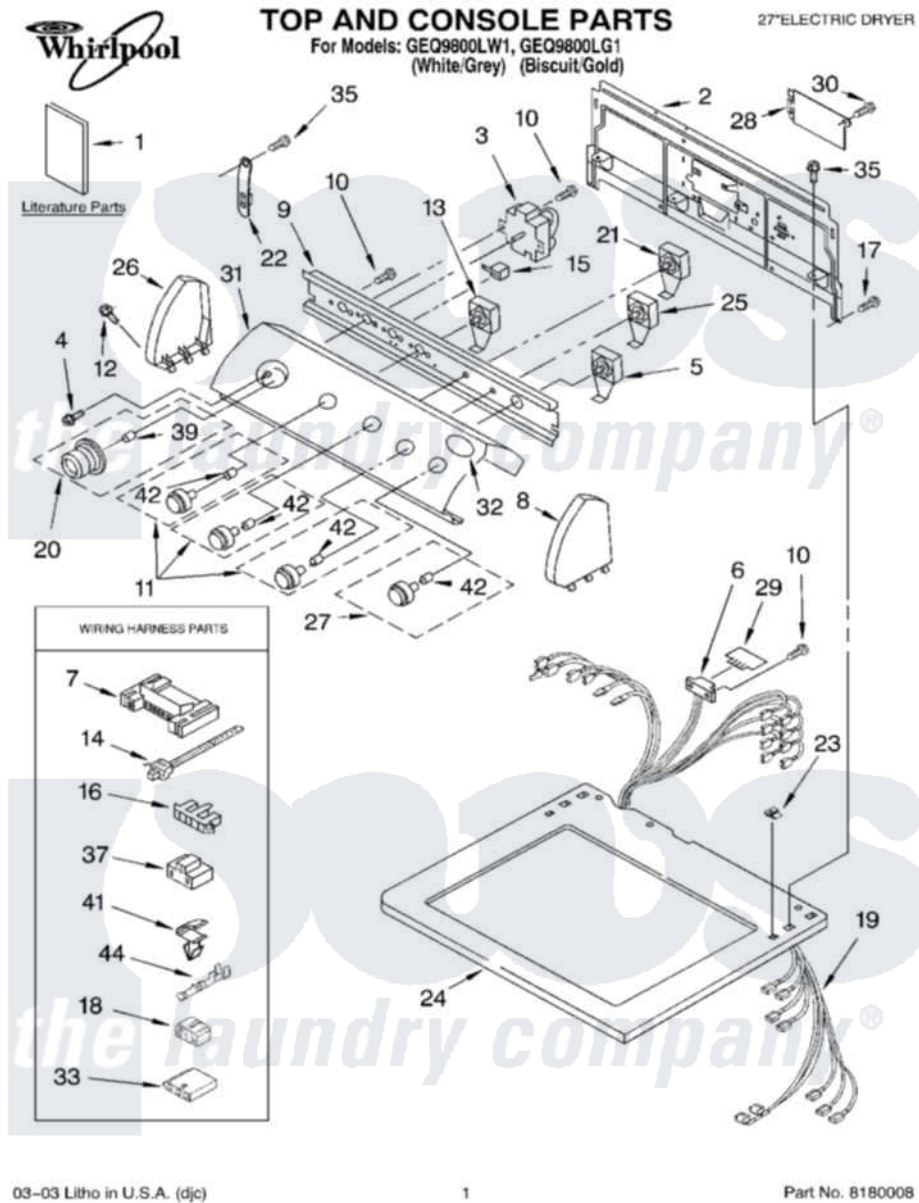

03-03 Litho in U.S.A. (djc)

1

Part No. 8180008

Whirlpool Residential Whirlpool GEQ9800LW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8541831		Not Available	Literature Parts (Wiring Diagram)
"	LIT8535837		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8535840		Not Available	Literature Parts (Instructions Installation)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	8317305	285909		Panel-Rear
3	3406725			Timer Assembly
4	3400859			Screw, Grounding
5	3398094			Switch, Push To Start
6	3391885			Connector, Edge
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
"	8271362	279965		Endcap

9	8271316		Bracket, Control
10	3390646	W10139210	Screw, 8-18 X 5/16
11	8538957		Knob, Control
"	8538958		Knob, Control
12	388326		Screw, 8-18 X 1.25
13	8528330		Switch, Temperature
14	3391018		Tie Cable
15	694419		Mini-Buzzer
16	3397269		Connector, Timer
17	693995		Screw, Hex Head
18	3347243		Block, Disconnect
19	8299956	8576516	Harns-Wire
20	8538953		Timer Knob Assembly
"	8538954		Timer Knob Assembly
21	3405154		Switch Rotary
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
"	8271401	3979279	Top
25	3405152		Switch, Wrinkle Shield
26	8271365	279962	Endcap
"	8271368	279965	Endcap
27	8538959		Knob, Push-To-Start
"	8538960		Knob, Push-To-Start
28	8317342	W10119283	Cover, Terminal Block
29	3390537	8558178	Control, Electronic
30	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8532641		Panel, Control
"	8532642		Panel, Control
32	3955776		Medallion
33	3936144		Do-It-Yourself Repair Manuals
35	3390647	488729	Screw
37	3401144		Connector
39	688805		Clip, Spring Knob
41	3394427		Clip-Harness
42	8536939		Clip, Knob
44	94614		Terminal

the laundry company[®]