


Whirlpool GEW9260PW1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: GEW9260PW1, GEW9260PL1
(White/Platinum) (Pewter)

ELECTRIC DRYER

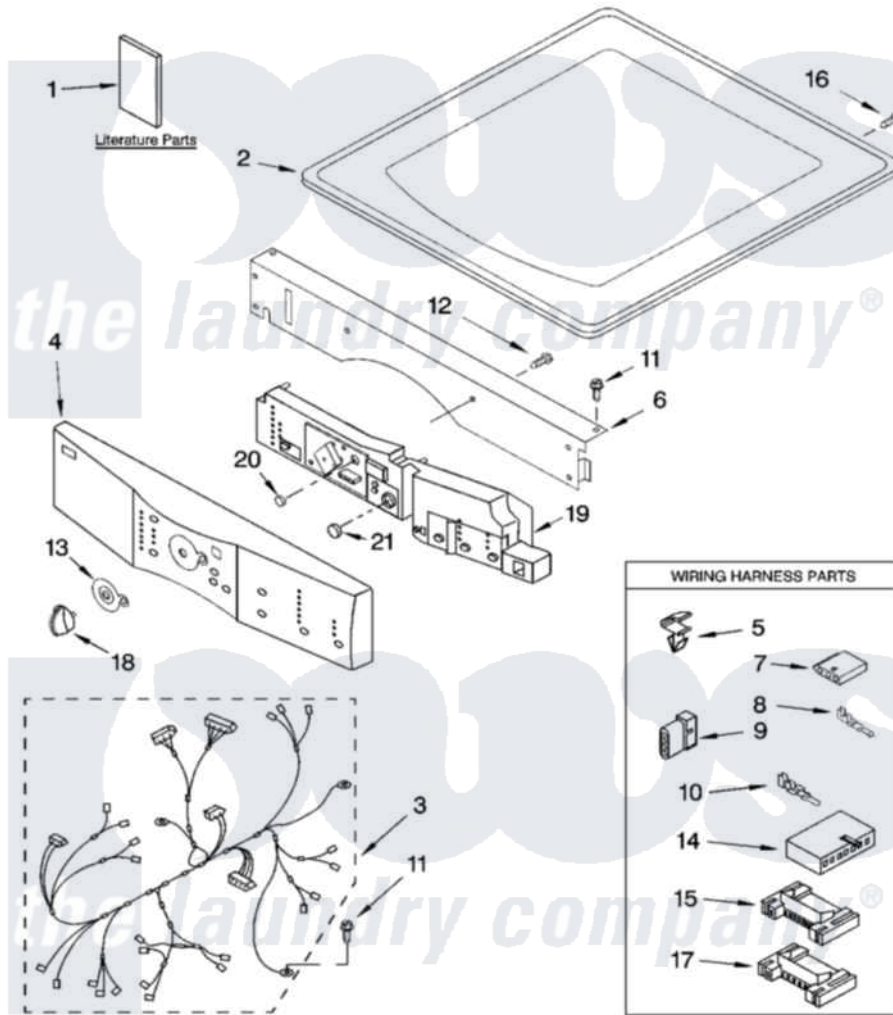

10-05 Litho in U.S.A. (LT)

1

Part No. 8180962

Whirlpool Residential Whirlpool GEW9260PW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578188		Not Available	Use & Care Guide
"	8530064		Not Available	Tech Sheet
"	8530083		Not Available	Guide Quick Start
2	8519251	W10117263		Top
"	3980096	3980357		Top
3	8529983	8576530		Harness, Main
4	8558703			Panel, Console
"	8533601		Not Available	Panel, Console (Pewter)
5	3394427			Clip-Harness
6	8519271			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
12	488886	488787		Screw

13	8519406		Bezel, Cycle
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	8281225		Screw, 8-18 X 1/2
17	2203186		Connector, 5-Circuit
18	46197020472	8181859	Knob, Control
"	46197020742	8182050	Knob, Control
19	8558704		User Interface
"	8533602		User Interface
20	8561811		Button, Start
21	8561812	Not Available	Button, Pause/Cancel

