


Whirlpool GEW9868KQ4 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: GEW9868KQ4, GEW9868KL4, GEW9868KT4
(Designer White) (Pewter) (Biscuit)

27" ELECTRIC DRYER

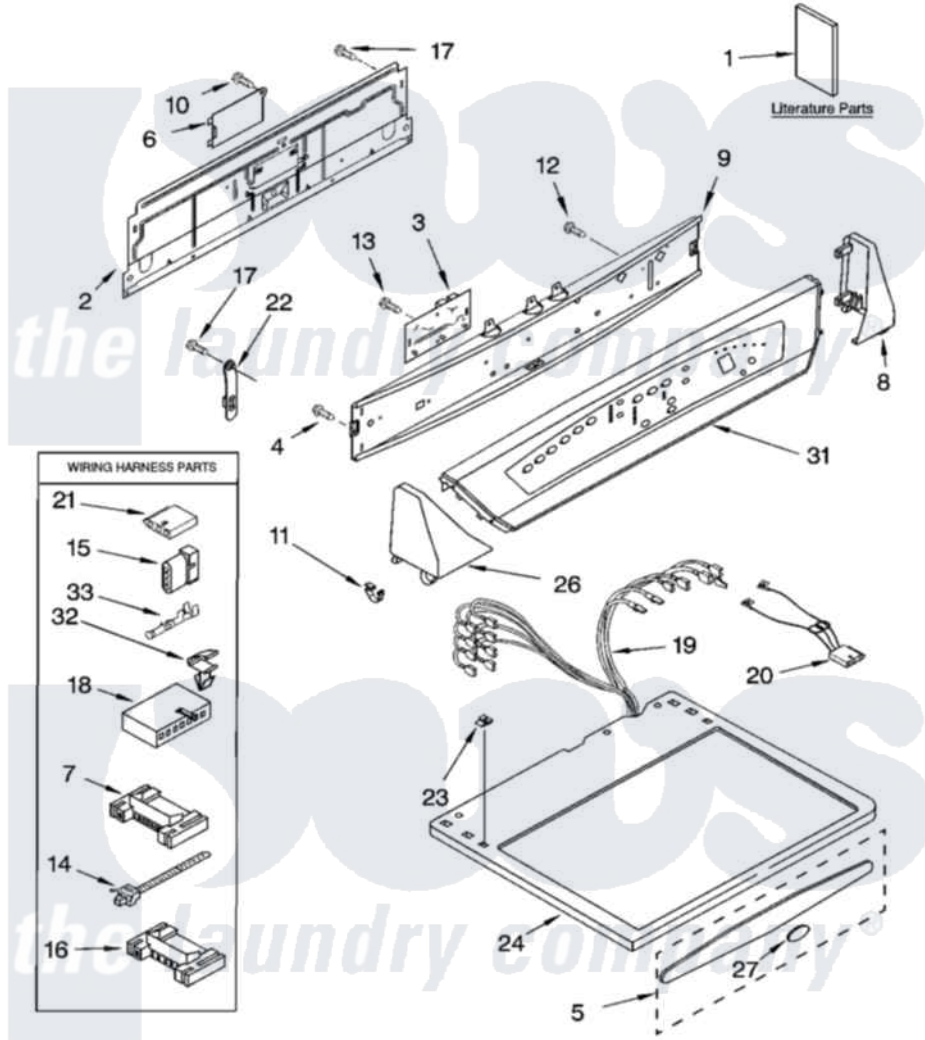

10-05 Litho in U.S.A.(LT)

1

Part No. 8180950

Whirlpool Residential Whirlpool GEW9868KQ4 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578184		Not Available	Guide, Use & Care
"	3979171		Not Available	Instructions Installation
"	8541836			Tech Sheet
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8274338	285906		Panel-Rear
3	8566150			Control Board
4	304231			Screw, 8-18 X 1/2
5	8521943			Medallion Assembly
"	8521944			Medallion Assembly
6	8317342	W10119283		Cover, Terminal Block
7	3395683			Receptacle, Multi-Terminal
8	8299686			Cap, End
"	8299688			Cap, End

"	8299687		Cap, End
9	8299690		Bracket, Control
10	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	8312709		Clip-Console
12	3400073		Screw, Ground
13	3400826		Screw, 8-18 X 3/4
14	3391018		Tie Cable
15	353424		Plug, Terminal
16	2203186		Connector, 5-Circuit
17	693995		Screw, Hex Head
18	3936150		Connector, 7-Circuit
19	8529981	8576529	Harns-Wire
20	3406653		Harness, Sensor
21	3936144		Do-It-Yourself Repair Manuals
22	8568314		Strap, Console
23	357213		Nut, Push-In
24	3978832	3979256	Top
"	3978837	3979257	Top
"	3978833	3979258	Top
26	8299683	Not Available	Cap, End (L.H.) (Includes Item 13) (White)
"	8299685		Cap, End
"	8299684		Cap, End
27	8316751		Medallion Insert
31	3978825		Panel, Console
"	3978826		Panel, Console
32	3394427		Clip-Harness
33	94614		Terminal

the laundry company[®]

the laundry company[®]