


Whirlpool GEW9878PG0 02 - TOP AND CONSOLE PARTS

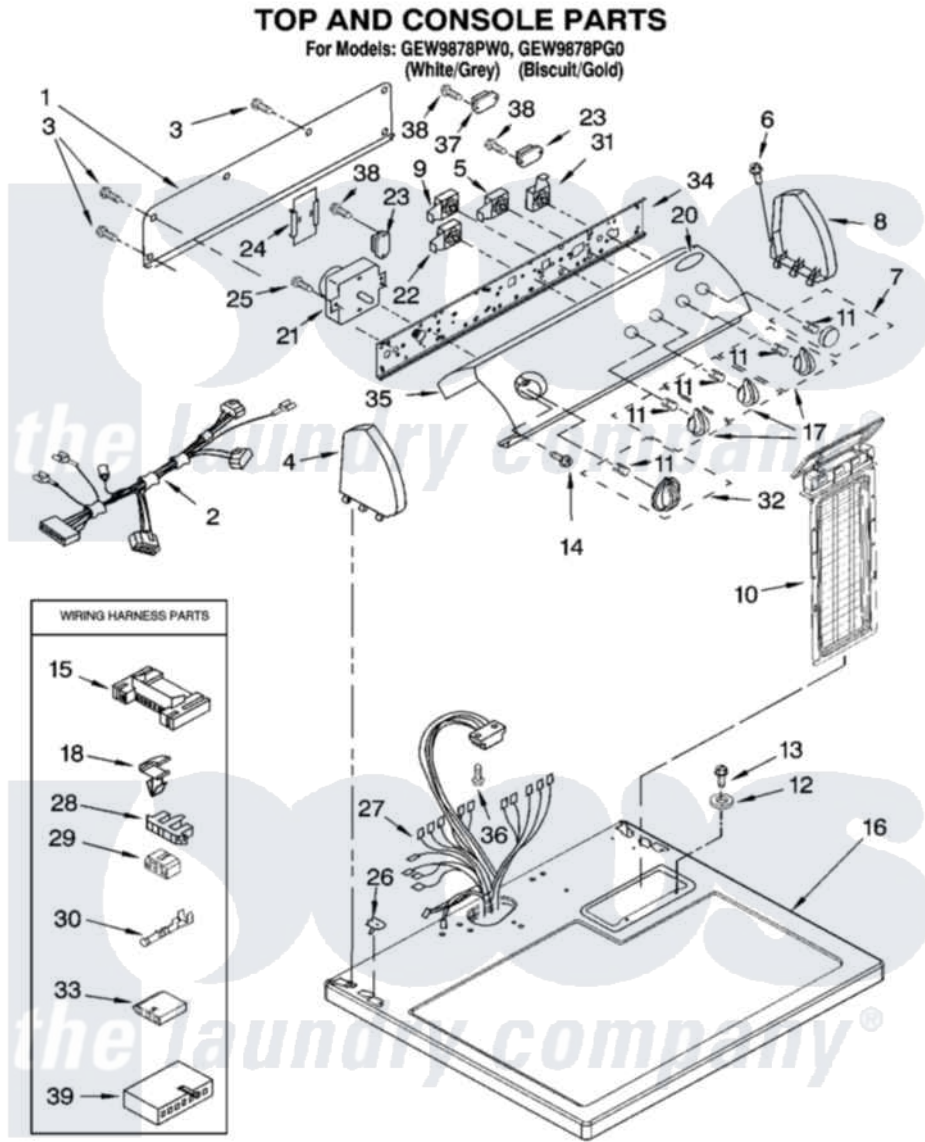

8180265

3

Whirlpool [Residential Whirlpool GEW9878PG0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8283135			Harness, Console
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3405151			Switch, End Of Cycle
6	388326			Screw, 8-18 X 1.25
7	8544941			Knob, Push-To-Start
"	8544942			Knob, Push-To-Start
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3405152			Switch, Wrinkle Shield
10	8557857			Screen, Lint
"	8557858			Screen, Lint
11	8536939			Clip, Knob
12	237446	487596		Washer

13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557927	8563993	Top
"	8557928	8563994	Top
17	8544937		Knob, Control
"	8544938		Knob, Control
18	3394427		Clip-Harness
20	8533990		Medallion
21	8299771		Timer Assembly
22	8299970		Switch, Temperature
23	3405281		Power Relay
24	3976623	W10116566	Control-Elec
25	3390646	W10139210	Screw, 8-18 X 5/16
26	357213		Nut, Push-In
27	8299897		Harness, Wiring
28	3397269		Connector, Timer
29	3347243		Block, Disconnect
30	94614		Terminal
31	3977456		Switch, Push-To-Start
32	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
33	3936144		Do-It-Yourself Repair Manuals
34	8544895		Bracket, Control
35	8545982		Panel, Control
"	8545984		Panel, Control
36	343641	681414	Screw, 10AB X 1/2
37	697812	8566493	Power Relay
38	3388228		Screw, 8-18 X 1/32
39	3936150		Connector, 7-Circuit

