


Whirlpool GEX9868JQ3 02 - TOP AND CONSOLE PARTS

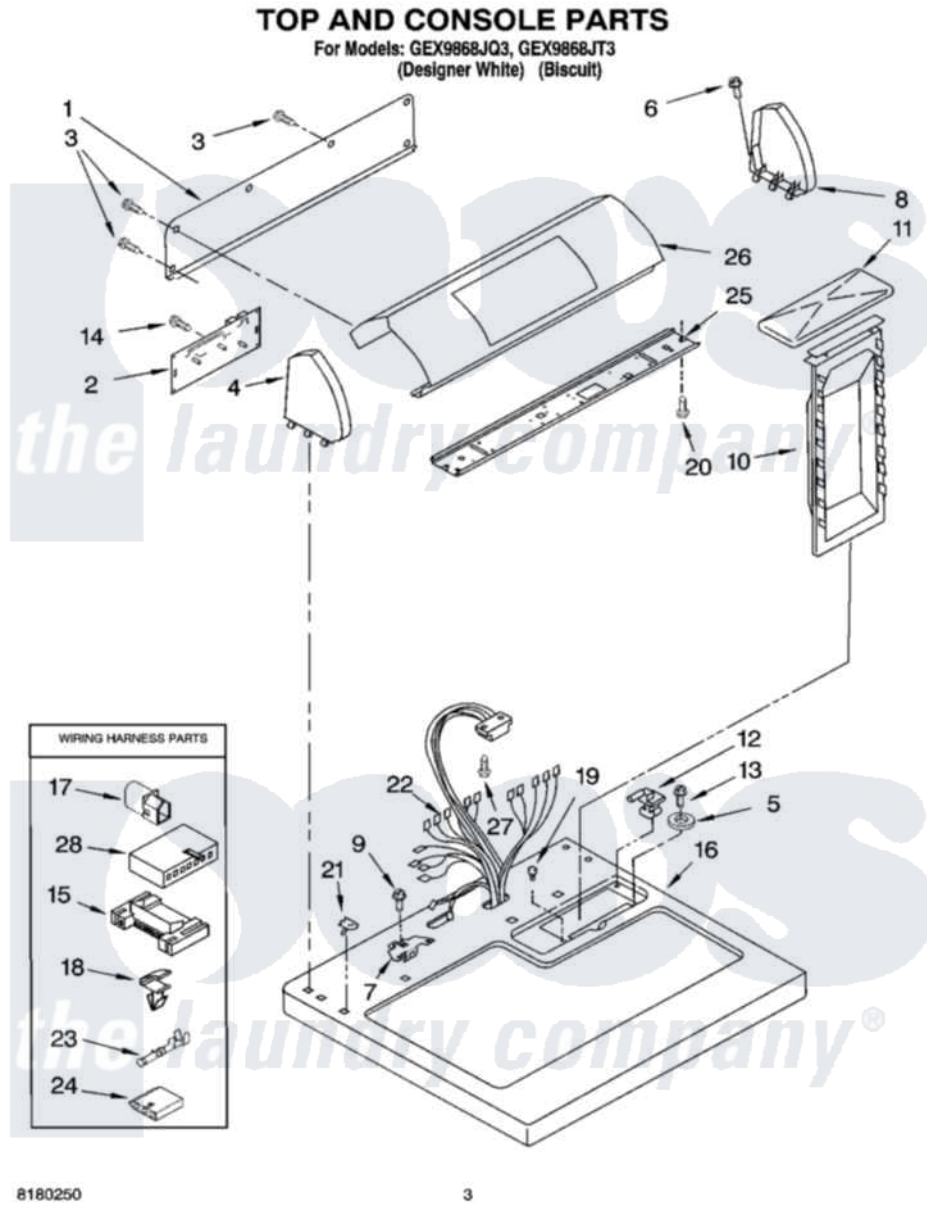

Whirlpool Residential Whirlpool GEX9868JQ3 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3978958	280071		Control-Elec
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	237446	487596		Washer
6	388326			Screw, 8-18 X 1.25
7	3355753			Clip, Static Ground
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	337686		Not Available	SCREW, 8-18 X .500
10	349639			HANdle And Lint Screen Assembly
11	8283378			Cover, Lint Screen
"	8283380			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid

13	688983	487240		Screw, For Mtg. Service Capacitor
14	3400826			Screw, 8-18 X 3/4
15	3395683			Receptacle, Multi-Terminal
16	8271395	8521921		Top
"	8271397	8521922		Top
17	353424			Plug, Terminal
18	3394427			Clip-Harness
19	297535	17258		Bumper
20	3390646	W10139210		Screw, 8-18 X 5/16
21	357213			Nut, Push-In
22	8299905			Harness, Wiring
23	94614			Terminal
24	3936144			Do-It-Yourself Repair Manuals
25	8274305			Bracket, Control
26	8274398		Not Available	Panel, Control (White)
"	8274399		Not Available	Panel, Control (Biscuit)
27	343641	681414		Screw, 10AB X 1/2
28	3936150			Connector, 7-Circuit
"	N/A		Not Available	ACCESSORY PARTS
"	279948	4392065		Kit, Dryer Repair
"	8522199			Accessory Parts
"	72017			Paint, Touch-Up
"	4392899			Paint, Touch-Up
"	350930			Paint, Pressurized Spray B
"	350938			Paint, Pressurized Spray B
"	4392901			Paint, Pressurized Spray
"	799344			Paint, Touch-Up)
"	4392900			Paint, Bulk)

