


# Whirlpool GGQ8811LG1 02 - CABINET PARTS

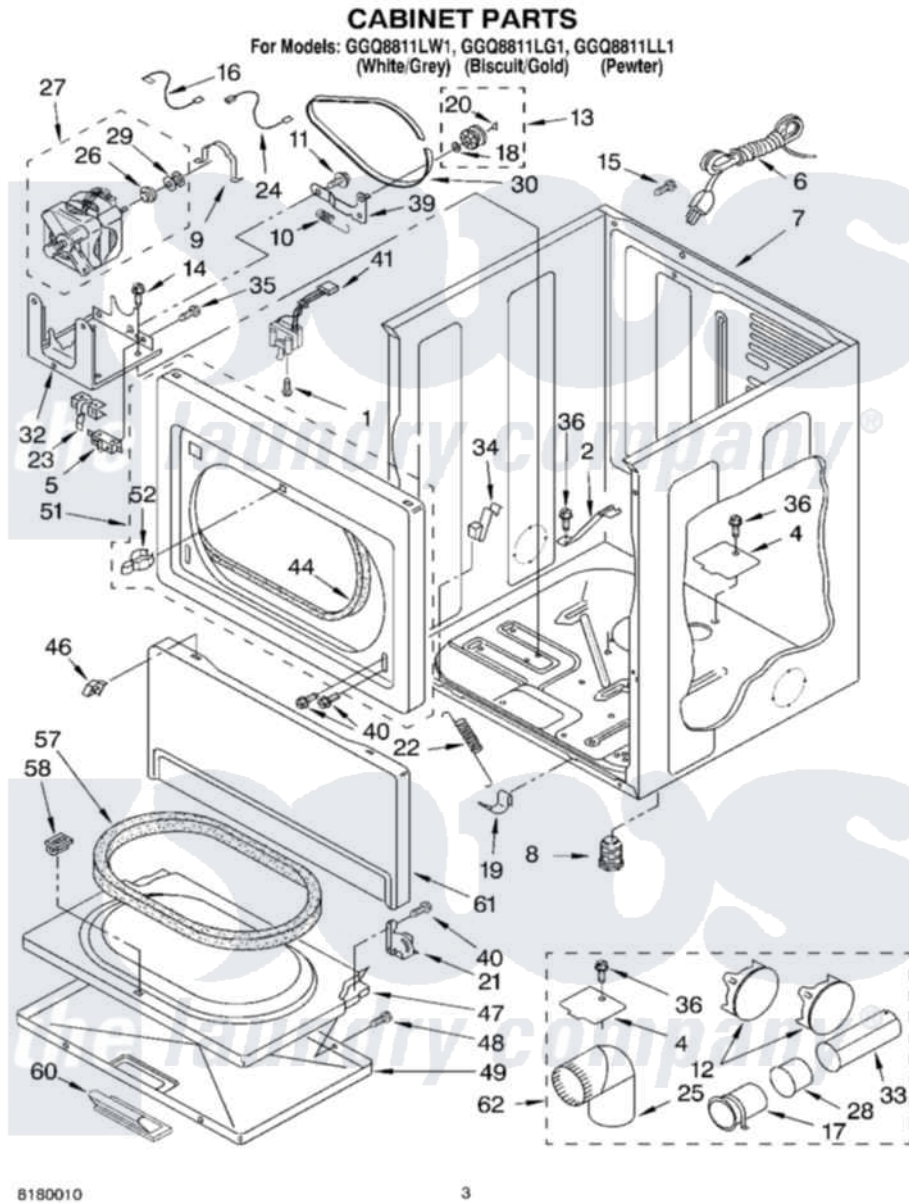

Whirlpool [Residential Whirlpool GGQ8811LG1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697773	<a href="#">3395530</a>		Screw
2	<a href="#">8529757</a>			Bracket, Burner
4	<a href="#">3394331</a>			Plate Cover
5	3394881	<a href="#">279782</a>		Switch-Lid
6	344020	<a href="#">3401402</a>		Cord, Power
7	<a href="#">8310656</a>			Cabinet
"	8310659		Not Available	Cabinet (Biscuit)
"	8528155	<a href="#">3979259</a>		Cabinet
8	3392100	<a href="#">49621</a>		Feet-Leveling
"	<a href="#">279810</a>			Foot-Optional
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
12	697750	<a href="#">W10470674</a>		Dryer Exhaust Kit
"	<a href="#">3388311</a>			Plug, Multivent
"	<a href="#">3979261</a>			Plug, Multivent

13	3388672	<a href="#">279640</a>	Pulley-Idr
14	3390663	<a href="#">681414</a>	Screw, 10AB X 1/2
15	697776	<a href="#">4331106</a>	Screw, No.10-32 X 7/16
16	<a href="#">3398948</a>		Wire, Jumper
17	<a href="#">3395532</a>		Exhaust Pipe And Bracket
18	<a href="#">233520</a>		Washer, Thrust
19	<a href="#">297092</a>		Clip
20	<a href="#">690997</a>		Washer, Thrust
21	<a href="#">3387560</a>		Hinge, Door
"	<a href="#">3387559</a>		Hinge, Door
22	<a href="#">3387565</a>		Spring, Door
23	<a href="#">8066120</a>		Lever, Door Switch
24	<a href="#">3394081</a>		Wire, Broken Belt Switch
25	<a href="#">49026</a>		4" - 90° Elbow
26	<a href="#">3393657</a>		Restrainer, Belt
27	8538263	<a href="#">279787</a>	Motor-Drve
28	<a href="#">3395534</a>		Exhaust Pipe
29	<a href="#">3389729</a>		Pulley, Motor
30	3387610	<a href="#">661570</a>	Belt
32	<a href="#">3387118</a>		Bracket, Motor
33	3395535	<a href="#">8563749</a>	Exhaust Pipe
34	<a href="#">3388600</a>		Clip, Lint Duct
35	<a href="#">98129</a>		Screw, 6-20 X 1 1/16
36	<a href="#">693995</a>		Screw, Hex Head
39	3388674	<a href="#">W10118756</a>	Idler Bracket
40	3357011	<a href="#">308685</a>	Side Trim )
41	<a href="#">3406107</a>		Door Switch Assembly
44	<a href="#">3387242</a>		Seal, Front Panel
46	<a href="#">3388229</a>		Retainer, Toe Panel
47	697655	<a href="#">280079</a>	Door
48	<a href="#">694091</a>		Trim, Side Right Hand
49	<a href="#">8521938</a>		Door, Front
"	<a href="#">8521939</a>		Door, Front
"	<a href="#">8521936</a>		Door, Front
51	697227	<a href="#">279659</a>	Panel
"	3977761	<a href="#">279935</a>	Panel
"	3979198	<a href="#">279972</a>	Panel
52	696144	<a href="#">279570</a>	Latch
57	3390736	<a href="#">3390732</a>	Seal-Door
58	690081	<a href="#">279570</a>	Latch
60	<a href="#">3979726</a>		Handle, Door
"	<a href="#">3979727</a>		Handle, Door
61	697215	<a href="#">3406797</a>	Toe Panel
"	3977764	<a href="#">8526025</a>	Toe Panel
"	3979197	<a href="#">3979260</a>	Toe Panel
62	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit
"	279925	<a href="#">W10470674</a>	Dryer Exhaust Kit
"	279969	<a href="#">W10470674</a>	Dryer Exhaust Kit
"	N/A	Not Available	ACCESSORY PARTS
"	<a href="#">4392067</a>		Kit, Dryer Repair
"	3406911	<a href="#">8212450A</a>	Dryer Rack
"	<a href="#">8522199</a>		Accessory Parts

"	<a href="#">346764</a>	Kit, Hold Down
"	<a href="#">72017</a>	Paint, Touch-Up
"	<a href="#">4392899</a>	Paint, Touch-Up
"	<a href="#">4396174</a>	Paint, Touch-Up
"	<a href="#">350930</a>	Paint, Pressurized Spray B
"	<a href="#">4392901</a>	Paint, Pressurized Spray
"	<a href="#">4396175</a>	Paint, Pressurized Spray
"	<a href="#">350938</a>	Paint, Pressurized Spray B
"	<a href="#">799344</a>	Paint, Touch-Up )
"	<a href="#">4392900</a>	Paint, Bulk )

