


# Whirlpool GGQ9800LG1 01 - TOP AND CONSOLE PARTS

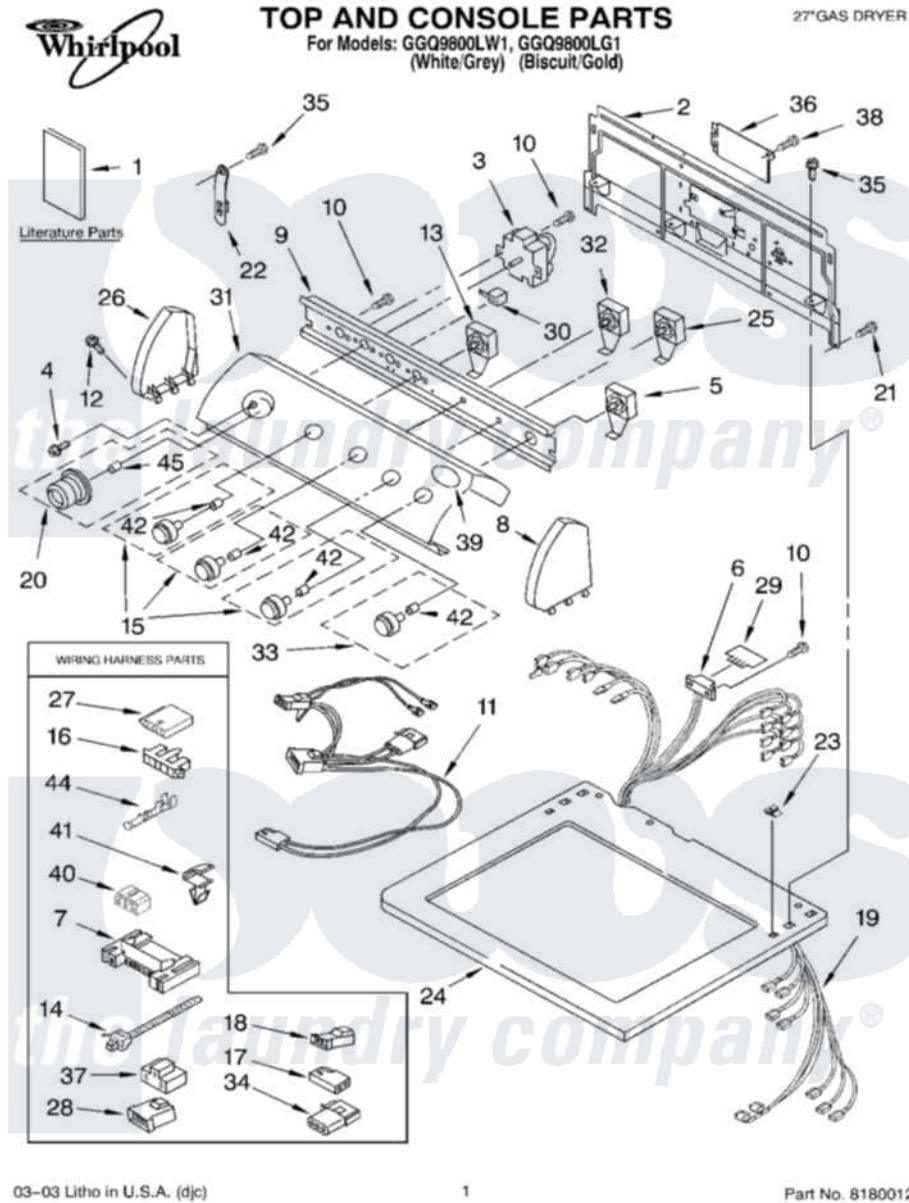

03-03 Litho in U.S.A. (djc)

1

Part No. 8180012

Whirlpool [Residential Whirlpool GGQ9800LG1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535865		Not Available	Literature Parts (Wiring Diagram)
"	LIT8535838		Not Available	Literature Parts (Guide, Use & Care)
"	LIT3979174		Not Available	Literature Parts (Instructions, Installation)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	<a href="#">677818L</a>		Diy
2	8317305	<a href="#">285909</a>		Panel-Rear
3	<a href="#">3406725</a>			Timer Assembly
4	<a href="#">3400859</a>			Screw, Grounding
5	<a href="#">3398094</a>			Switch, Push To Start
6	<a href="#">3391885</a>			Connector, Edge
7	<a href="#">3395683</a>			Receptacle, Multi-Terminal
8	8271359	<a href="#">279962</a>		Endcap
"	8271362	<a href="#">279965</a>		Endcap

9	<a href="#">8271316</a>		Bracket, Control
10	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
11	<a href="#">3401850</a>		Harness-Gas
12	<a href="#">388326</a>		Screw, 8-18 X 1.25
13	<a href="#">3405155</a>		Switch, Temperature
14	<a href="#">3391018</a>		Tie Cable
15	<a href="#">8538957</a>		Knob, Control
"	<a href="#">8538958</a>		Knob, Control
16	<a href="#">3397269</a>		Connector, Timer
17	<a href="#">717252</a>		Receptacle, Terminal
18	<a href="#">3403499</a>		Connector, 2-Position
19	<a href="#">8299951</a>		Harness, Wiring
20	<a href="#">8538953</a>		Timer Knob Assembly
"	<a href="#">8538954</a>		Timer Knob Assembly
21	<a href="#">693995</a>		Screw, Hex Head
22	8318255	<a href="#">8568314</a>	Strap, Console
23	<a href="#">357213</a>		Nut, Push-In
24	8271399	<a href="#">3979278</a>	Top
"	8271401	<a href="#">3979279</a>	Top
25	<a href="#">3405152</a>		Switch, Wrinkle Shield
26	8271365	<a href="#">279962</a>	Endcap
"	8271368	<a href="#">279965</a>	Endcap
27	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
28	<a href="#">3403498</a>		Connector, 3-Position
29	3390537	<a href="#">8558178</a>	Control, Electronic
30	<a href="#">694419</a>		Mini-Buzzer
31	<a href="#">8532641</a>		Panel, Control
"	<a href="#">8532642</a>		Panel, Control
32	<a href="#">3405154</a>		Switch Rotary
33	<a href="#">8538959</a>		Knob, Push-To-Start
"	<a href="#">8538960</a>		Knob, Push-To-Start
34	<a href="#">697779</a>		Plug, 3-Way
35	3390647	<a href="#">488729</a>	Screw
36	<a href="#">8317340</a>		Cover, Terminal Block
37	<a href="#">3401144</a>		Connector
38	3390814	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
39	<a href="#">3955776</a>		Medallion
40	<a href="#">3347243</a>		Block, Disconnect
41	<a href="#">3394427</a>		Clip-Harness
42	<a href="#">8536939</a>		Clip, Knob
44	<a href="#">94614</a>		Terminal
45	<a href="#">688805</a>		Clip, Spring Knob