


Whirlpool GGQ9800PG3 01 - TOP AND CONSOLE PARTS

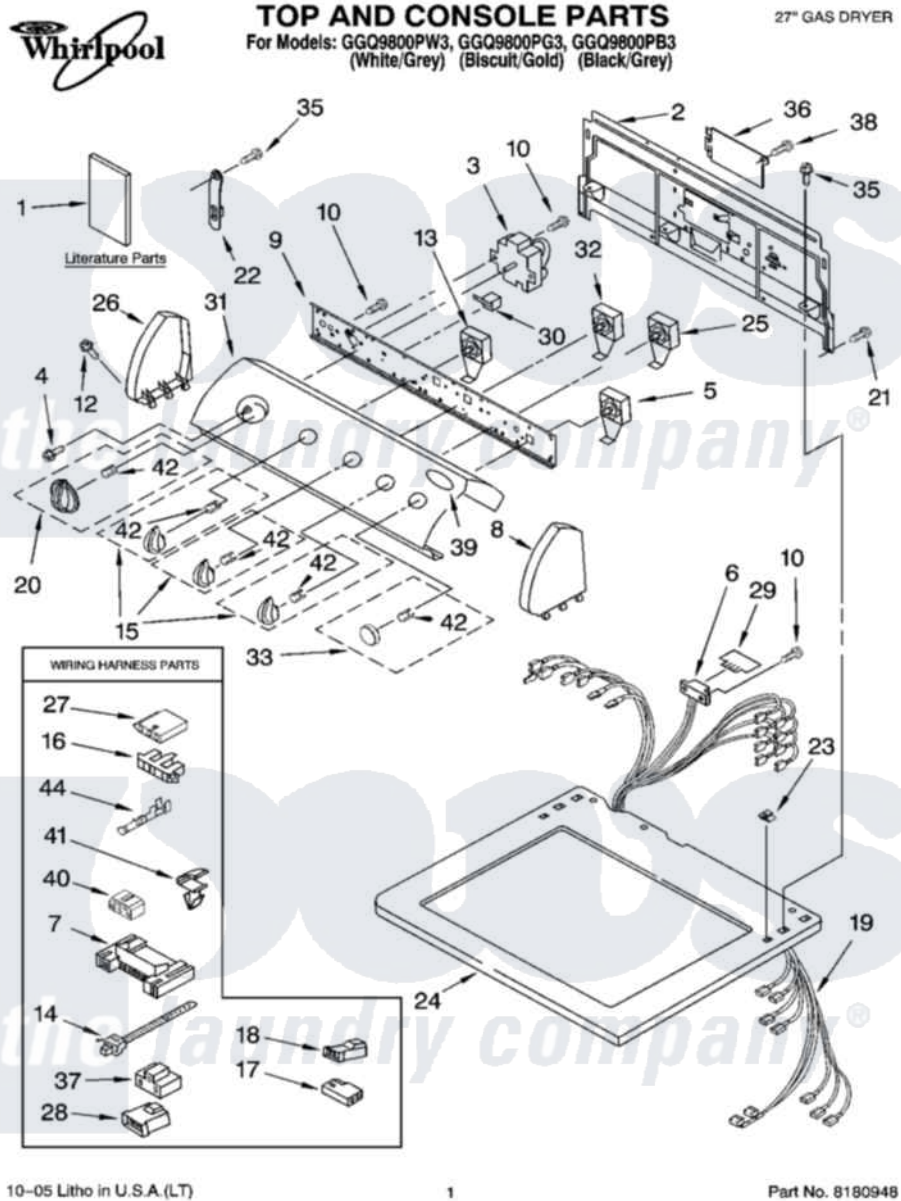

10-05 Litho in U.S.A. (LT)

1

Part No. 8180948

Whirlpool Residential Whirlpool GGQ9800PG3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8535865		Not Available	Wiring Diagram
"	8578191		Not Available	Guide, Use & Care
"	8533770		Not Available	Sheet, Cycle Feature
"	8557498		Not Available	Instructions, Installation
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	3406725			Timer Assembly
4	8533951	3400859		Screw, Grounding
5	3398094			Switch, Push To Start
6	3391885			Connector, Edge
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
"	8271362	279965		Endcap

"	8271361	279964	Endcap
9	8544897		Bracket, Control
10	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	388326		Screw, 8-18 X 1.25
13	3405155		Switch, Temperature
14	3391018		Tie Cable
15	8544937		Knob, Control
"	8544938		Knob, Control
16	3397269		Connector, Timer
17	717252		Receptacle, Terminal
18	3403499		Connector, 2-Postion
19	8299951		Harness, Wiring
20	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
21	693995		Screw, Hex Head
22	8568314		Strap, Console
23	357213		Nut, Push-In
24	8535848	8563987	Top
"	8535849	8563988	Top
"	8546091	8563990	Top
25	3405152		Switch, Wrinkle Shield
26	8271365	279962	Endcap
"	8271368	279965	Endcap
"	8271367	279964	Endcap
27	3936144		Do-It-Yourself Repair Manuals
28	3403498		Connector, 3-Position
29	8558178		Control, Electronic
30	694419		Mini-Buzzer
31	8545999		Panel, Control
"	8546000		Panel, Control
32	3405154		Switch Rotary
33	8544941		Knob, Push-To-Start
"	8544942		Knob, Push-To-Start
35	3390647	488729	Screw
36	8317340		Cover, Terminal Block
37	3401144		Connector
38	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
39	8533990		Medallion
40	3347243		Block, Disconnect
41	3394427		Clip-Harness
42	8536939		Clip, Knob
44	94614		Terminal