


Whirlpool GGW9250PL0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: GGW9250PW0, GGW9250PL0, GGW9250PT0
(White/Platinum) (Pewter) (Biscuit)

GAS DRYER

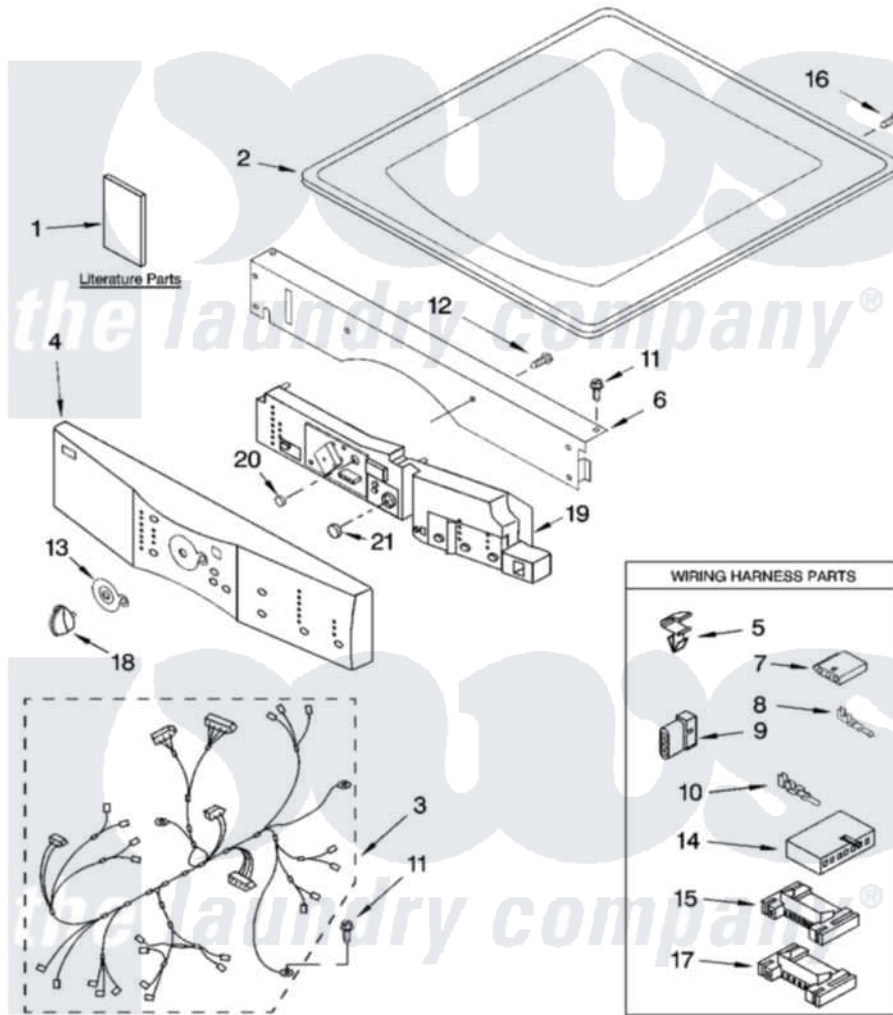

7-04 Printed in U.S.A. (djc)

1

Part No. 8180499

Whirlpool [Residential Whirlpool GGW9250PL0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|---------------|-------------------------------|
| 1 | 8530052 | | Not Available | Use & Care Guide |
| " | 8558723 | | Not Available | Tech Sheet |
| 2 | 8519251 | W10117263 | | Top |
| " | 3980096 | 3980357 | | Top |
| " | 8519252 | 3979307 | | Top |
| 3 | 8299950 | | | Harness, Main |
| 4 | 8558748 | | | Panel, Console |
| " | 8558751 | | | Panel, Console |
| " | 8558750 | | | Panel, Console |
| 5 | 3394427 | | | Clip-Harness |
| 6 | 8519271 | | | Bracket, Console |
| 7 | 353424 | | | Plug, Terminal |
| 8 | 94614 | | | Terminal |
| 9 | 3936144 | | | Do-It-Yourself Repair Manuals |
| 10 | 94613 | 596797 | | Terminal |
| 11 | 3390647 | 488729 | | Screw |

| | | | |
|----|-------------------------|-------------------------|----------------------------|
| 12 | 488886 | 488787 | Screw |
| 13 | 8519406 | | Bezel, Cycle |
| 14 | 3936150 | | Connector, 7-Circuit |
| 15 | 3395683 | | Receptacle, Multi-Terminal |
| 16 | 8281225 | | Screw, 8-18 X 1/2 |
| 17 | 2203186 | | Connector, 5-Circuit |
| 18 | 46197020472 | 8181859 | Knob, Control |
| " | 46197020742 | 8182050 | Knob, Control |
| " | 46197020741 | 8182049 | Knob, Control |
| 19 | 8558753 | | User Interface |
| " | 8558756 | | User Interface |
| " | 8558755 | | User Interface |
| 20 | 8561811 | | Button, Start |
| 21 | 8561812 | Not Available | Button, Pause/Cancel |

