


# Whirlpool GGW9250PT2 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

For Models: GGW9250PW2, GGW9250PL2, GGW9250PT2  
(White/Platinum) (Pewter) (Biscuit)

GAS DRYER

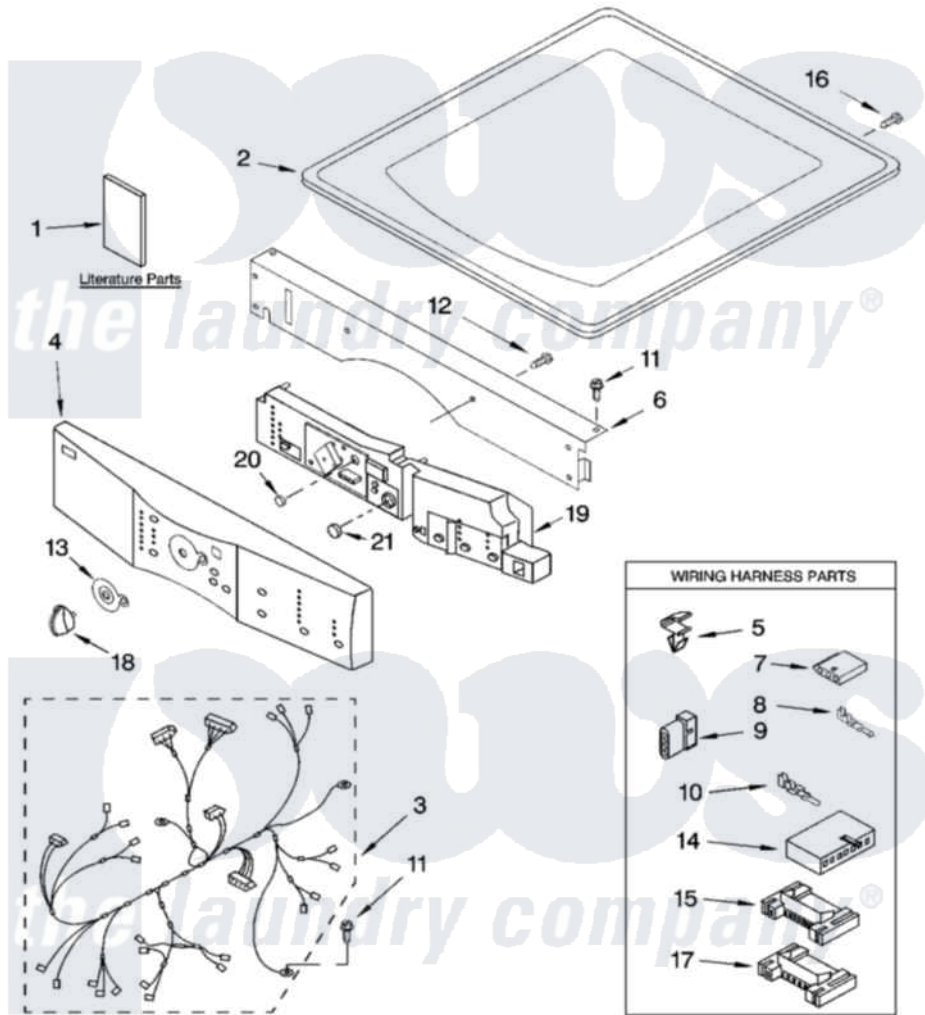

10-05 Litho in U.S.S. (LT)

1

Part No. 8180946

Whirlpool [Residential Whirlpool GGW9250PT2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578186		Not Available	Use & Care Guide
"	8558723		Not Available	Tech Sheet
"	8563723		Not Available	Guide, Quick Start
2	8519251	<a href="#">W10117263</a>		Top
"	3980096	<a href="#">3980357</a>		Top
"	8519252	<a href="#">3979307</a>		Top
3	<a href="#">8299950</a>			Harness, Main
4	<a href="#">8558748</a>			Panel, Console
"	<a href="#">8558751</a>			Panel, Console
"	<a href="#">8558750</a>			Panel, Console
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">8519271</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal

11	3390647	<a href="#">488729</a>	Screw
12	488886	<a href="#">488787</a>	Screw
13	<a href="#">8519406</a>		Bezel, Cycle
14	<a href="#">3936150</a>		Connector, 7-Circuit
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	<a href="#">8281225</a>		Screw, 8-18 X 1/2
17	<a href="#">2203186</a>		Connector, 5-Circuit
18	46197020472	<a href="#">8181859</a>	Knob, Control
"	46197020742	<a href="#">8182050</a>	Knob, Control
"	46197020741	<a href="#">8182049</a>	Knob, Control
19	<a href="#">8558753</a>		User Interface
"	<a href="#">8558756</a>		User Interface
"	<a href="#">8558755</a>		User Interface
20	<a href="#">8561811</a>		Button, Start
21	8561812	Not Available	Button, Pause/Cancel

