


Whirlpool GGW9260PW0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: GGW9260PW0, GGW9260PL0
(White/Platinum) (Pewter)

GAS DRYER

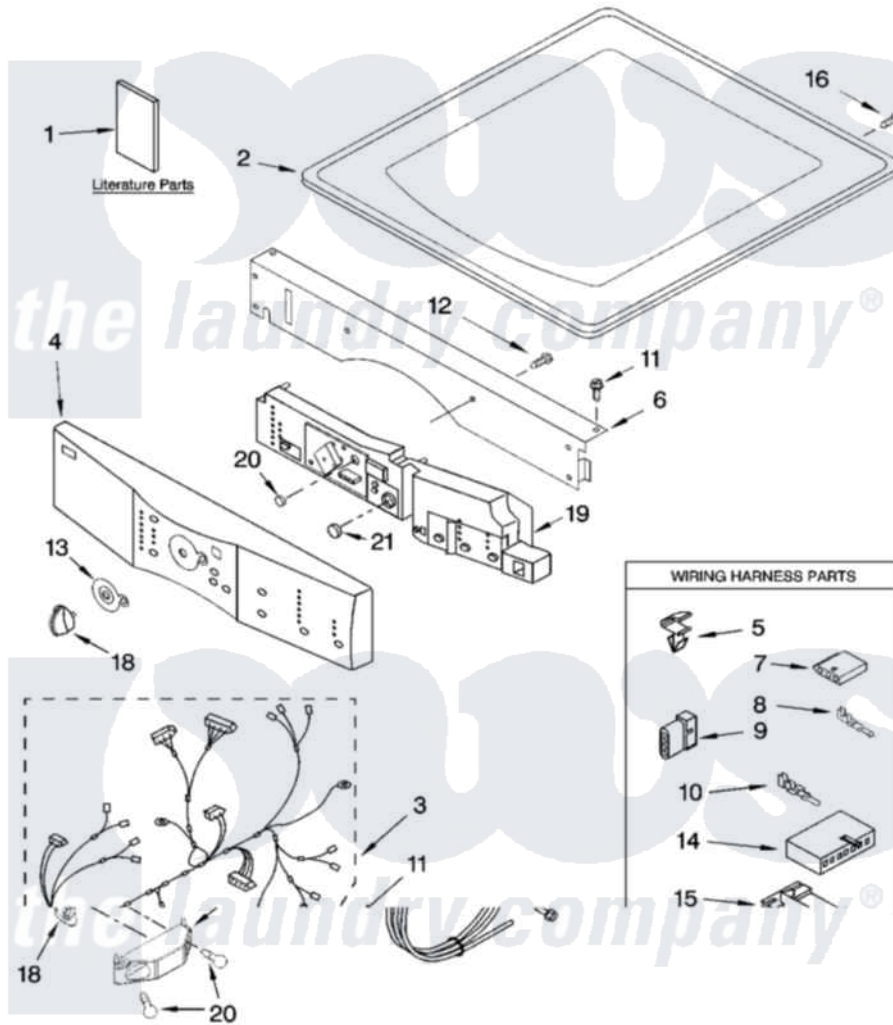

IMPORTANT: All Part Numbers Listed Are Whirlpool Numbers. Source Parts Through Whirlpool.

W10130888

3

[Whirlpool Residential Whirlpool GGW9260PW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8530063		Not Available	Use & Care Guide
"	8530065		Not Available	Tech Sheet
2	8519251	W10117263		Top
"	3980096	3980357		Top
3	8299950			Harness, Main
4	8558703			Panel, Console
"	8533601		Not Available	Panel, Console (Pewter)
5	3394427			Clip-Harness
6	8519271			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
12	488886	488787		Screw
13	8519406			Bezel, Cycle

14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	8281225		Screw, 8-18 X 1/2
17	2203186		Connector, 5-Circuit
18	46197020472	8181859	Knob, Control
"	46197020742	8182050	Knob, Control
19	8558704		User Interface
"	8533602		User Interface
20	8561811		Button, Start
21	8561812	Not Available	Button, Pause/Cancel

