


Whirlpool GGW9878PG0 01 - TOP AND CONSOLE PARTS

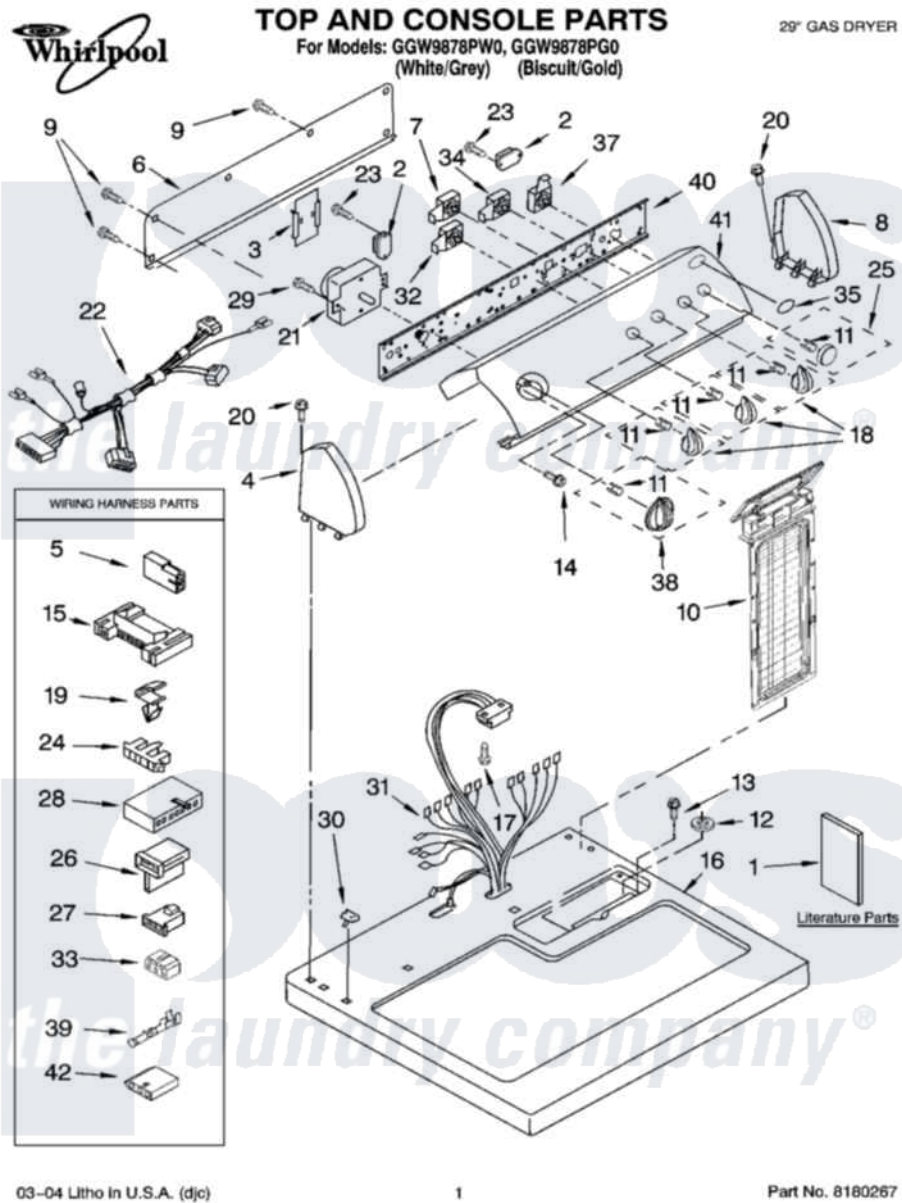

03-04 Litho in U.S.A. (djc)

1

Part No. 8180267

Whirlpool Residential Whirlpool GGW9878PG0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535830		Not Available	Literature Parts (Instructions, Installation)
"	LIT8533771		Not Available	Literature Parts (Sheet, Cycle Feature)
"	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8533776		Not Available	Literature Parts (Tech Sheet)
"	LIT8535825		Not Available	Literature Parts (Sheet, Feature Resource Saver)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3405281			Power Relay
3	3976623	W10116566		Control-Elec
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals

7	3405152		Switch, Wrinkle Shield
8	8271359	279962	Endcap
"	8271362	279965	Endcap
9	693995		Screw, Hex Head
10	8557857		Screen, Lint
"	8557858		Screen, Lint
11	8536939		Clip, Knob
12	237446	487596	Washer
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557927	8563993	Top
"	8557928	8563994	Top
17	343641	681414	Screw, 10AB X 1/2
18	8544937		Knob, Control
"	8544938		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	8299771		Timer Assembly
22	8283281		Harness, Console
23	3388228		Screw, 8-18 X 1/32
24	3397269		Connector, Timer
25	8544941		Knob, Push-To-Start
"	8544942		Knob, Push-To-Start
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	3936150		Connector, 7-Circuit
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299900		Harness, Wiring
32	8299970		Switch, Temperature
33	3347243		Block, Disconnect
34	3405151		Switch, End Of Cycle
35	8533990		Medallion
37	3977456		Switch, Push-To-Start
38	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
39	94614		Terminal
40	8544895		Bracket, Control
41	8545982		Panel, Control
"	8545984		Panel, Control
42	3936144		Do-It-Yourself Repair Manuals
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	3406839		Dry Rack Assembly
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Sprav B

" [799344](#)

Paint, Touch-Up)

" [4392900](#)

Paint, Bulk)

