


# Whirlpool GHW9100LQ2 03 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Models: GHW9100LW2, GHW9100LQ2  
(White/Platinum) (White/Blue)

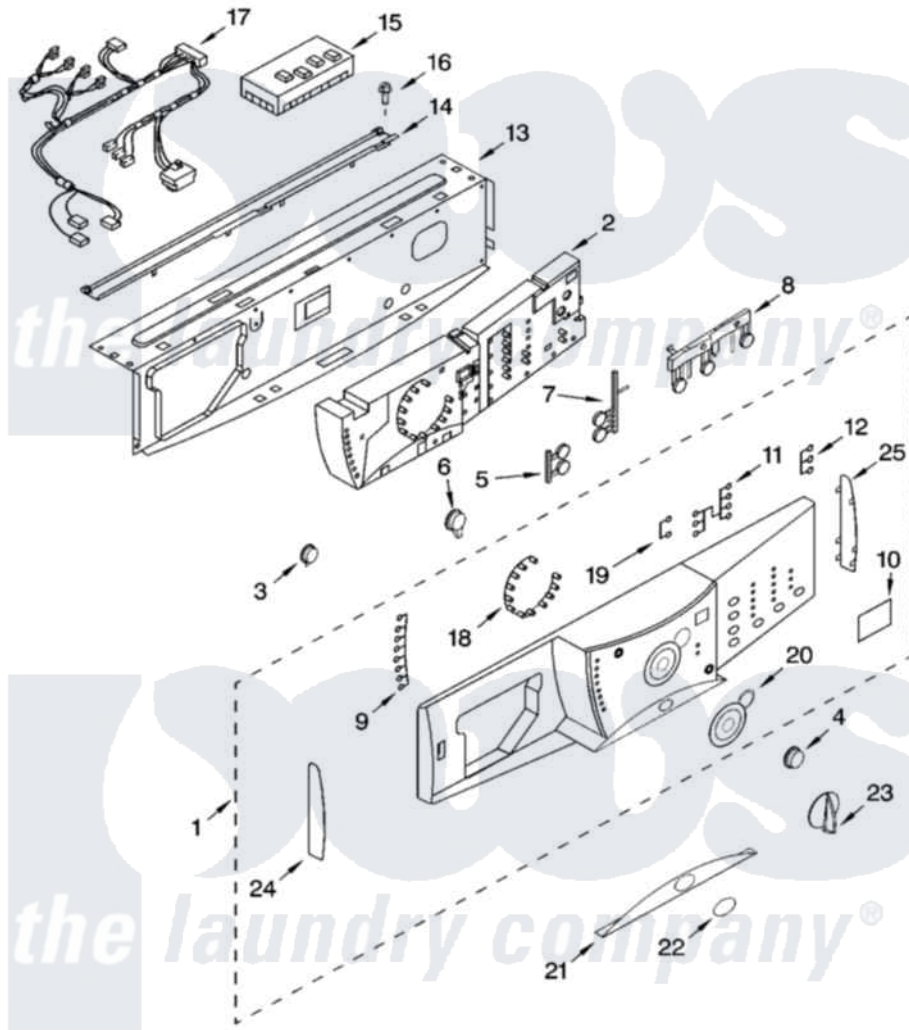

8180206

5

Whirlpool [Residential Whirlpool GHW9100LQ2 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8181885	<a href="#">8182290</a>		Panel-Control
"	8181886		Not Available	Panel, Control (Blue)
2	<a href="#">8181905</a>			User Interface
3	<a href="#">8181860</a>			Button, Power
4	<a href="#">8181861</a>			Button, Start
5	<a href="#">8181863</a>			Button Set, Soil Level
"	<a href="#">8181882</a>			Button Set, Soil Level
6	<a href="#">8181862</a>			Button, Pause/Cancel
7	<a href="#">8181889</a>			Button Set, Options
"	<a href="#">8181892</a>			Button Set, Options
8	<a href="#">8181865</a>			Button Set, Spin/Temperature
"	<a href="#">8181884</a>			Button Set, Spin/Temperature
9	<a href="#">8181868</a>			Light, Indicator
10	<a href="#">8181856</a>			Window, Display
11	<a href="#">8181908</a>			Light, Indicator
12	<a href="#">8181871</a>			Light, Indicator

13	8181639	Not Available	Brace, Front Top
14	8181640	<a href="#">8182800</a>	Channel, Water
15	8181923	<a href="#">8182221</a>	Control-Elec
16	8181756	<a href="#">488729</a>	Screw
17	<a href="#">8181783</a>		Harness, Wire
18	<a href="#">8181906</a>		Light, Indicator
19	<a href="#">8181907</a>		Light, Indicator
20	<a href="#">8181855</a>		Bezel, Knob
21	<a href="#">8181857</a>		Overlay, Door
22	8181858	<a href="#">8303811</a>	Badge, Assembly
23	<a href="#">8181859</a>		Knob, Control
"	<a href="#">8181881</a>		Knob, Control
24	<a href="#">8181852</a>		Endcap, Left
25	<a href="#">8181853</a>		Endcap, Right

