


Whirlpool GHW9100LW2 01 - TOP AND CABINET PARTS



TOP AND CABINET PARTS

For Models: GHW9100LW2, GHW9100LQ2
(White/Platinum) (White/Blue)

AUTOMATIC
WASHER

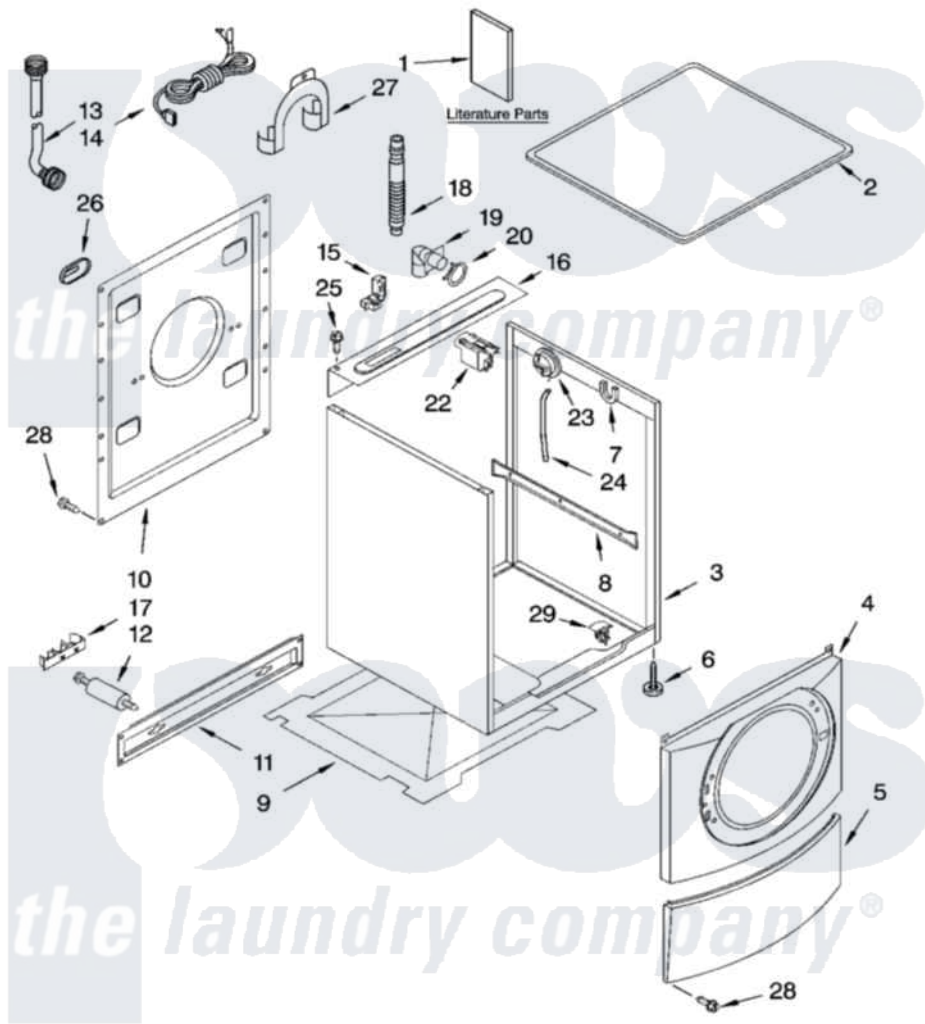

1-04 Printed in U.S.A. (awm)

1

Part No. 8180206

[Whirlpool Residential Whirlpool GHW9100LW2 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8182199		Not Available	Literature Parts (Use & Care Guide)
"	LIT8181790		Not Available	Literature Parts (Tech Sheet)
"	LIT8182197		Not Available	Literature Parts (Energy Guide)
"	LIT8182196		Not Available	Literature Parts (Quick Start Guide)
"	LIT8182198		Not Available	Literature Parts (Dispenser Guide)
"	LIT8182193		Not Available	Literature Parts (DVD-Instruction)
2	8181799	8181641		Top
3	8181630	8182609		Cabinet
4	8181838			Panel, Front
5	8181643			Toe Panel
6	8181636			Foot, Leveling
7	8181763			Bracket, Spring
8	8181634			Brace, Side Panel
9	8181635			Pan, Bottom

10	8182118	8182698	Panel, Rear
11	8182117	W10003040	Brace, Transport
12	8182124	W10289554A	Bolt
"	8182125	W10289554A	Bolt
13	8181706	76314	Hose, Inlet 6 Ft. Hose With Elbow
"	8181707	76314	Hose, Inlet 6 Ft. Hose With Elbow
14	8182120	8182649	Cord, Power
15	8181690	8182635	Strain Relief
16	8182116	W10138248	Brace, Rear
17	8181749	Not Available	Clamp, Tube Transportation
18	8181737		Hose, Drain
19	8181738		Connector, Hose Outlet
20	8181752	3367052	Clamp, Hose
22	8181683	W10326464	Filter, Interference
23	8181695		Switch, Pressure
24	8181739	W10004260	Hose, Pressure Switch
25	8181691		Screw
26	8181767	8540268	Cover, Transport
27	8181768	W10280024	U-Bend, Drain Hose
28	8181828	488729	Screw
29	8181930	W10085220	Microswitch
"	BLANK	Not Available	Following Parts Not Illustrated
"	8182109		Harness Channel

the laundry company[®]

the laundry company[®]