


# Whirlpool GHW9160PW0 03 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Model: GHW9160PW0  
(White/Platinum)

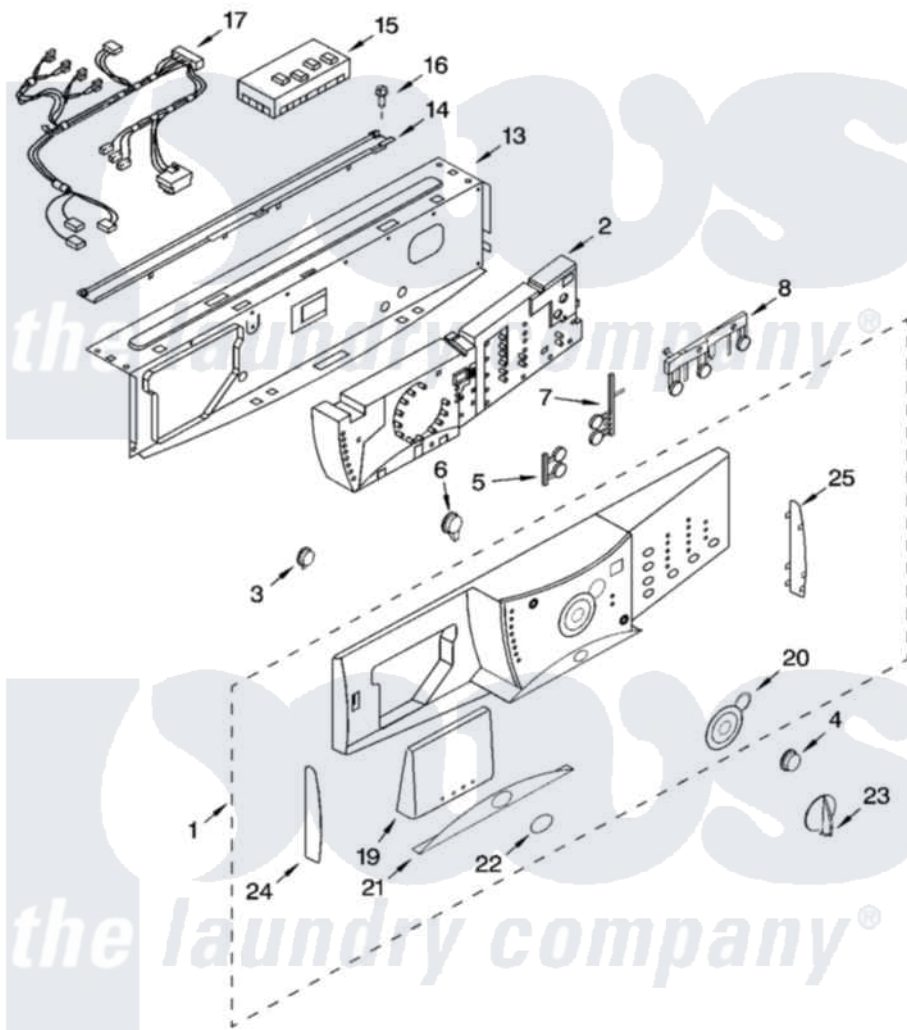

8180464

5

Whirlpool Residential Whirlpool GHW9160PW0 Washer Parts Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8182611</a>			Panel, Control
2	<a href="#">8182273</a>			User Interface
3	<a href="#">8181860</a>			Button, Power
4	<a href="#">8181861</a>			Button, Start
5	<a href="#">8181863</a>			Button Set, Soil Level
6	<a href="#">8182275</a>			Button, Pause/Cancel
7	<a href="#">8181889</a>			Button Set, Options
8	<a href="#">8181865</a>			Button Set, Spin/Temperature
13	8181639		Not Available	Brace, Front Top
14	8181640	<a href="#">8182800</a>		Channel, Water
15	8182306	<a href="#">8182696</a>		Microcomputer, Machine Control
16	8181756	<a href="#">488729</a>		Screw
17	<a href="#">8181783</a>			Harness, Wire
19	<a href="#">8181887</a>			Handle, Drawer
20	<a href="#">8181855</a>			Bezel, Knob
21	<a href="#">8181857</a>			Overlay, Door

22	8181858	<a href="#">8303811</a>	Badge, Assembly
23	<a href="#">8181859</a>		Knob, Control
24	<a href="#">8181852</a>		Endcap, Left
25	<a href="#">8181853</a>		Endcap, Right

