


Whirlpool GHW9250ML1 03 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: GHW9250MW1, GHW9250MQ1, GHW9250ML1, GHW9250MT1
 (White/Platinum) (White/Blue) (Pewter) (Biscuit)

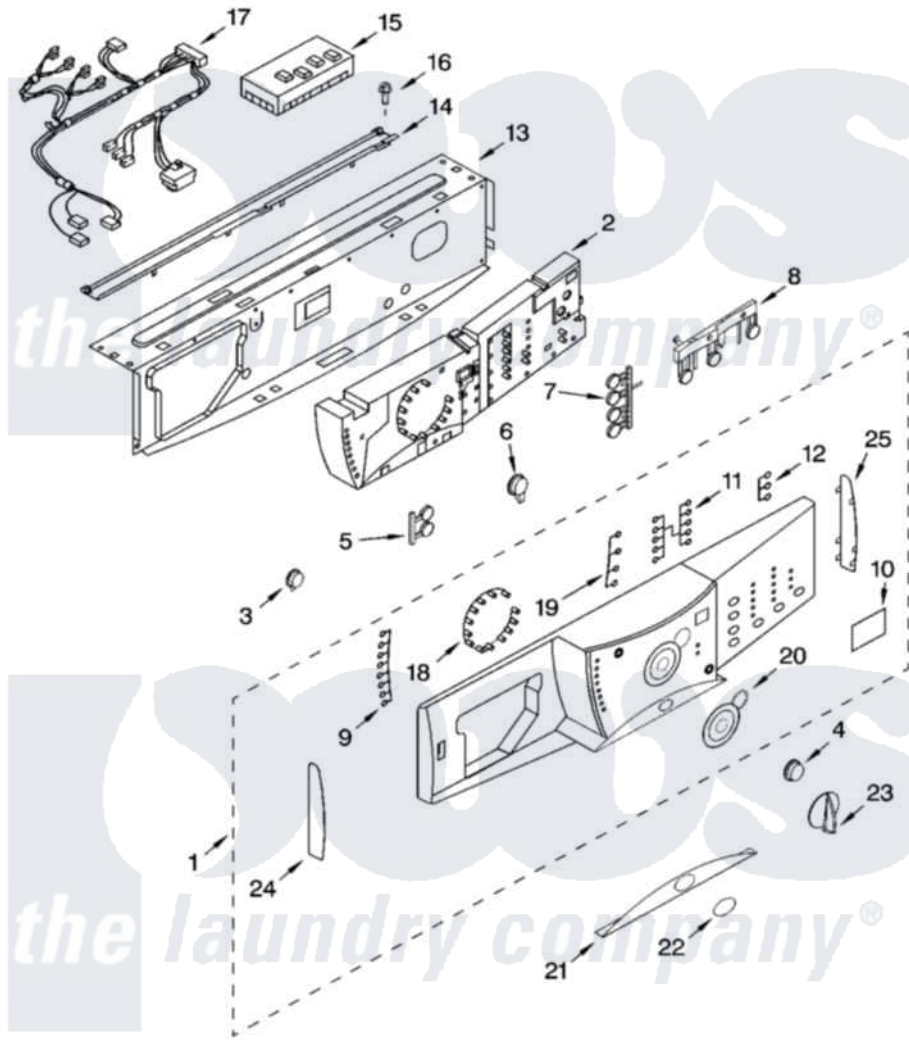

8180205

5

Whirlpool [Residential Whirlpool GHW9250ML1 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182088		Not Available	Panel, Control (Platinum)
"	8182089			Panel, Control
"	8182090			Panel, Control
"	8182091			Panel, Control
2	8182056			User Interface
3	8181860			Button, Power
4	8181861			Button, Start
5	8181863			Button Set, Soil Level
"	8181882			Button Set, Soil Level
"	8182052			Button Set, Soil Level
"	8182053			Button Set, Soil Level
6	8181862			Button, Pause/Cancel
7	8181864			Button Set, Options
"	8181883			Button Set, Options
"	8182068			Button Set, Options
"	8182069			Button Set, Options

8	8181865		Button Set, Spin/Temperature
"	8181884		Button Set, Spin/Temperature
"	8182054		Button Set, Spin/Temperature
"	8182055		Button Set, Spin/Temperature
9	8181868		Light, Indicator
10	8181856		Window, Display
11	8181870		Light, Indicator
12	8181871		Light, Indicator
13	8181639	Not Available	Brace, Front Top
14	8181640	8182800	Channel, Water
15	8182057	8182664	Control-Elec
16	8181756	488729	Screw
17	8181784		Harness, Wire
18	8182058		Light, Indicator
19	8181869		Light, Indicator
20	8181855		Bezel, Knob
21	8181857		Overlay, Door
22	8181858	8303811	Badge, Assembly
23	8181859		Knob, Control
"	8181881		Knob, Control
"	8182050		Knob, Control
"	8182049		Knob, Control
24	8181852		Endcap, Left
"	8182064		Endcap, Left
"	8182066		Endcap, Left
25	8181853		Endcap, Right
"	8182065		Endcap, Right
"	8182067		Endcap, Right

the laundry company[®]

the laundry company[®]