


# Whirlpool GHW9250MW0 03 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Models: GHW9250MW0, GHW9250MQ0, GHW9250ML0, GHW9250MT0  
 (White/Platinum) (White/Blue) (Pewter) (Biscuit)

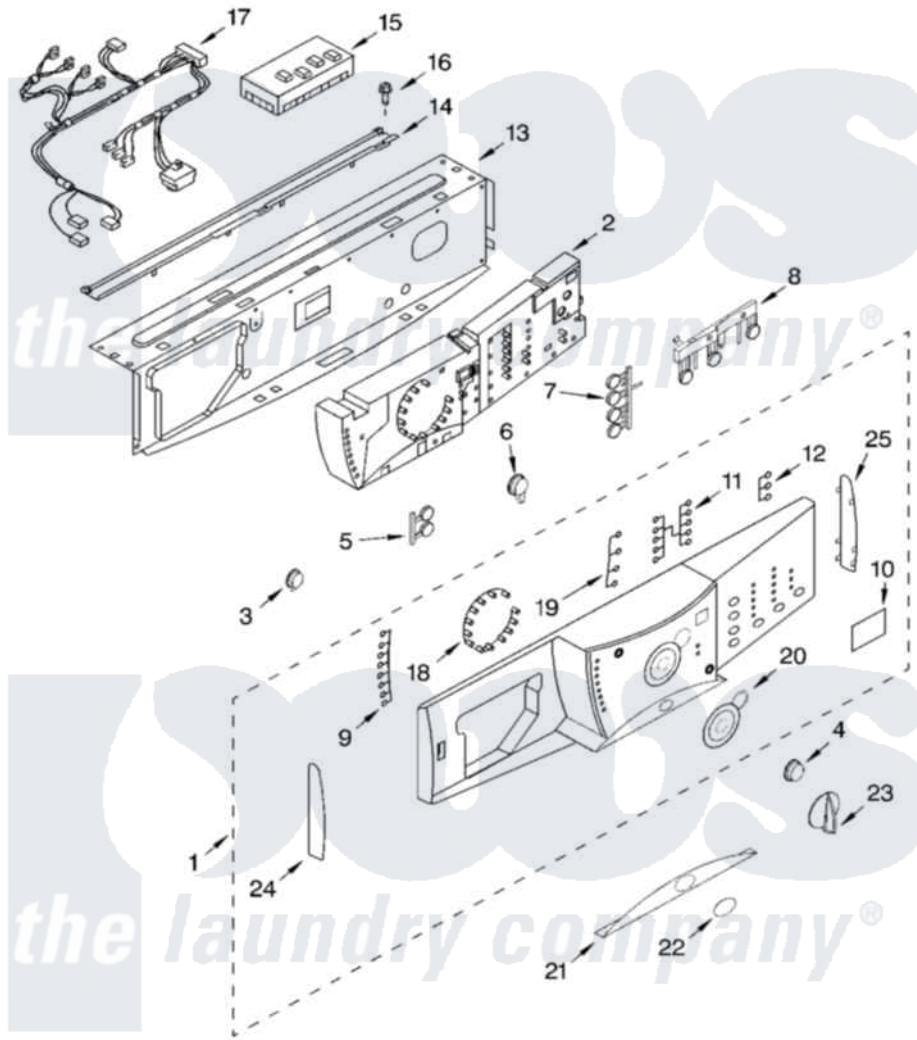

8182051

5

Whirlpool Residential Whirlpool GHW9250MW0 Washer Parts Parts Diagram 03 - CONTROL PANEL PARTS  
 Click on the part number to view part

| Item | Original Part Number    | Replaced By | Status        | Part Description          |
|------|-------------------------|-------------|---------------|---------------------------|
| 1    | 8182088                 |             | Not Available | Panel, Control (Platinum) |
| "    | <a href="#">8182089</a> |             |               | Panel, Control            |
| "    | <a href="#">8182090</a> |             |               | Panel, Control            |
| "    | <a href="#">8182091</a> |             |               | Panel, Control            |
| 2    | <a href="#">8182056</a> |             |               | User Interface            |
| 3    | <a href="#">8181860</a> |             |               | Button, Power             |
| 4    | <a href="#">8181861</a> |             |               | Button, Start             |
| 5    | <a href="#">8181863</a> |             |               | Button Set, Soil Level    |
| "    | <a href="#">8181882</a> |             |               | Button Set, Soil Level    |
| "    | <a href="#">8182052</a> |             |               | Button Set, Soil Level    |
| "    | <a href="#">8182053</a> |             |               | Button Set, Soil Level    |
| 6    | <a href="#">8181862</a> |             |               | Button, Pause/Cancel      |
| 7    | <a href="#">8181864</a> |             |               | Button Set, Options       |
| "    | <a href="#">8181883</a> |             |               | Button Set, Options       |
| "    | <a href="#">8182068</a> |             |               | Button Set, Options       |
| "    | <a href="#">8182069</a> |             |               | Button Set, Options       |

|    |                         |                         |                              |
|----|-------------------------|-------------------------|------------------------------|
| 8  | <a href="#">8181865</a> |                         | Button Set, Spin/Temperature |
| "  | <a href="#">8181884</a> |                         | Button Set, Spin/Temperature |
| "  | <a href="#">8182054</a> |                         | Button Set, Spin/Temperature |
| "  | <a href="#">8182055</a> |                         | Button Set, Spin/Temperature |
| 9  | <a href="#">8181868</a> |                         | Light, Indicator             |
| 10 | <a href="#">8181856</a> |                         | Window, Display              |
| 11 | <a href="#">8181870</a> |                         | Light, Indicator             |
| 12 | <a href="#">8181871</a> |                         | Light, Indicator             |
| 13 | 8181639                 | Not Available           | Brace, Front Top             |
| 14 | 8181640                 | <a href="#">8182800</a> | Channel, Water               |
| 15 | 8182057                 | <a href="#">8182664</a> | Control-Elec                 |
| 16 | 8181756                 | <a href="#">488729</a>  | Screw                        |
| 17 | <a href="#">8181784</a> |                         | Harness, Wire                |
| 18 | <a href="#">8182058</a> |                         | Light, Indicator             |
| 19 | <a href="#">8181869</a> |                         | Light, Indicator             |
| 20 | <a href="#">8181855</a> |                         | Bezel, Knob                  |
| 21 | <a href="#">8181857</a> |                         | Overlay, Door                |
| 22 | 8181858                 | <a href="#">8303811</a> | Badge, Assembly              |
| 23 | <a href="#">8181859</a> |                         | Knob, Control                |
| "  | <a href="#">8181881</a> |                         | Knob, Control                |
| "  | <a href="#">8182050</a> |                         | Knob, Control                |
| "  | <a href="#">8182049</a> |                         | Knob, Control                |
| 24 | <a href="#">8181852</a> |                         | Endcap, Left                 |
| "  | <a href="#">8182064</a> |                         | Endcap, Left                 |
| "  | <a href="#">8182066</a> |                         | Endcap, Left                 |
| 25 | <a href="#">8181853</a> |                         | Endcap, Right                |
| "  | <a href="#">8182065</a> |                         | Endcap, Right                |
| "  | <a href="#">8182067</a> |                         | Endcap, Right                |

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>