


Whirlpool GHW9300PW1 01 - TOP AND CABINET PARTS

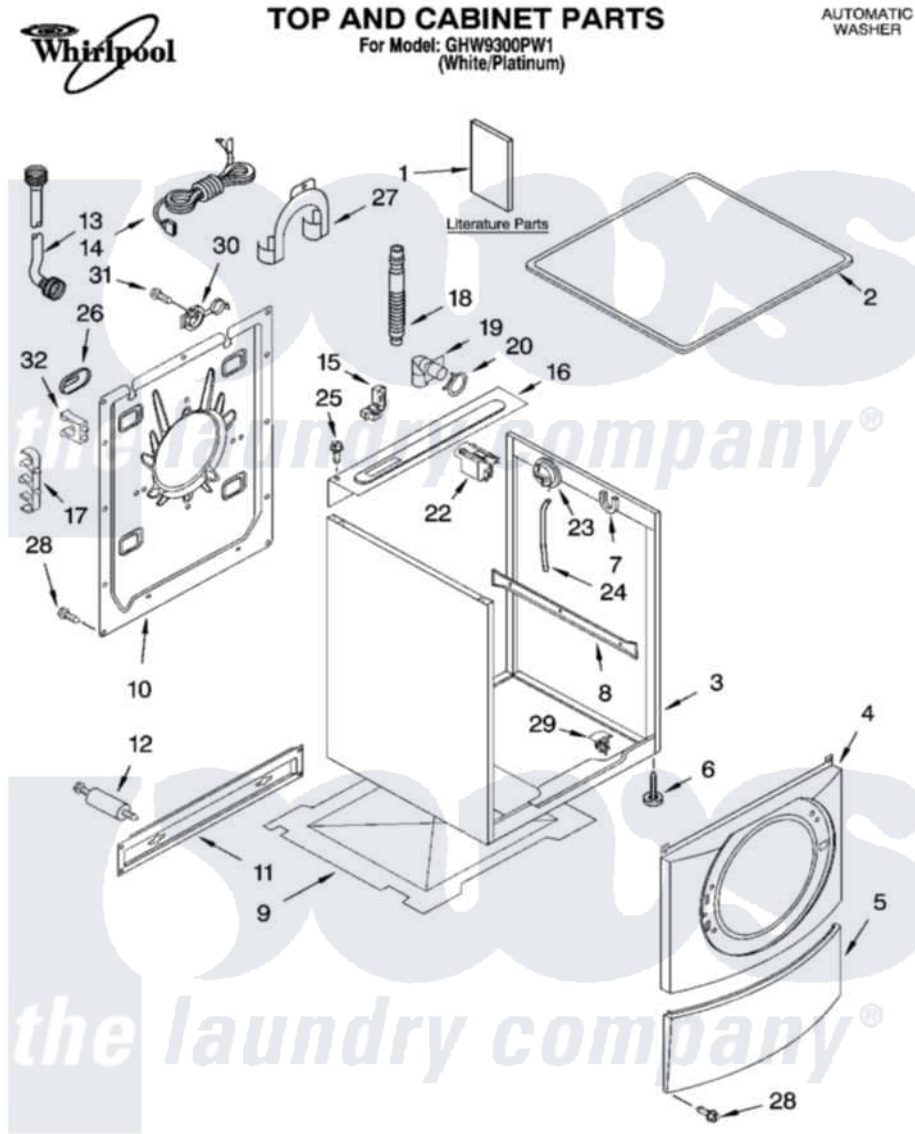

10-05 Printed in U.S.A. (drd)

1

Part No. 8180676

Whirlpool Residential Whirlpool GHW9300PW1 Washer Parts Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182675		Not Available	Use & Care Guide
"	8182677			Tech Sheet
"	8182618		Not Available	Energy Guide
"	8182658			Quick Start Guide
"	8182270		Not Available	DVD-Instruction
2	8181799	8181641		Top
3	8181630	8182609		Cabinet
4	8181838			Panel, Front
5	8181643			Toe Panel
6	8181636			Foot, Leveling
7	8181763			Bracket, Spring
8	8181634			Brace, Side Panel
9	8181635			Pan, Bottom
10	8182698			Panel, Rear
11	8182661	W10003040		Brace, Transport
12	8182124	W10289554A		Bolt

"	8182125	W10289554A	Bolt
13	8181706	76314	Hose, Inlet 6 Ft. Hose With Elbow
"	8181707	76314	Hose, Inlet 6 Ft. Hose With Elbow
14	8182649		Cord, Power
15	8182635		Strain Relief
16	8182607	W10138248	Brace, Rear
17	8182701		Clip, Outer Hose Holder
18	8181737		Hose, Drain
19	8181738		Connector, Hose Outlet
20	8181752	3367052	Clamp, Hose
22	8181683	W10326464	Filter, Interference
23	8181695		Switch, Pressure
24	8181739	W10004260	Hose, Pressure Switch
25	8181691		Screw
26	8182700	8540268	Cover, Transport
27	8181768	W10280024	U-Bend, Drain Hose
28	8181828	488729	Screw
29	8181930	W10085220	Microswitch
30	8182699		Grommet, Cord Support
31	8182201		Screw, 3 X 8 mm
32	8182702		Clip, Outer Hose Holder
"	N/A	Not Available	FOLLOWING PARTS NOT ILLUSTRATED
"	8182109		Harness Channel

