


Whirlpool GHW9300PW1 02 - DOOR AND LATCH PARTS

DOOR AND LATCH PARTS

For Model: GHW9300PW1
(White/Platinum)

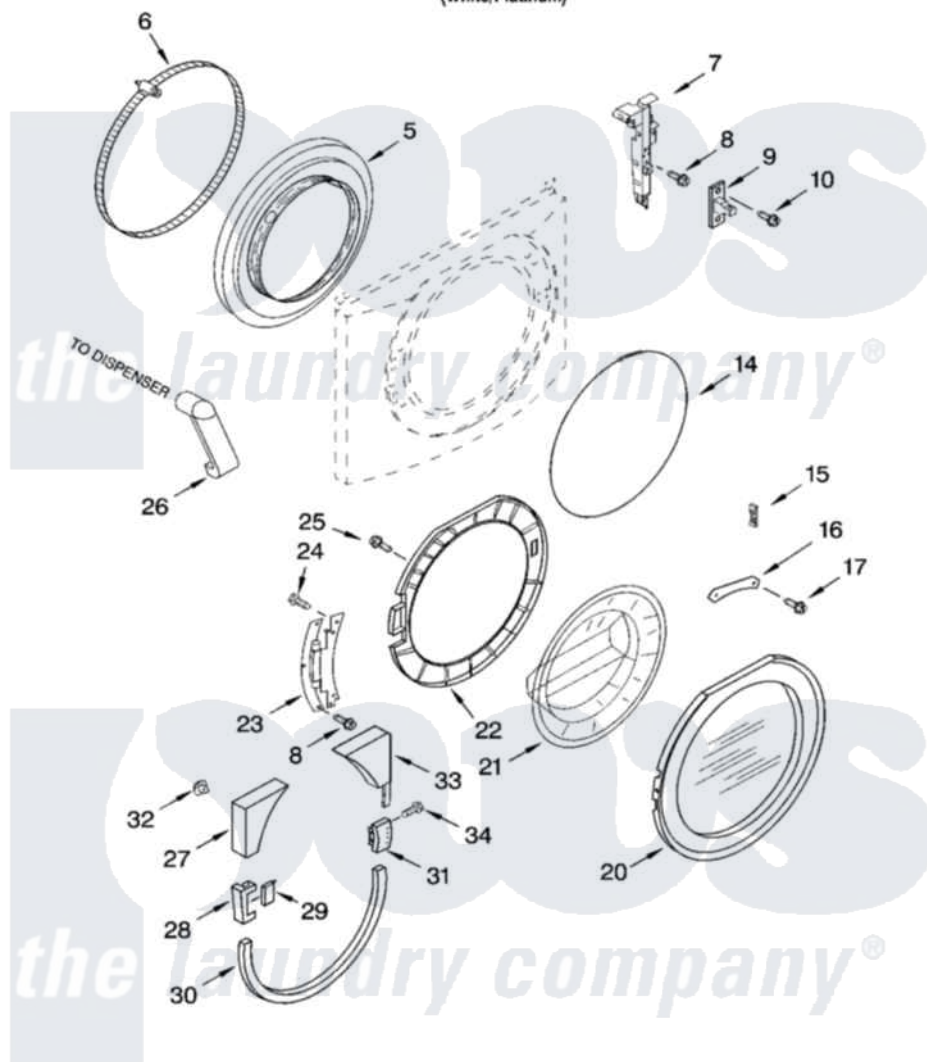

8180676

3

Whirlpool [Residential Whirlpool GHW9300PW1 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
5	8182119			Bellow
6	8181663	8182210		Clamp, Bellow
7	8182634			Lock, Door
8	8181760	8540725		Screw
9	8181651			Hook, Door
10	8181758	8182214		Screw
14	8181664	8182211		Clamp, Bellow To Front Panel
15	8181659	W10128586		Clamp, Glass Support
16	8181650			Clamp, Glass
17	8181785			Screw
20	8181848	8182992		Door Frame Assembly
21	8181655			Glass, Door
22	8182628	W10163308		Frame
23	8181843			Hinge, Door
24	8181660			Screw
25	8181661			Screw, Actuator

26	8181718	Tube, Dispenser To Bellow
27	8181842	Trim, Upper Left
28	8181841	Cover, Hinge
29	8181844	Cover, Hinge
30	8181840	Trim, Lower
31	8181846	Handle, Door
32	8182779	Clip, Trim
33	8181839	Trim, Upper Right
34	8181759	3400805 Screw, 8-18 X 3/64

