


# Whirlpool GHW9300PW2 02 - DOOR AND LATCH PARTS

## DOOR AND LATCH PARTS

For Model: GHW9300PW2  
(White/Platinum)

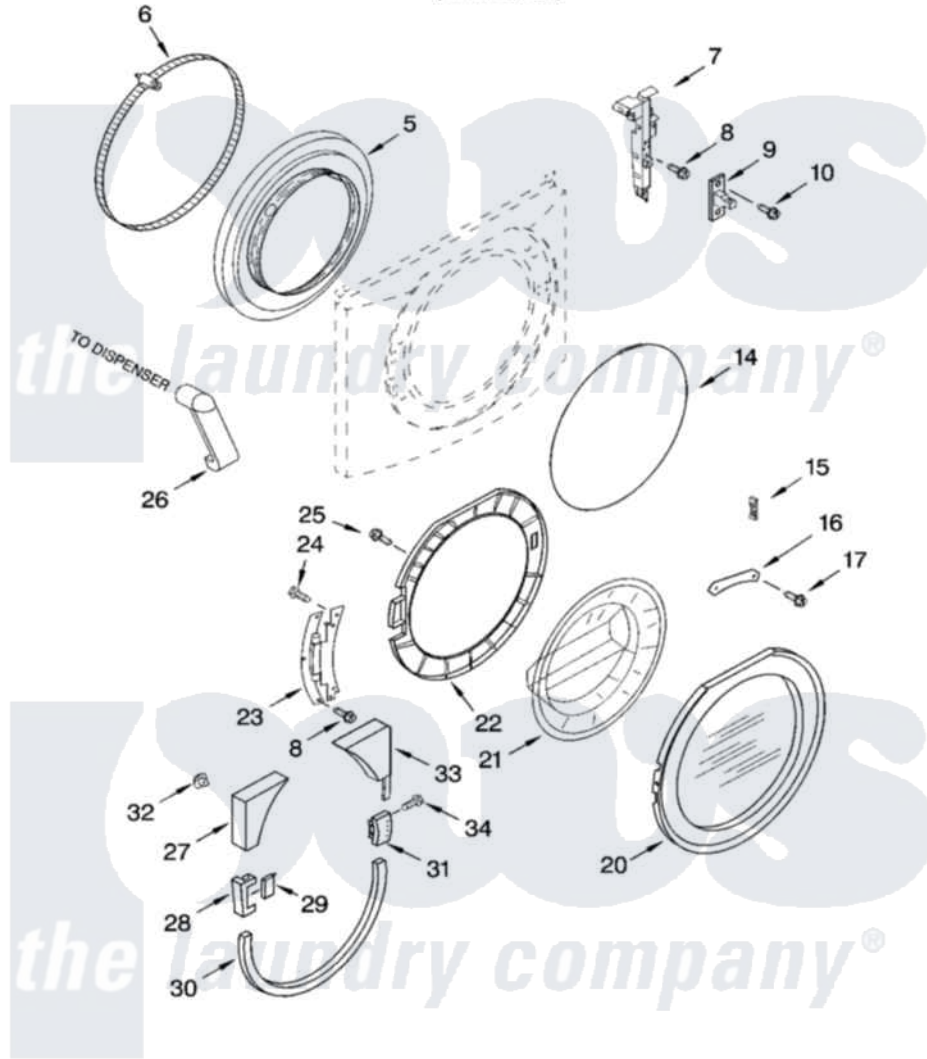

8181271

3

Whirlpool Residential Whirlpool GHW9300PW2 Washer Parts Parts Diagram 02 - DOOR AND LATCH PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
5	<a href="#">8182119</a>			Bellow
6	8181663	<a href="#">8182210</a>		Clamp, Bellow
7	<a href="#">8182634</a>			Lock, Door
8	8181760	<a href="#">8540725</a>		Screw
9	<a href="#">8181651</a>			Hook, Door
10	8181758	<a href="#">8182214</a>		Screw
14	8181664	<a href="#">8182211</a>		Clamp, Bellow To Front Panel
15	8181659	<a href="#">W10128586</a>		Clamp, Glass Support
16	<a href="#">8181650</a>			Clamp, Glass
17	<a href="#">8181785</a>			Screw
20	8181848	<a href="#">8182992</a>		Door Frame Assembly
21	<a href="#">8181655</a>			Glass, Door
22	8182628	<a href="#">W10163308</a>		Frame
23	<a href="#">8181843</a>			Hinge, Door
24	<a href="#">8181660</a>			Screw
25	<a href="#">8181661</a>			Screw, Actuator

26	<a href="#">8181718</a>	Tube, Dispenser To Bellow
27	<a href="#">8181842</a>	Trim, Upper Left
28	<a href="#">8181841</a>	Cover, Hinge
29	<a href="#">8181844</a>	Cover, Hinge
30	<a href="#">8181840</a>	Trim, Lower
31	<a href="#">8181846</a>	Handle, Door
32	<a href="#">8182779</a>	Clip, Trim
33	<a href="#">8181839</a>	Trim, Upper Right
34	8181759	<a href="#">3400805</a> Screw, 8-18 X 3/64

