


Whirlpool GHW9300PW2 03 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Model: GHW9300PW2
(White/Platinum)

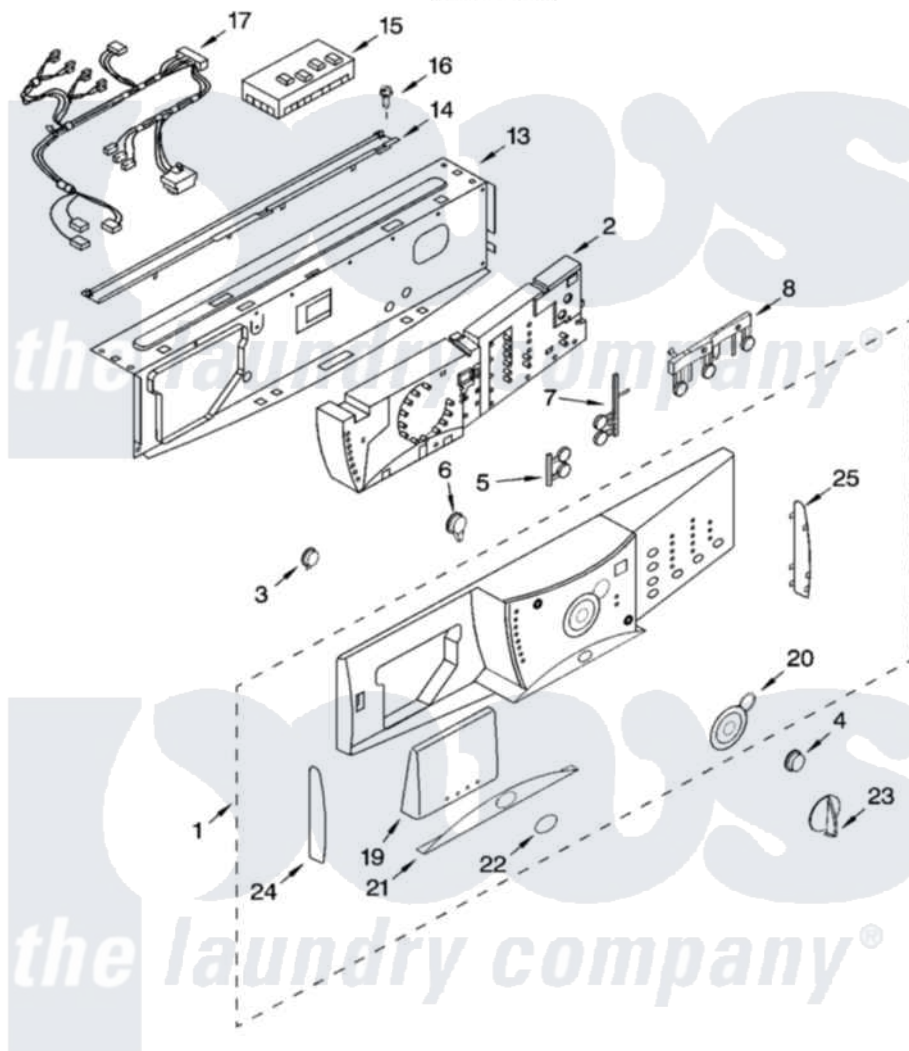

8181271

5

Whirlpool [Residential Whirlpool GHW9300PW2 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182716		Not Available	Panel, Control
2	8182785			User Interface
3	8181860			Button, Power
4	8181861			Button, Start
5	8181863			Button Set, Soil Level
6	8182275			Button, Pause/Cancel
7	8181889			Button Set, Options
8	8181865			Button Set, Spin/Temperature
13	8181639		Not Available	Brace, Front Top
14	8182800			Channel, Water
15	8182789			Microcomputer, Machine Control
16	8181756	488729		Screw
17	8182212			Harness, Wiring
19	8181887			Handle, Drawer
20	8181855			Bezel, Knob
21	8181857			Overlay, Door

22	8181858	8303811	Badge, Assembly
23	8181859		Knob, Control
24	8181852		Endcap, Left
25	8181853		Endcap, Right

