


# Whirlpool GHW9400PT1 03 - CONTROL PANEL PARTS

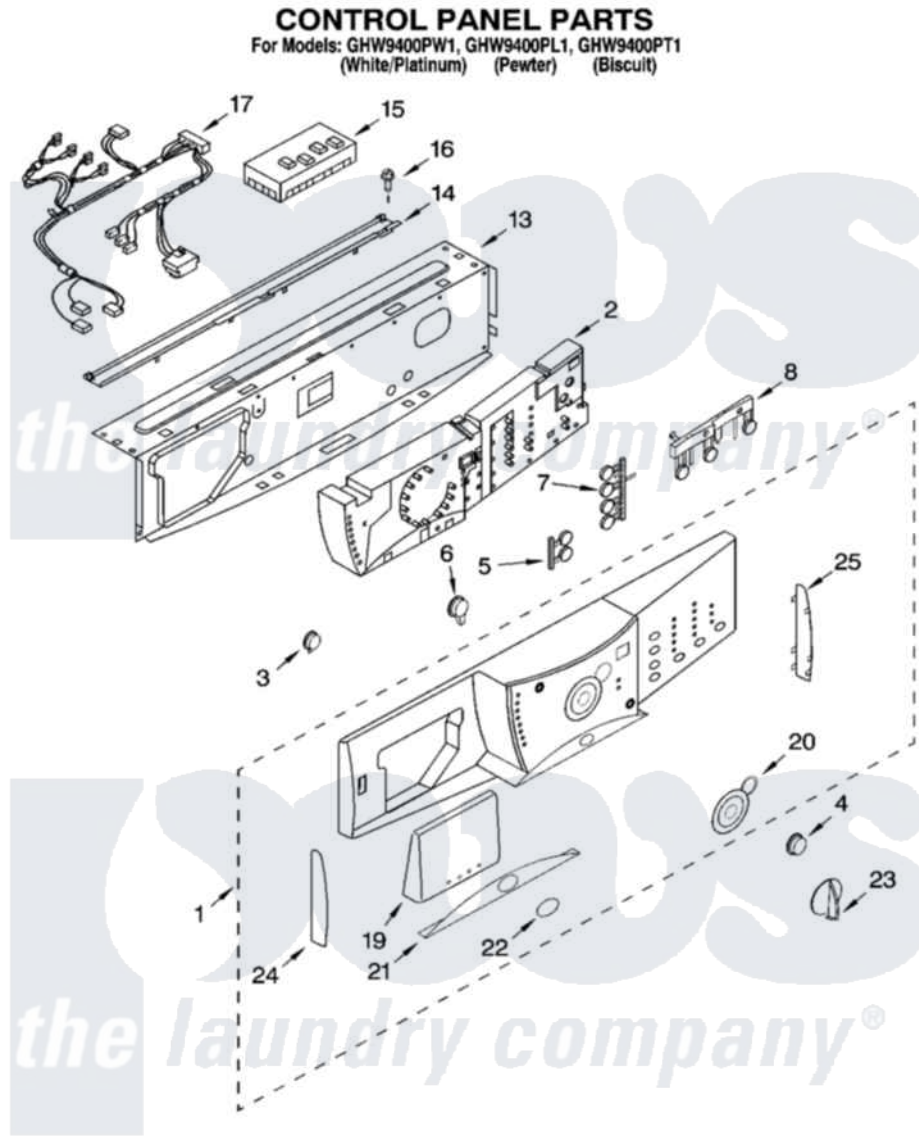

8180677

5

Whirlpool [Residential Whirlpool GHW9400PT1 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182709		Not Available	Panel, Control (Platinum)
"	<a href="#">8182710</a>			Panel, Control
"	<a href="#">8182711</a>			Panel, Control
2	<a href="#">8182717</a>			User Interface
3	<a href="#">8181860</a>			Button, Power
4	<a href="#">8181861</a>			Button, Start
5	<a href="#">8181863</a>			Button Set, Soil Level
"	<a href="#">8182052</a>			Button Set, Soil Level
"	<a href="#">8182053</a>			Button Set, Soil Level
6	<a href="#">8182275</a>			Button, Pause/Cancel
7	<a href="#">8181864</a>			Button Set, Options
"	<a href="#">8182068</a>			Button Set, Options
"	<a href="#">8182069</a>			Button Set, Options
8	<a href="#">8181865</a>			Button Set, Spin/Temperature
"	<a href="#">8182054</a>			Button Set, Spin/Temperature
"	<a href="#">8182055</a>			Button Set, Spin/Temperature

13	8182224	Not Available	Brace, Front Top
14	8181640	<a href="#">8182800</a>	Channel, Water
15	<a href="#">8182697</a>		Microcomputer, Machine Control
16	8181756	<a href="#">488729</a>	Screw
17	<a href="#">8182212</a>		Harness, Wiring
19	<a href="#">8181854</a>		Handle, Drawer
"	<a href="#">8182070</a>		Handle, Drawer
"	<a href="#">8182071</a>		Handle, Drawer
20	<a href="#">8181855</a>		Bezel, Knob
21	<a href="#">8181857</a>		Overlay, Door
22	8181858	<a href="#">8303811</a>	Badge, Assembly
23	<a href="#">8181859</a>		Knob, Control
"	<a href="#">8182050</a>		Knob, Control
"	<a href="#">8182049</a>		Knob, Control
24	<a href="#">8181852</a>		Endcap, Left
"	<a href="#">8182064</a>		Endcap, Left
"	<a href="#">8182066</a>		Endcap, Left
25	<a href="#">8181853</a>		Endcap, Right
"	<a href="#">8182065</a>		Endcap, Right
"	<a href="#">8182067</a>		Endcap, Right

