


Whirlpool GHW9400PW0 02 - DOOR AND LATCH PARTS

DOOR AND LATCH PARTS

For Models: GHW9400PW0, GHW9400PL0, GHW9400PT0
(White/Platinum) (Pewter) (Biscuit)

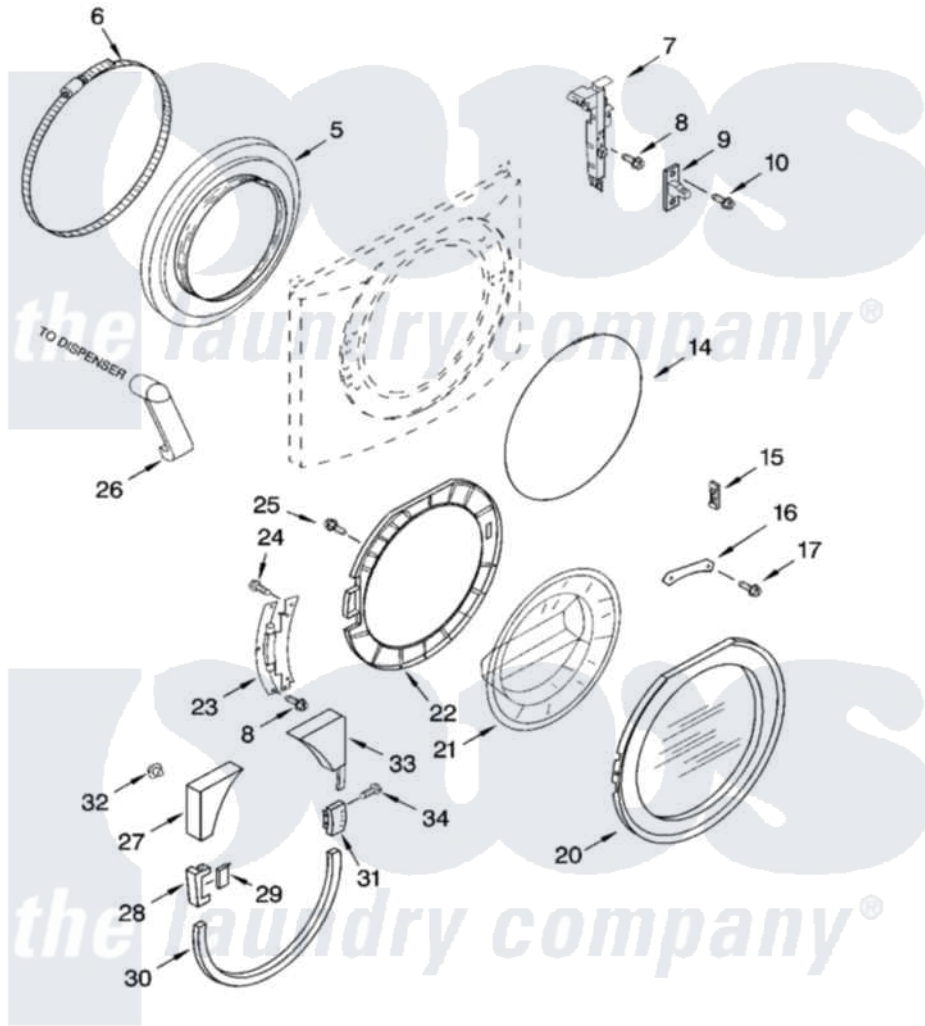

8180441

3

Whirlpool [Residential Whirlpool GHW9400PW0 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
5	8182119			Bellow
6	8182210			Clamp, Bellow
7	8181700	8182634		Lock, Door
8	8181760	8540725		Screw
9	8181651			Hook, Door
10	8181758	8182214		Screw
14	8182211			Clamp, Bellow To Front Panel
15	8181659	W10128586		Clamp, Glass Support
16	8181650			Clamp, Glass
17	8181785			Screw
20	8182044	8182992		Door Frame Assembly
"	8182086	8182990		Frame
"	8182087		Not Available	Door Frame Asm (Biscuit)
21	8181655			Glass, Door
22	8181849	W10322338		Frame
"	8181658	W10163308		Frame

23	8181843		Hinge, Door
24	8181660		Screw
25	8181661		Screw, Actuator
26	8181718		Tube, Dispenser To Bellow
27	8181842		Trim, Upper Left
"	8182078	Not Available	Trim, Upper Left (Pewter)
"	8182079		Trim, Upper Left
28	8181841		Cover, Hinge
"	8182082	Not Available	Cover, Hinge (Outer) (Pewter)
"	8182083	Not Available	Cover, Hinge (Outer) (Biscuit)
29	8181844		Cover, Hinge
"	8182074		Cover, Hinge
"	8182075	Not Available	Cover, Hinge (Inner) (Biscuit)
30	8181840		Trim, Lower
"	8182072		Trim, Lower
"	8182073	Not Available	Trim, Lower (Biscuit)
31	8181846		Handle, Door
"	8182080		Handle, Door
"	8182081		Handle, Door
32	8181929		Clip, Trim
33	8181839		Trim, Upper Right
"	8182076		Trim, Upper Right
"	8182077		Trim, Upper Right
34	8181759	3400805	Screw, 8-18 X 3/64

the laundry company[®]

the laundry company[®]