


Whirlpool GHW9400PW0 03 - CONTROL PANEL PARTS

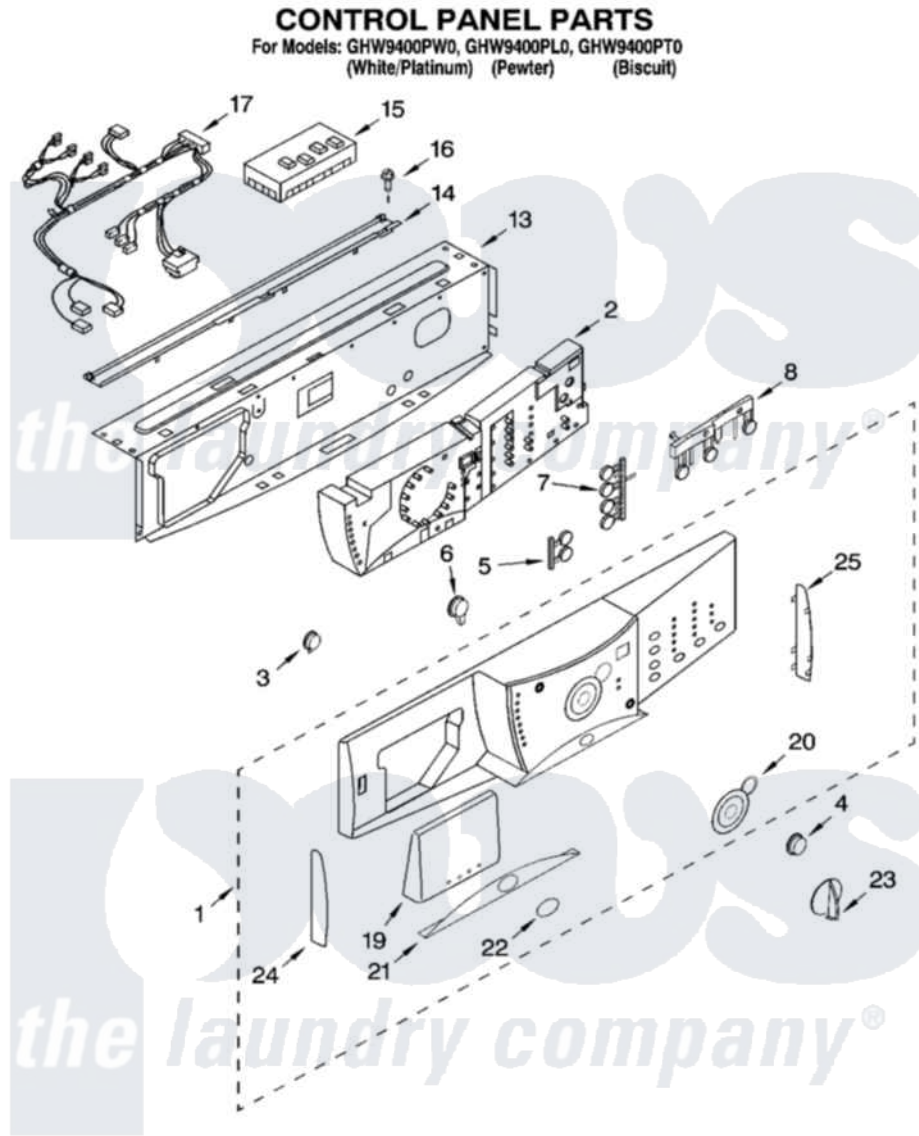

8180441

5

Whirlpool [Residential Whirlpool GHW9400PW0 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182653		Not Available	Panel, Control (Platinum)
"	8182654		Not Available	Panel, Control (Pewter)
"	8182655			Panel, Control
2	8182691	8182717		User Interface
3	8181860			Button, Power
4	8181861			Button, Start
5	8181863			Button Set, Soil Level
"	8182052			Button Set, Soil Level
"	8182053			Button Set, Soil Level
6	8182275			Button, Pause/Cancel
7	8181864			Button Set, Options
"	8182068			Button Set, Options
"	8182069			Button Set, Options
8	8181865			Button Set, Spin/Temperature
"	8182054			Button Set, Spin/Temperature
"	8182055			Button Set, Spin/Temperature

13	8182224	Not Available	Brace, Front Top
14	8181640	8182800	Channel, Water
15	8182280	8182697	Microcomputer, Machine Control
16	8181756	488729	Screw
17	8182212		Harness, Wiring
19	8181854		Handle, Drawer
"	8182070		Handle, Drawer
"	8182071		Handle, Drawer
20	8181855		Bezel, Knob
21	8181857		Overlay, Door
22	8181858	8303811	Badge, Assembly
23	8181859		Knob, Control
"	8182050		Knob, Control
"	8182049		Knob, Control
24	8181852		Endcap, Left
"	8182064		Endcap, Left
"	8182066		Endcap, Left
25	8181853		Endcap, Right
"	8182065		Endcap, Right
"	8182067		Endcap, Right

