


Whirlpool GHW9400PW1 03 - CONTROL PANEL PARTS

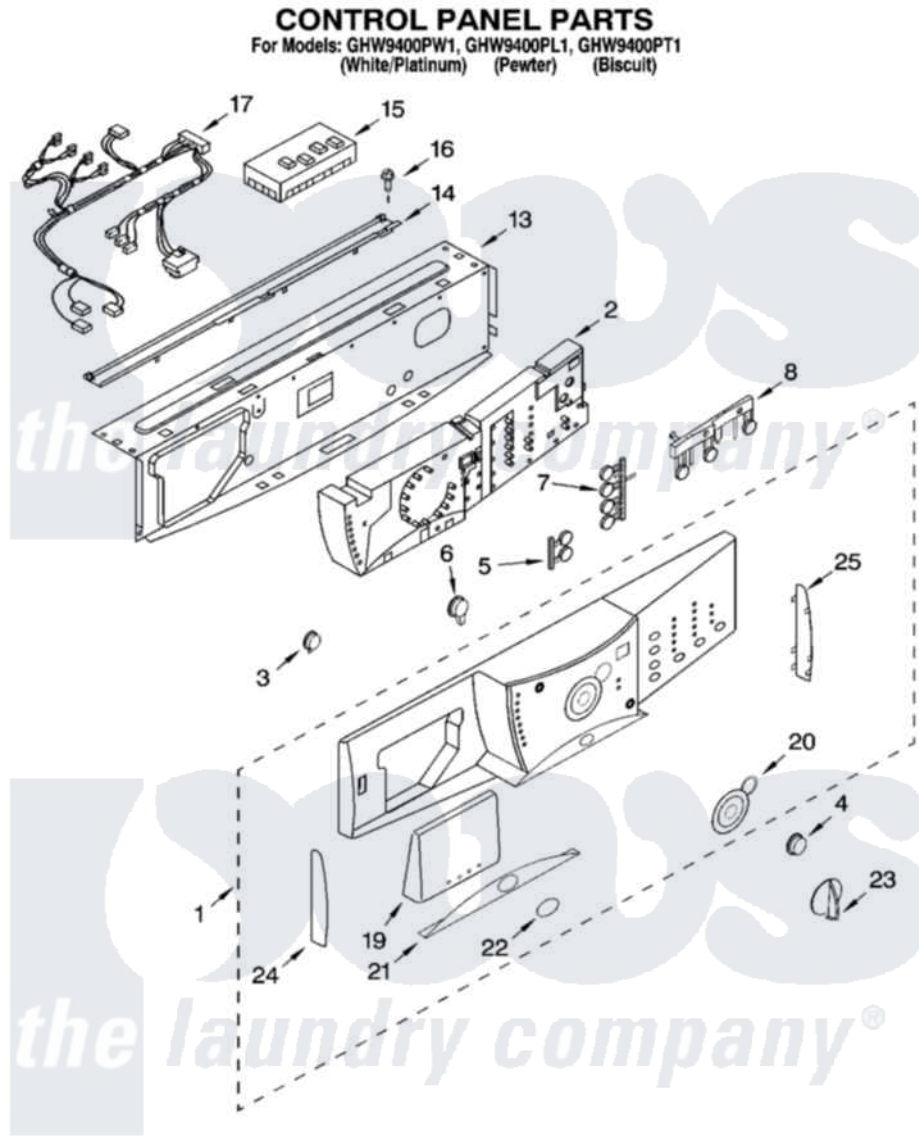

8180677

5

Whirlpool [Residential Whirlpool GHW9400PW1 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182709		Not Available	Panel, Control (Platinum)
"	8182710			Panel, Control
"	8182711			Panel, Control
2	8182717			User Interface
3	8181860			Button, Power
4	8181861			Button, Start
5	8181863			Button Set, Soil Level
"	8182052			Button Set, Soil Level
"	8182053			Button Set, Soil Level
6	8182275			Button, Pause/Cancel
7	8181864			Button Set, Options
"	8182068			Button Set, Options
"	8182069			Button Set, Options
8	8181865			Button Set, Spin/Temperature
"	8182054			Button Set, Spin/Temperature
"	8182055			Button Set, Spin/Temperature

13	8182224	Not Available	Brace, Front Top
14	8181640	8182800	Channel, Water
15	8182697		Microcomputer, Machine Control
16	8181756	488729	Screw
17	8182212		Harness, Wiring
19	8181854		Handle, Drawer
"	8182070		Handle, Drawer
"	8182071		Handle, Drawer
20	8181855		Bezel, Knob
21	8181857		Overlay, Door
22	8181858	8303811	Badge, Assembly
23	8181859		Knob, Control
"	8182050		Knob, Control
"	8182049		Knob, Control
24	8181852		Endcap, Left
"	8182064		Endcap, Left
"	8182066		Endcap, Left
25	8181853		Endcap, Right
"	8182065		Endcap, Right
"	8182067		Endcap, Right

