


# Whirlpool GHW9460PW0 02 - DOOR AND LATCH PARTS

## DOOR AND LATCH PARTS

For Models: GHW9460PW0, GHW9460PL0  
(White/Platinum) (Pewter)

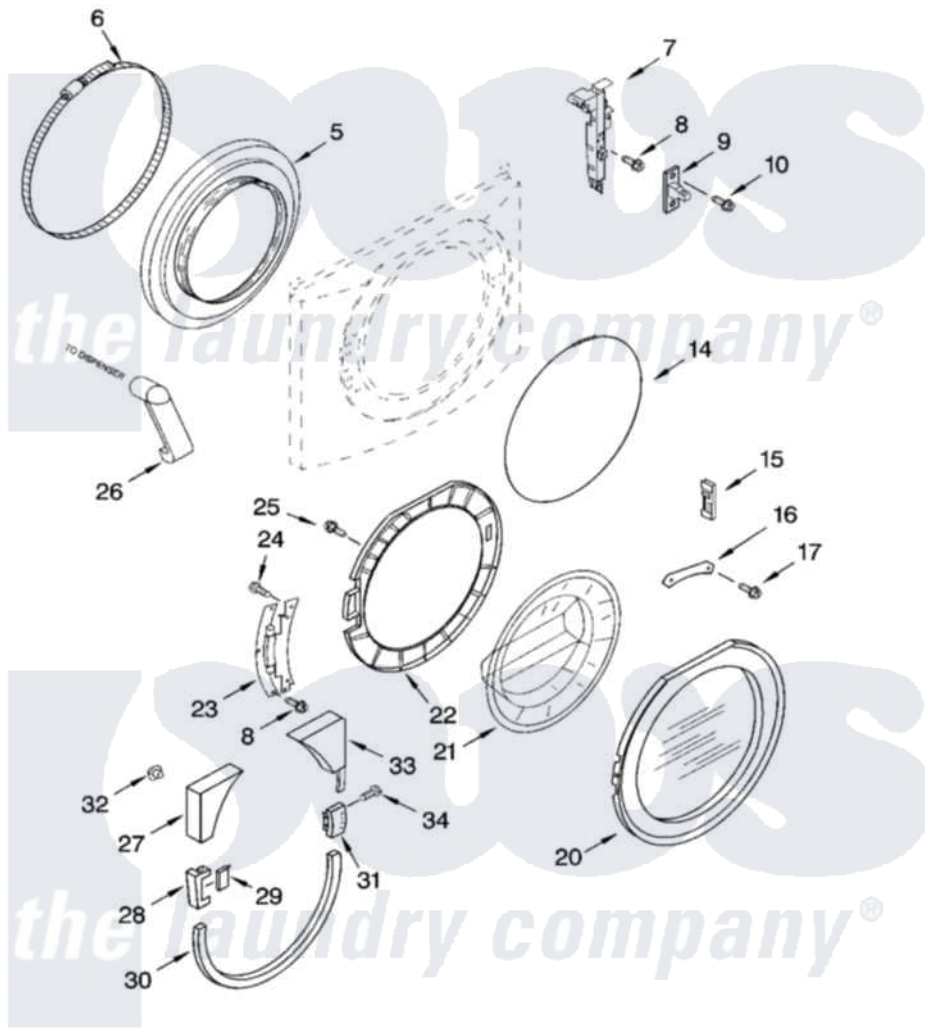

8180466

3

Whirlpool [Residential Whirlpool GHW9460PW0 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
5	<a href="#">8182119</a>			Bellow
6	<a href="#">8182210</a>			Clamp, Bellow
7	8181700	<a href="#">8182634</a>		Lock, Door
8	8181760	<a href="#">8540725</a>		Screw
9	<a href="#">8181651</a>			Hook, Door
10	8181758	<a href="#">8182214</a>		Screw
14	<a href="#">8182211</a>			Clamp, Bellow To Front Panel
15	8181659	<a href="#">W10128586</a>		Clamp, Glass Support
16	<a href="#">8181650</a>			Clamp, Glass
17	<a href="#">8181785</a>			Screw
20	8182044	<a href="#">8182992</a>		Door Frame Assembly
"	8182086	<a href="#">8182990</a>		Frame
21	<a href="#">8181655</a>			Glass, Door
22	8181849	<a href="#">W10322338</a>		Frame
"	8181658	<a href="#">W10163308</a>		Frame
23	<a href="#">8181843</a>			Hinge, Door

24	<a href="#">8181660</a>		Screw
25	<a href="#">8181661</a>		Screw, Actuator
26	<a href="#">8181718</a>		Tube, Dispenser To Bellow
27	<a href="#">8181842</a>		Trim, Upper Left
"	8182078	Not Available	Trim, Upper Left (Pewter)
28	<a href="#">8181841</a>		Cover, Hinge
"	8182082	Not Available	Cover, Hinge (Outer) (Pewter)
29	<a href="#">8181844</a>		Cover, Hinge
"	<a href="#">8182074</a>		Cover, Hinge
30	<a href="#">8181840</a>		Trim, Lower
"	<a href="#">8182072</a>		Trim, Lower
31	<a href="#">8181846</a>		Handle, Door
"	<a href="#">8182080</a>		Handle, Door
32	<a href="#">8181929</a>		Clip, Trim
33	<a href="#">8181839</a>		Trim, Upper Right
"	<a href="#">8182076</a>		Trim, Upper Right
34	8181759	<a href="#">3400805</a>	Screw, 8-18 X 3/64

