


# Whirlpool GHW9460PW0 03 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Models: GHW9460PW0, GHW9460PL0  
(White/Platinum) (Pewter)

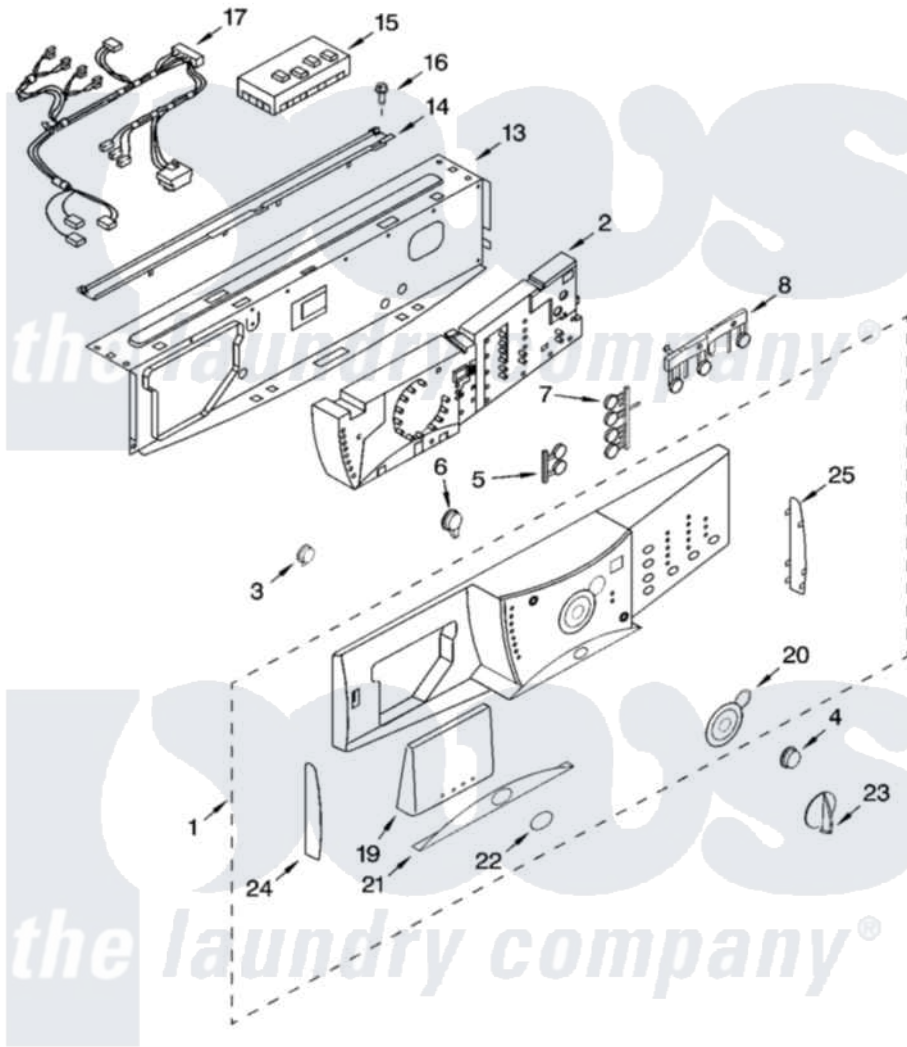

8180466

5

Whirlpool [Residential Whirlpool GHW9460PW0 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182656		Not Available	Panel, Control (Platinum)
"	8182657		Not Available	Panel, Control (Pewter)
2	8182691	<a href="#">8182717</a>		User Interface
3	<a href="#">8181860</a>			Button, Power
4	<a href="#">8181861</a>			Button, Start
5	<a href="#">8181863</a>			Button Set, Soil Level
"	<a href="#">8182052</a>			Button Set, Soil Level
6	<a href="#">8182275</a>			Button, Pause/Cancel
7	<a href="#">8181864</a>			Button Set, Options
"	<a href="#">8182068</a>			Button Set, Options
8	<a href="#">8181865</a>			Button Set, Spin/Temperature
"	<a href="#">8182054</a>			Button Set, Spin/Temperature
13	8182224		Not Available	Brace, Front Top
14	8181640	<a href="#">8182800</a>		Channel, Water
15	8182309	<a href="#">8182694</a>		Microcomputer, Machine Control
16	8181756	<a href="#">488729</a>		Screw

17	<a href="#">8182212</a>		Harness, Wiring
19	<a href="#">8181854</a>		Handle, Drawer
"	<a href="#">8182070</a>		Handle, Drawer
20	<a href="#">8181855</a>		Bezel, Knob
21	<a href="#">8181857</a>		Overlay, Door
22	8181858	<a href="#">8303811</a>	Badge, Assembly
23	<a href="#">8181859</a>		Knob, Control
"	<a href="#">8182050</a>		Knob, Control
24	<a href="#">8181852</a>		Endcap, Left
"	<a href="#">8182064</a>		Endcap, Left
25	<a href="#">8181853</a>		Endcap, Right
"	<a href="#">8182065</a>		Endcap, Right

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>