


Whirlpool GHW9460PW1 02 - DOOR AND LATCH PARTS

DOOR AND LATCH PARTS

For Models: GHW9460PW1, GHW9460PL1
(White/Platinum) (Pewter)

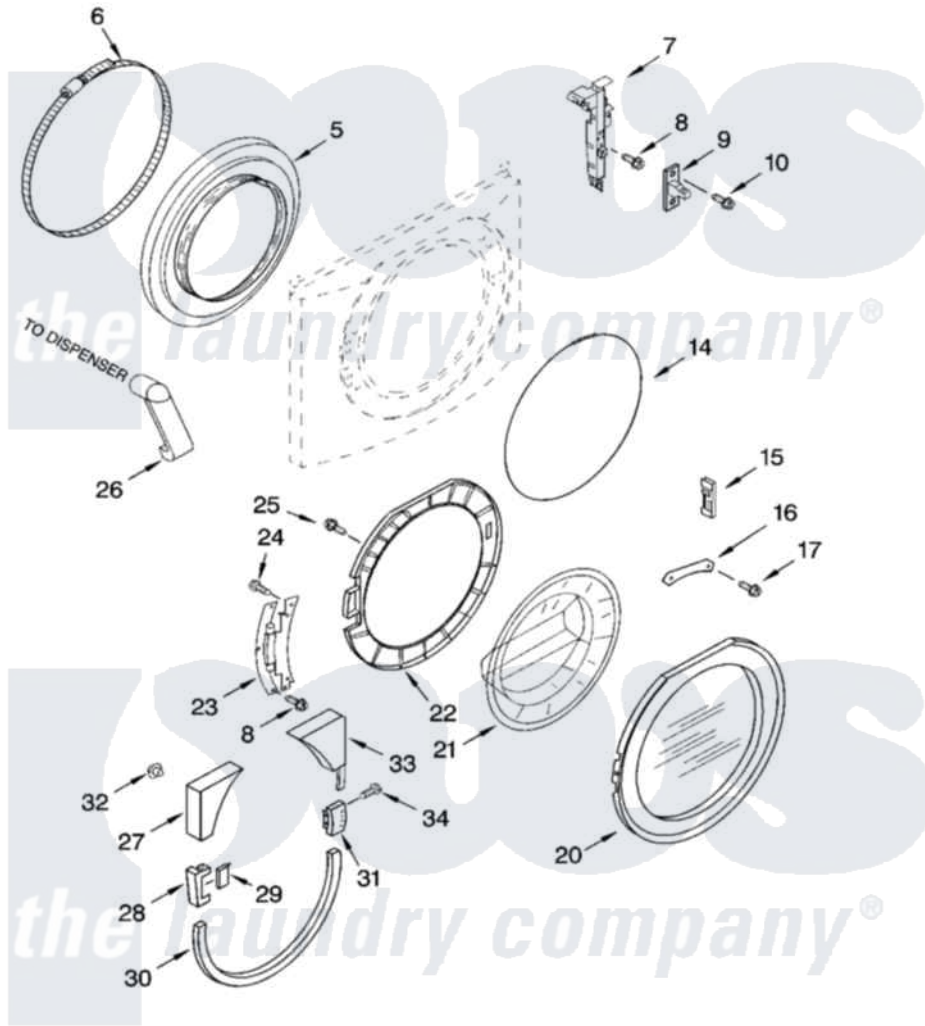

8180678

3

Whirlpool [Residential Whirlpool GHW9460PW1 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
5	8182119			Bellow
6	8182210			Clamp, Bellow
7	8182634			Lock, Door
8	8181760	8540725		Screw
9	8181651			Hook, Door
10	8181758	8182214		Screw
14	8182211			Clamp, Bellow To Front Panel
15	8181659	W10128586		Clamp, Glass Support
16	8181650			Clamp, Glass
17	8181785			Screw
20	8182044	8182992		Door Frame Assembly
"	8182086	8182990		Frame
21	8181655			Glass, Door
22	8182628	W10163308		Frame
23	8181843			Hinge, Door
24	8181660			Screw

25	8181661		Screw, Actuator
26	8181718		Tube, Dispenser To Bellow
27	8181842		Trim, Upper Left
"	8182078	Not Available	Trim, Upper Left (Pewter)
28	8181841		Cover, Hinge
"	8182082	Not Available	Cover, Hinge (Outer) (Pewter)
29	8181844		Cover, Hinge
"	8182074		Cover, Hinge
30	8181840		Trim, Lower
"	8182072		Trim, Lower
31	8181846		Handle, Door
"	8182080		Handle, Door
32	8182779		Clip, Trim
33	8181839		Trim, Upper Right
"	8182076		Trim, Upper Right
34	8181759	3400805	Screw, 8-18 X 3/64

