


# Whirlpool GHW9460PW1 03 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Models: GHW9460PW1, GHW9460PL1  
(White/Platinum) (Pewter)

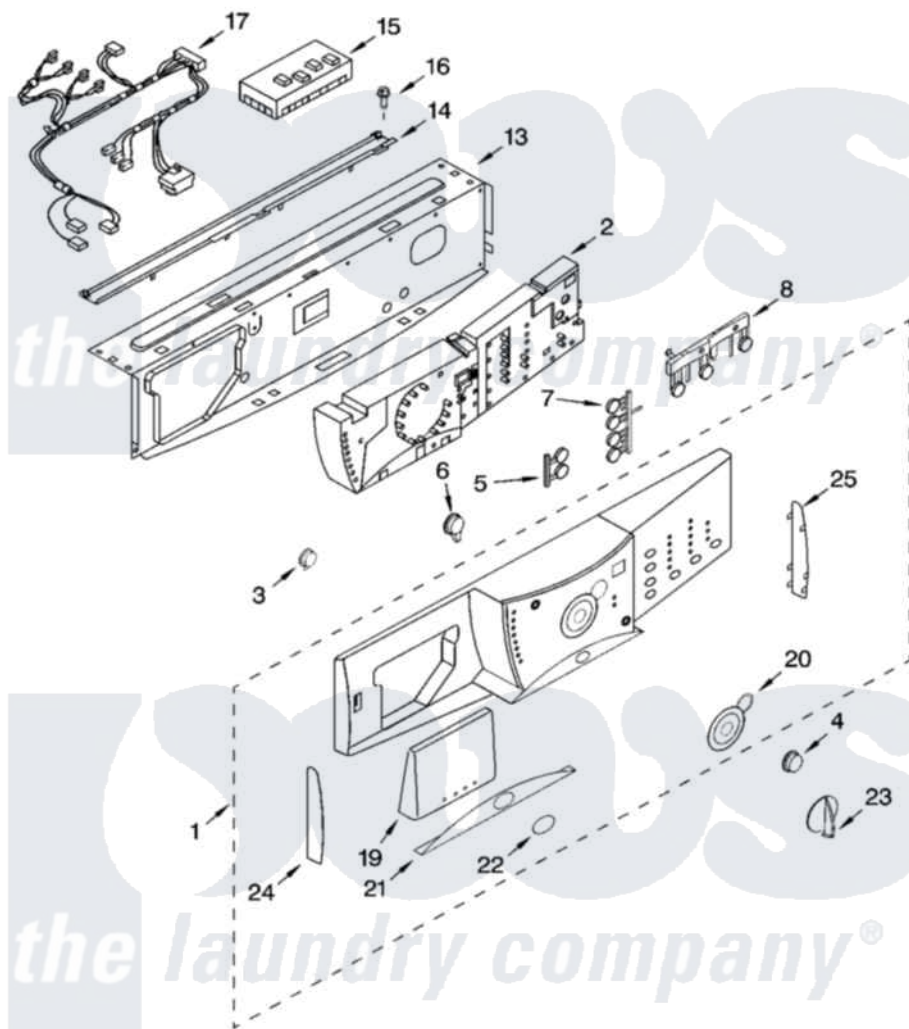

8180678

5

Whirlpool Residential Whirlpool GHW9460PW1 Washer Parts Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8182712</a>			Panel, Control
"	<a href="#">8182713</a>			Panel, Control
2	<a href="#">8182717</a>			User Interface
3	<a href="#">8181860</a>			Button, Power
4	<a href="#">8181861</a>			Button, Start
5	<a href="#">8181863</a>			Button Set, Soil Level
"	<a href="#">8182052</a>			Button Set, Soil Level
6	<a href="#">8182275</a>			Button, Pause/Cancel
7	<a href="#">8181864</a>			Button Set, Options
"	<a href="#">8182068</a>			Button Set, Options
8	<a href="#">8181865</a>			Button Set, Spin/Temperature
"	<a href="#">8182054</a>			Button Set, Spin/Temperature
13	8182224		Not Available	Brace, Front Top
14	8181640	<a href="#">8182800</a>		Channel, Water
15	<a href="#">8182694</a>			Microcomputer, Machine Control
16	8181756	<a href="#">488729</a>		Screw

17	<a href="#">8182212</a>		Harness, Wiring
19	<a href="#">8181854</a>		Handle, Drawer
"	<a href="#">8182070</a>		Handle, Drawer
20	<a href="#">8181855</a>		Bezel, Knob
21	<a href="#">8181857</a>		Overlay, Door
22	8181858	<a href="#">8303811</a>	Badge, Assembly
23	<a href="#">8181859</a>		Knob, Control
"	<a href="#">8182050</a>		Knob, Control
24	<a href="#">8181852</a>		Endcap, Left
"	<a href="#">8182064</a>		Endcap, Left
25	<a href="#">8181853</a>		Endcap, Right
"	<a href="#">8182065</a>		Endcap, Right

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>