


Whirlpool GHW9460PW4 03 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: GHW9460PW4, GHW9460PL4
(White/Platinum) (Pewter)

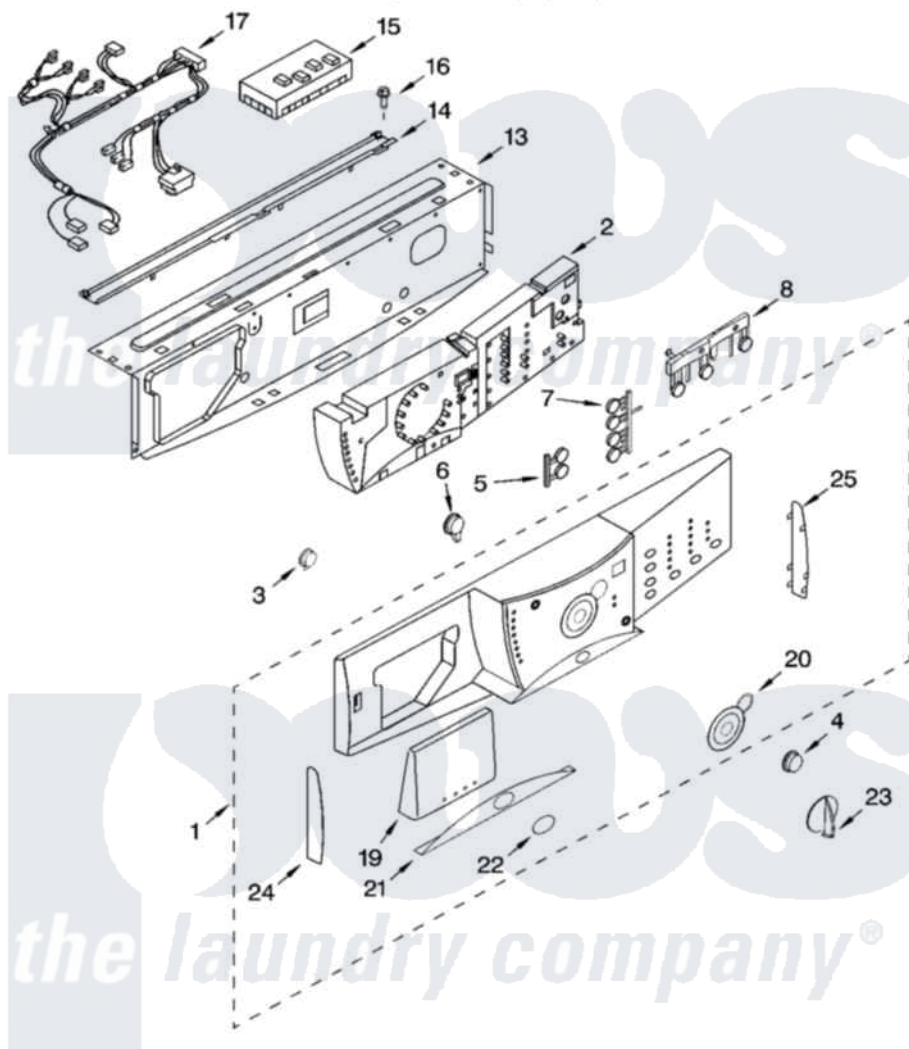

W10112164

5

Whirlpool Residential Whirlpool GHW9460PW4 Washer Parts Parts Diagram 03 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8182712			Panel, Control
"	8182713			Panel, Control
2	8182717			User Interface
3	8181860			Button, Power
4	8181861			Button, Start
5	8181863			Button Set, Soil Level
"	8182052			Button Set, Soil Level
6	8182275			Button, Pause/Cancel
7	8181864			Button Set, Options
"	8182068			Button Set, Options
8	8181865			Button Set, Spin/Temperature
"	8182054			Button Set, Spin/Temperature
13	8182224		Not Available	Brace, Front Top
14	8181640	8182800		Channel, Water
15	8182694			Microcomputer, Machine Control
16	8181756	488729		Screw

17	8182212		Harness, Wiring
19	8181854		Handle, Drawer
"	8182070		Handle, Drawer
20	8181855		Bezel, Knob
21	8181857		Overlay, Door
22	8181858	8303811	Badge, Assembly
23	8181859		Knob, Control
"	8182050		Knob, Control
24	8181852		Endcap, Left
"	8182064		Endcap, Left
25	8181853		Endcap, Right
"	8182065		Endcap, Right

the laundry company[®]

the laundry company[®]

the laundry company[®]