


Whirlpool GSQ9631LW1 03 - AGITATOR, BASKET AND TUB PARTS

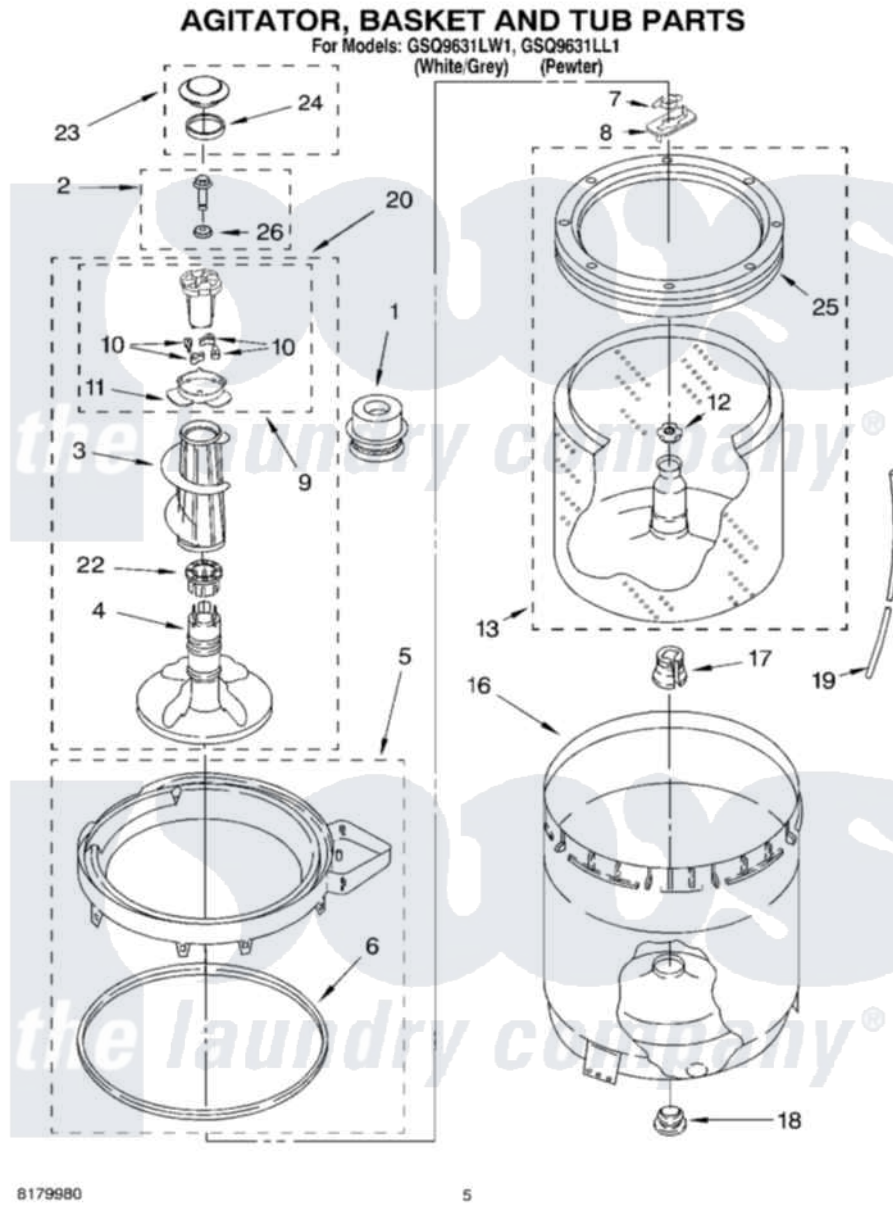

8179980

5

Whirlpool Residential Whirlpool GSQ9631LW1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	63594			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	389141	3360824		Auger, Agitator
4	389386			Agitator
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	3354845			Clip, Agitator
8	3355921	8543666		Washer, Agitator
9	3363662	285748		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3363661			Bearing, Driven Cam
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
16	63849			Strain Relief, Power Cord
17	389140			Tub Block, Basket Drive
18	383727			Gasket, Centerpod

19	3347780	353244	Hose, Pressure Switch
20	3347674	285727	Agitator
22	3350389	285587	Washer
23	63973	3362061	Cap
24	358912		Seal, Agitator Cap
25	8519788	387240	Ring, Balance
26	3949550		Washer

