


Whirlpool GST9630PG0 03 - AGITATOR, BASKET AND TUB PARTS

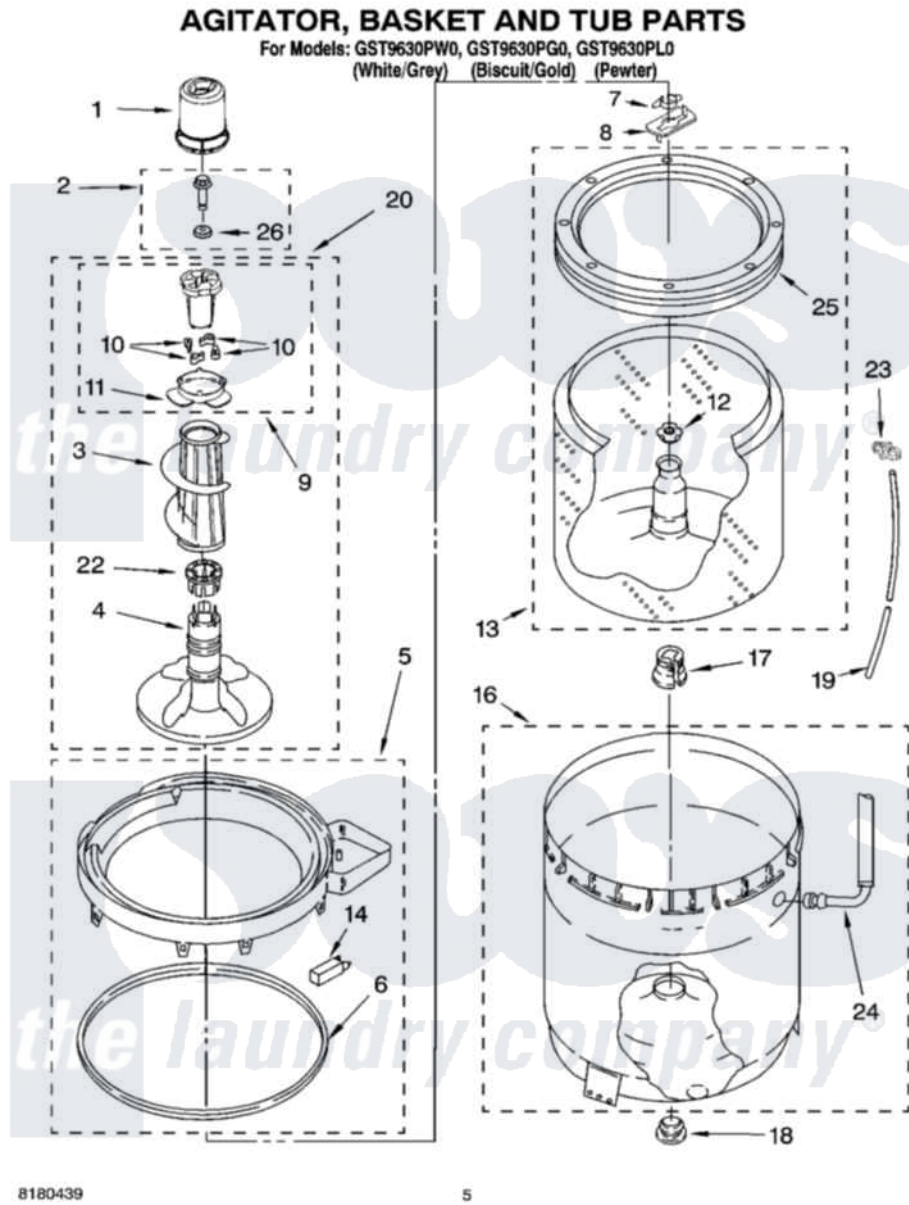

8180439

5

Whirlpool [Residential Whirlpool GST9630PG0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8559760			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	389141	3360824		Auger, Agitator
4	389386			Agitator
5	3954507	W10213410		Ring-Tub
6	3359585	3976308		Gasket, Tub Ring
7	3354845			Clip, Agitator
8	3355921	8543666		Washer, Agitator
9	3363662	285748		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3363661			Bearing, Driven Cam
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
14	8318246	W10213410		Ring-Tub
16	8283125			Tub
17	389140			Tub Block, Basket Drive

18	383727		Gasket, Centerpodt
19	3347780	353244	Hose, Pressure Switch
20	3347674	285727	Agitator
22	3350389	285587	Washer
23	2219077		Clip, Pressure Switch Hose
24	3948705		Hose, Bleach
25	8519788	387240	Ring, Balance
26	3949550		Washer

