


# Whirlpool GST9630PG3 03 - AGITATOR, BASKET AND TUB PARTS

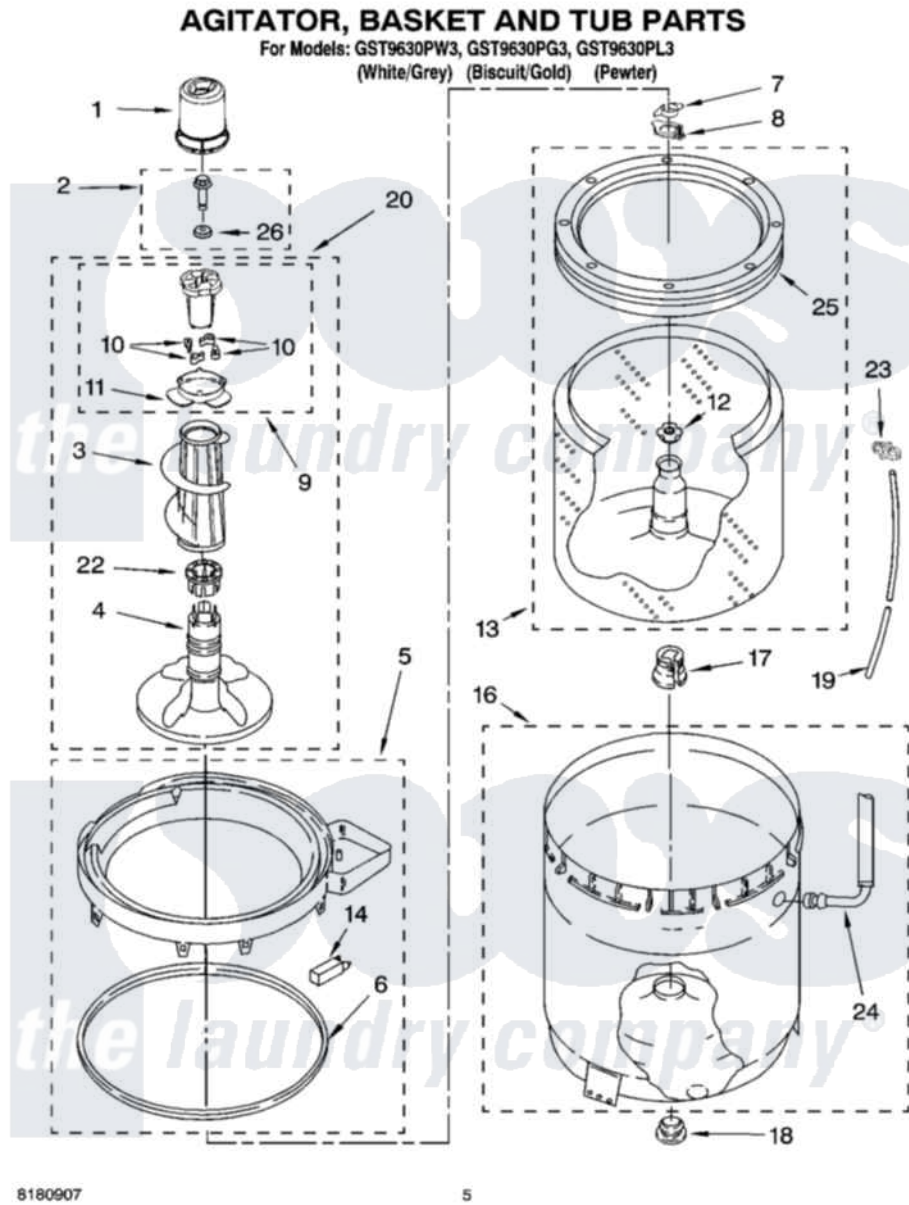

8180907

5

Whirlpool Residential Whirlpool GST9630PG3 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8559760</a>			Dispenser, Fabric Softener
2	<a href="#">358237</a>			Screw And Washer
3	389141	<a href="#">3360824</a>		Auger, Agitator
4	<a href="#">389386</a>			Agitator
5	3954507	<a href="#">W10213410</a>		Ring-Tub
6	3359585	<a href="#">3976308</a>		Gasket, Tub Ring
7	<a href="#">3354845</a>			Clip, Agitator
8	<a href="#">8543666</a>			Washer, Agitator
9	3363662	<a href="#">285748</a>		Cam-Agitator
10	3366877	<a href="#">80040</a>		Dog-Agitator
11	<a href="#">3363661</a>			Bearing, Driven Cam
12	<a href="#">21366</a>			Nut, Spanner
13	8526016	<a href="#">W10389328</a>		Clothes Container, Assembly
14	8318246	<a href="#">W10213410</a>		Ring-Tub
16	<a href="#">8283125</a>			Tub
17	<a href="#">389140</a>			Tub Block, Basket Drive

18	<a href="#">383727</a>		Gasket, Centerpodt
19	3347780	<a href="#">353244</a>	Hose, Pressure Switch
20	3347674	<a href="#">285727</a>	Agitator
22	3350389	<a href="#">285587</a>	Washer
23	<a href="#">2219077</a>		Clip, Pressure Switch Hose
24	<a href="#">3948705</a>		Hose, Bleach
25	8519788	<a href="#">387240</a>	Ring, Balance
26	<a href="#">3949550</a>		Washer

