


Whirlpool GST9679PG1 03 - AGITATOR, BASKET AND TUB PARTS

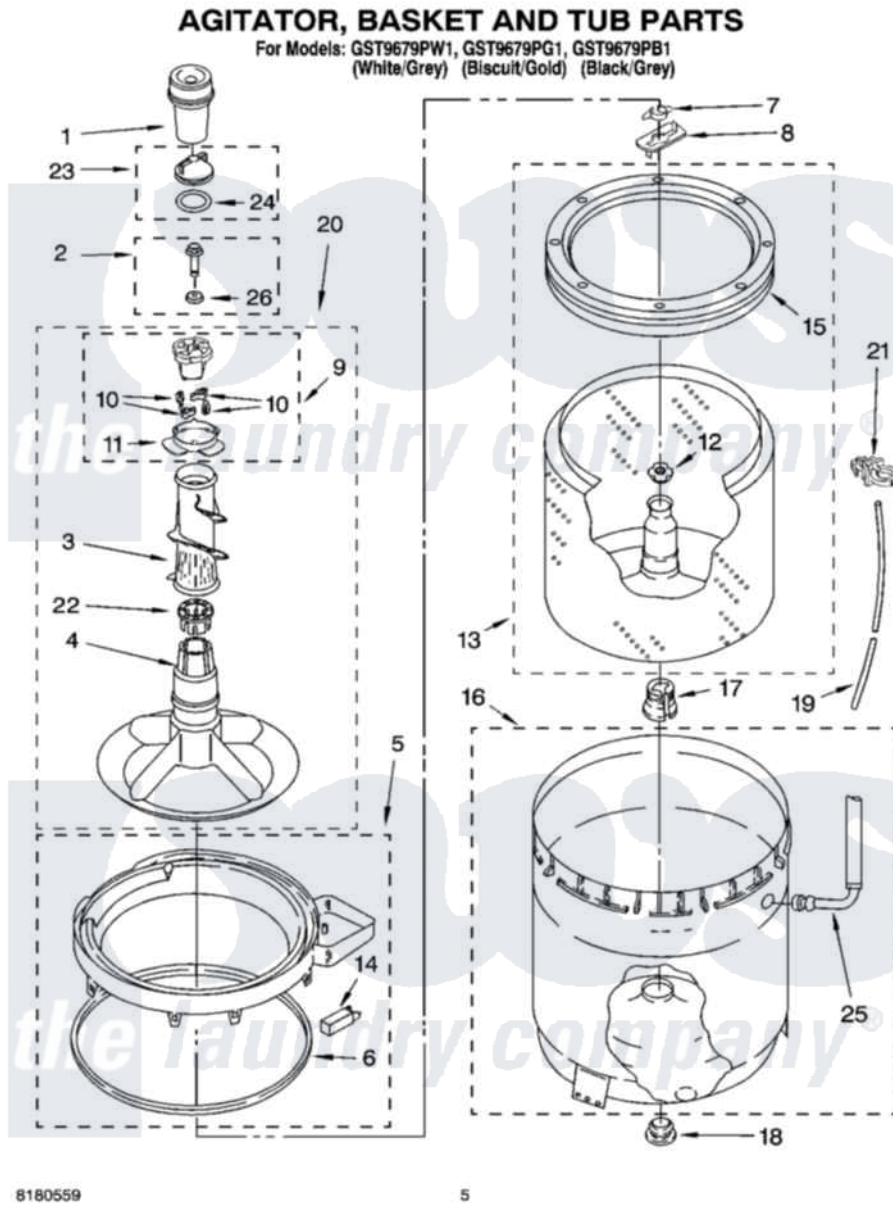

8180559

5

Whirlpool Residential Whirlpool GST9679PG1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	63580			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	3363003			Mover, Clothes
4	3951632			Agitator
5	3954507	W10213410		Ring-Tub
6	3359585	3976308		Gasket, Tub Ring
7	3354845			Clip, Agitator
8	3355921	8543666		Washer, Agitator
9	3951682	285809		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3952374			Bearing, Driven Cam
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
14	8318246	W10213410		Ring-Tub
15	8519788	387240		Ring, Balance
16	8283125			Tub

17	389140		Tub Block, Basket Drive
18	383727		Gasket, Centerpodt
19	3347780	353244	Hose, Pressure Switch
20	3951744		Agitator Assembly
21	2219077		Clip, Pressure Switch Hose
22	3951608		Spacer, Thrust
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
25	3948705		Hose, Bleach
26	3949550		Washer

