


# Whirlpool GST9679PW3 03 - AGITATOR, BASKET AND TUB PARTS

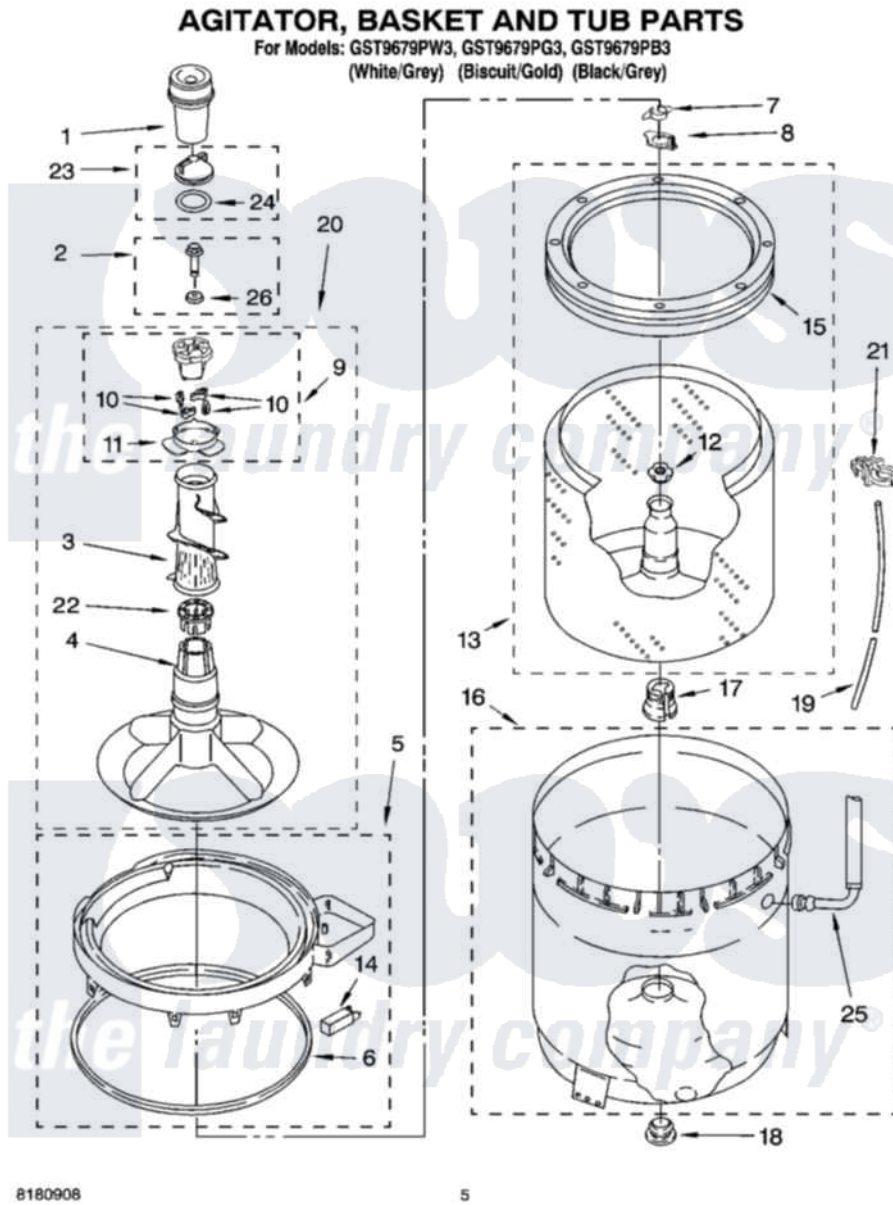

8180908

5

Whirlpool Residential Whirlpool GST9679PW3 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">63580</a>			Dispenser, Fabric Softener
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3363003</a>			Mover, Clothes
4	<a href="#">3951632</a>			Agitator
5	3954507	<a href="#">W10213410</a>		Ring-Tub
6	3359585	<a href="#">3976308</a>		Gasket, Tub Ring
7	<a href="#">3354845</a>			Clip, Agitator
8	<a href="#">8543666</a>			Washer, Agitator
9	3951682	<a href="#">285809</a>		Cam-Agitator
10	3366877	<a href="#">80040</a>		Dog-Agitator
11	<a href="#">3952374</a>			Bearing, Driven Cam
12	<a href="#">21366</a>			Nut, Spanner
13	8526016	<a href="#">W10389328</a>		Clothes Container, Assembly
14	8318246	<a href="#">W10213410</a>		Ring-Tub
15	8519788	<a href="#">387240</a>		Ring, Balance
16	<a href="#">8283125</a>			Tub

17	<a href="#">389140</a>		Tub Block, Basket Drive
18	<a href="#">383727</a>		Gasket, Centerpodt
19	3347780	<a href="#">353244</a>	Hose, Pressure Switch
20	<a href="#">3951744</a>		Agitator Assembly
21	<a href="#">2219077</a>		Clip, Pressure Switch Hose
22	<a href="#">3951608</a>		Spacer, Thrust
23	3354733	<a href="#">W10074580</a>	Cap, Barrier
24	3348855	<a href="#">W10072840</a>	Fabric Softener
25	<a href="#">3948705</a>		Hose, Bleach
26	<a href="#">3949550</a>		Washer

