


# Whirlpool GSX9750PG1 06 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Models: GSX9750PW1, GSX9750PG1  
(White/Grey) (Biscuit/Gold)

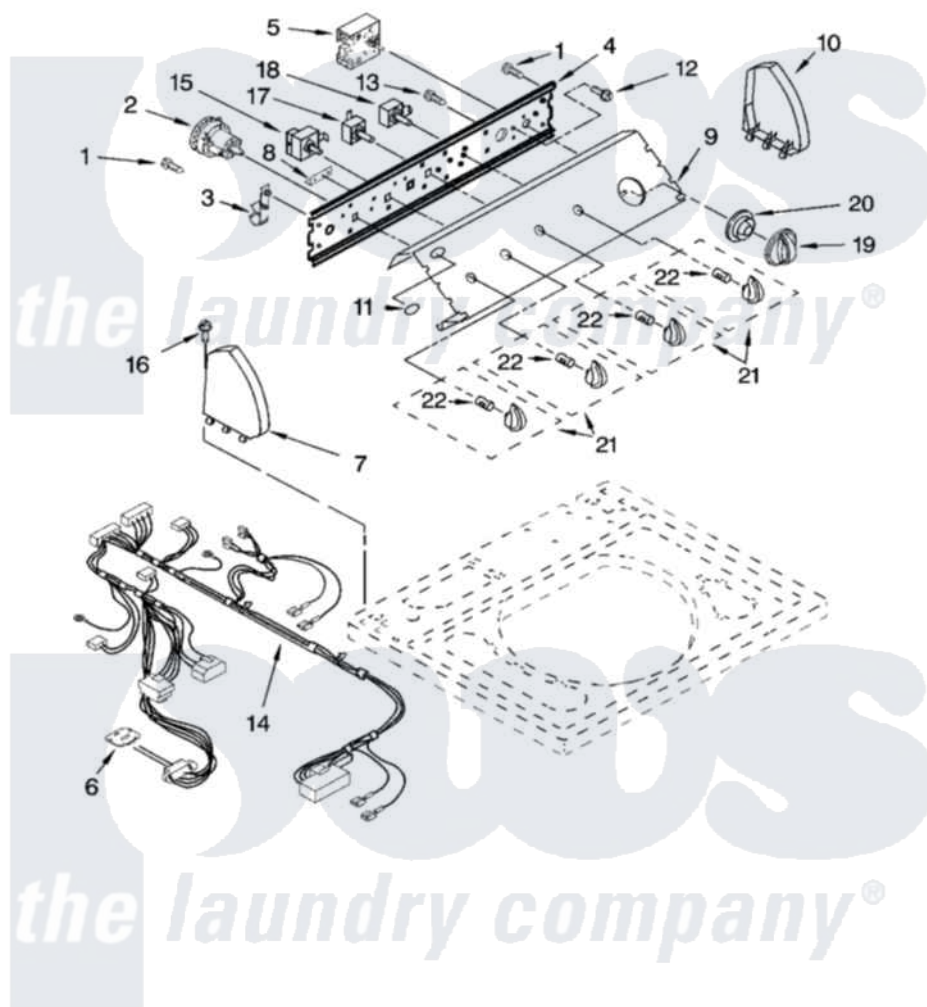

8161017

9

Whirlpool [Residential Whirlpool GSX9750PG1 Washer Parts](#) Parts Diagram 06 - CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">90767</a>			Screw, 8A X 3/8 HeX Washer Head Tapping
2	3366845	<a href="#">W10339326</a>		Switch-WL
3	<a href="#">8317975</a>			Restraint, Harness
4	<a href="#">8544893</a>			Bracket, Control
5	<a href="#">8545379</a>			Timer, Control
6	8541388	<a href="#">3407155</a>		Control-Atc
7	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
8	<a href="#">8316039</a>			Shield, Atc
9	<a href="#">3956616</a>			Panel, Console
"	<a href="#">3956617</a>			Panel, Console
10	8271359	<a href="#">279962</a>		Endcap
"	8271362	<a href="#">279965</a>		Endcap
11	<a href="#">8533990</a>			Medallion
12	<a href="#">3400818</a>			Screw, Timer Mounting
13	<a href="#">3400073</a>			Screw, Ground

14	<a href="#">3957017</a>	Harness, Wiring
15	<a href="#">3956646</a>	Switch, Water Temperature
16	<a href="#">388326</a>	Screw, 8-18 X 1.25
17	<a href="#">3949188</a>	Switch, Rotary
18	<a href="#">3954573</a>	Switch, Rotary
19	<a href="#">8544945</a>	Knob, Timer
"	<a href="#">8544946</a>	Knob, Timer
20	<a href="#">8544947</a>	Dial, Timer
"	<a href="#">8544948</a>	Dial, Timer
21	<a href="#">8544937</a>	Knob, Control
"	<a href="#">8544938</a>	Knob, Control
22	<a href="#">8536939</a>	Clip, Knob

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>