


# Whirlpool GSX9750PG1 07 - WIRING HARNESS PARTS

## WIRING HARNESS PARTS

For Models: GSX9750PW1, GSX9750PG1  
(White/Grey) (Biscuit/Gold)

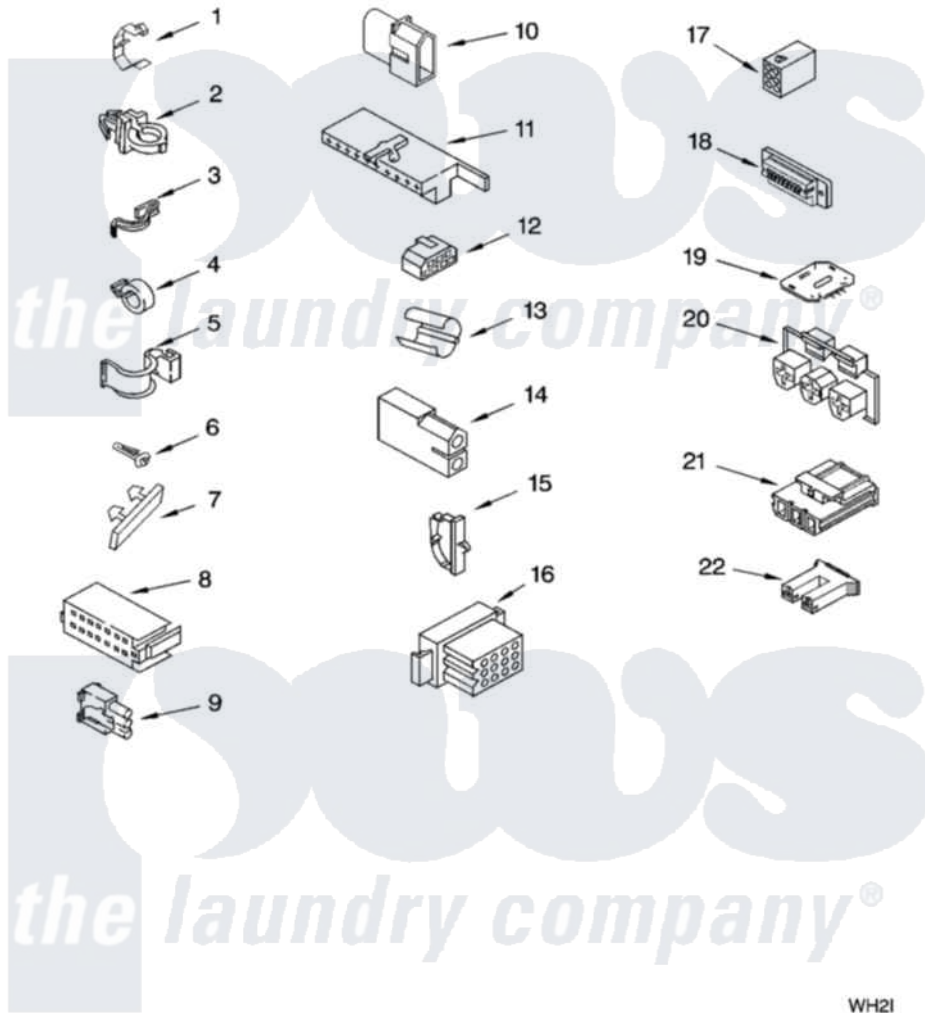

WH21

8161017

11

Whirlpool [Residential Whirlpool GSX9750PG1 Washer Parts](#) Parts Diagram 07 - WIRING HARNESS PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3349557</a>			Retainer, Harness
2	388498		Not Available	Clip, Harness
3	3347812	<a href="#">8528351</a>		Clip
4	3352501	<a href="#">8559320</a>		Restraint, Hose
5	<a href="#">90016</a>			Clip, Pressure Switch Hose
6	3390496	<a href="#">8281256</a>		Clip, Harness
7	<a href="#">389379</a>			Retainer, Side To Feature Panel
8	<a href="#">3948614</a>			Disconnect Block
"	<a href="#">352089</a>			Timer, Block Disconnect
9	<a href="#">62889</a>			Receptacle, Terminal
10	<a href="#">353424</a>			Plug, Terminal
11	<a href="#">62505</a>			Block, Disconnect
12	<a href="#">3347243</a>			Block, Disconnect
13	<a href="#">63523</a>			Harness, Protector
14	<a href="#">717252</a>			Receptacle, Terminal
15	<a href="#">3352944</a>			Clip, Harness

16	3390423	Not Available	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)
17	3347730	Not Available	Receptacle, (6-Way) (Use Term. 94613)
18	3349494		Connector, Etc
19	3407125	<a href="#">3955728</a>	Control, Etc
20	3948617	<a href="#">2172937</a>	Connector
21	<a href="#">3360056</a>		Connector
22	<a href="#">3354925</a>		Block, Connector
"	<a href="#">3354926</a>		Block, Connector

