


Whirlpool GSX9750PW1 01 - TOP AND CABINET PARTS

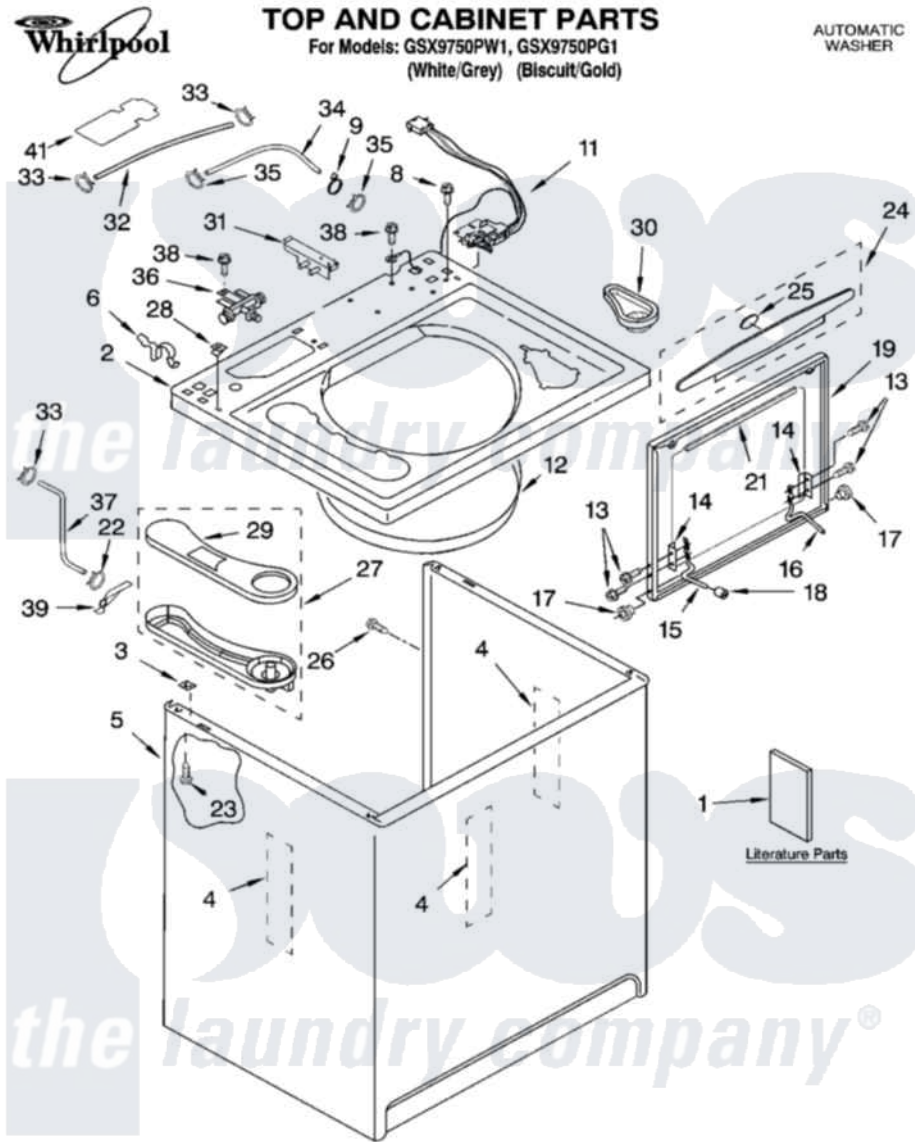

11-05 Printed in U.S.A. (drd)

1

Part No. 8181017

[Whirlpool Residential Whirlpool GSX9750PW1 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3956025		Not Available	Installation Instructions
"	8578240		Not Available	Use & Care Guide
"	8558794		Not Available	Wiring Diagram
"	3957473		Not Available	Energy Guide
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	4313896			Do-It-Yourself Repair Manuals
2	8274365			Top
"	8274367			Top
3	62750			Spacer, Cabinet To Top (4)
4	3976348			Absorber, Sound
5	63424			Cabinet
"	3954357			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel
8	3400611			Screw And Washer, Lid Switch

9	3352501	8559320	Restraint, Hose
11	8054980		Switch, Lid
12	8271956		Splash Shield Assembly
13	355274	W10119828	Screw, Lid Hinge Mounting
14	21097		Pad, Lid Hinge
15	8055257		Hinge, Lid
16	8055256		Hinge, Lid
17	8319539		Bearing, Lid Hinge
18	19119		Bumper, Lid Hinge
19	3957095	3957555	Lid
"	3957096	285972	Lid
21	8054939		Seal, Lid
22	371505	596669	Clamp, Manifold
23	3390631		Screw, 10-16 X 3/8
24	3956012		Handle, Lid
"	3956011		Handle, Lid
25	3956010		Insert, Handle
26	3357011	308685	Side Trim)
27	8055237		Dispenser, Bleach And Fabric Softener
28	357213		Nut, Push-In
29	8571813		Cover, Dispenser
30	8573834	Not Available	Dispenser, Detergent
31	8055243		Connector, 2-Port
32	8055266		Hose, Fabric Softener
33	371506	596669	Clamp, Manifold
34	8055267	8317938	Hose
35	301958	596669	Clamp, Manifold
36	8272010		Connector, Venturi
37	8283537		Hose, Bleach
38	3351614		Screw, Gearcase Cover Mounting
39	8271943		Restraint
41	8541605		Cover, Access

