


Whirlpool GSX9750PW1 06 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: GSX9750PW1, GSX9750PG1
(White/Grey) (Biscuit/Gold)

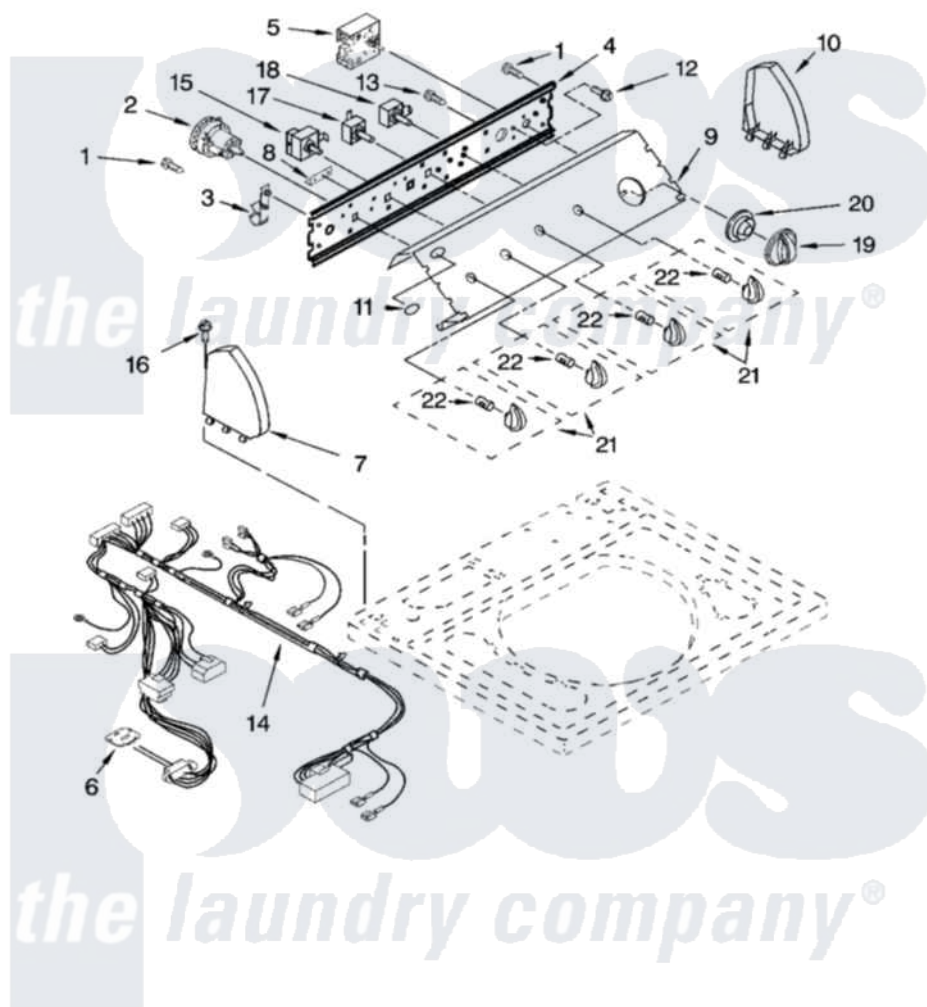

8161017

9

Whirlpool [Residential Whirlpool GSX9750PW1 Washer Parts](#) Parts Diagram 06 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
2	3366845	W10339326		Switch-WL
3	8317975			Restraint, Harness
4	8544893			Bracket, Control
5	8545379			Timer, Control
6	8541388	3407155		Control-Atc
7	8271365	279962		Endcap
"	8271368	279965		Endcap
8	8316039			Shield, Atc
9	3956616			Panel, Console
"	3956617			Panel, Console
10	8271359	279962		Endcap
"	8271362	279965		Endcap
11	8533990			Medallion
12	3400818			Screw, Timer Mounting
13	3400073			Screw, Ground

14	3957017	Harness, Wiring
15	3956646	Switch, Water Temperature
16	388326	Screw, 8-18 X 1.25
17	3949188	Switch, Rotary
18	3954573	Switch, Rotary
19	8544945	Knob, Timer
"	8544946	Knob, Timer
20	8544947	Dial, Timer
"	8544948	Dial, Timer
21	8544937	Knob, Control
"	8544938	Knob, Control
22	8536939	Clip, Knob

the laundry company[®]

the laundry company[®]

the laundry company[®]