


Whirlpool IEX3000RQ0 01 - TOP AND CONSOLE PARTS

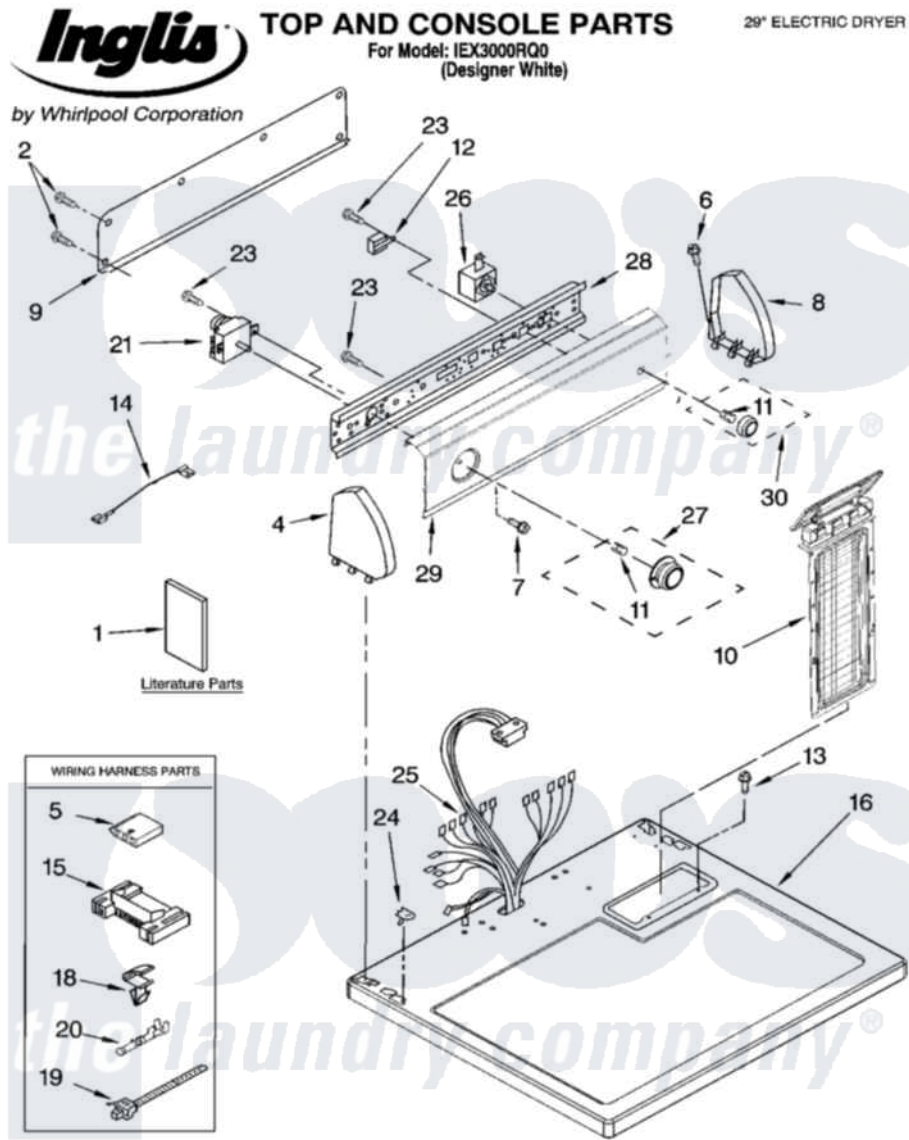

3-05 Litho in U.S.A. (LT)

1

Part No. 8180608

Whirlpool Residential Whirlpool IEX3000RQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8574879		Not Available	Guide, Use & Care
"	8574878		Not Available	Sheet, Cycle Feature
"	8535914		Not Available	Instructions, Installation
"	8528187			Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274434	279960		Endcap
9	8274261			Do-It-Yourself Repair Manuals
10	8558467			Screen, Lint

11	8536939		Clip, Knob
12	694419		Mini-Buzzer
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3393814		Not Available
"	3393815	3393812	Wire, Jumper
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	8299780		Timer, 60 Hz
23	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
24	357213		Nut, Push-In
25	8299865	8576499	Harness, Wiring
26	3977456		Switch, Push-To-Start
27	3957383		Timer Knob Assembly
28	8271418		Bracket, Control
29	8573822		Panel, Control
30	8557462		Knob, Push-To-Start

